




Ref No	Part No	Description
1	11171-45401	Cover, Cylinder Head
2	11173-49202	Gasket
3	01517-06408	Bolt
4	01517-06358	Bolt
5	02152-06408	Screw
6	09168-06009	Washer
7	09206-08001	Pin
8	11174-49201	Cap, Cylinder Head Cover
8	11174-49210	Cap, Cylinder Head Cover
9	02132-05127	Screw
10	11176-45400	Cover, Breather
11	11177-45400	Gasket
12	01517-06208	Bolt
13	26431-49200	Gear, Tacho. Drive (nt:10)
14	26441-45000	Sleeve
15	26451-45000	Seal Band
16	09289-05002	Oil Seal
17	26449-33000	Plate
18	09128-05101	Screw

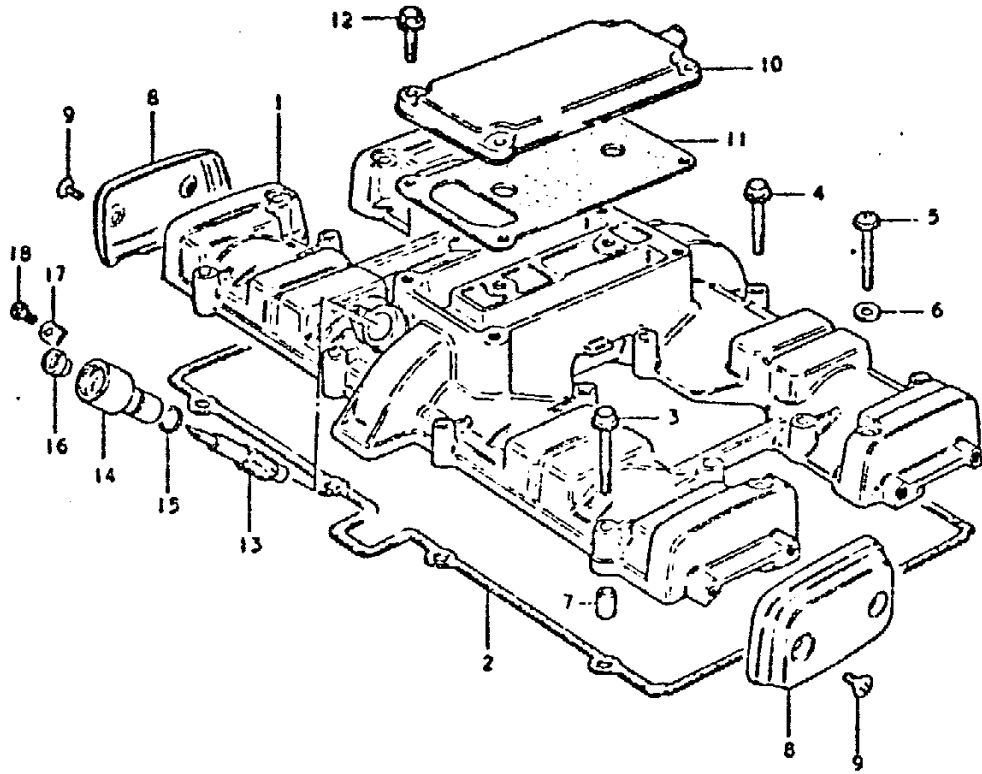


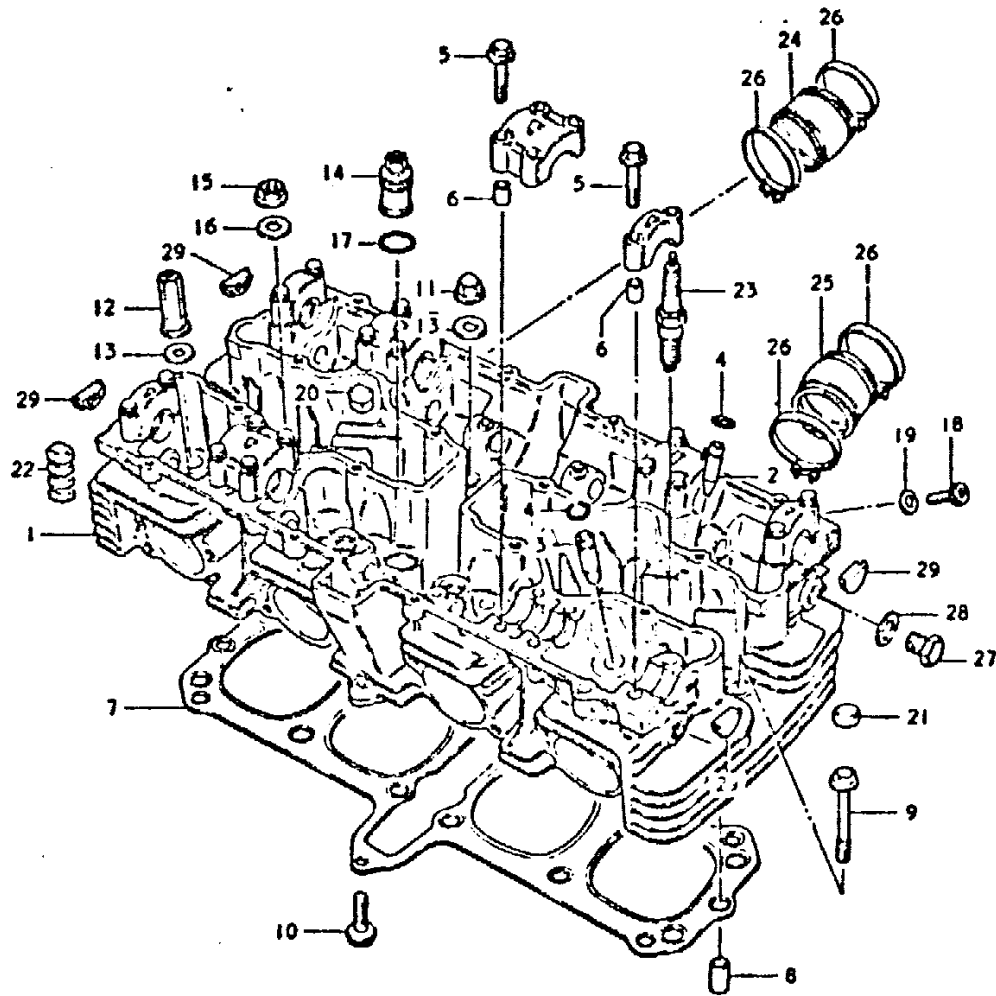

Ref No	Part No	Description
1	11100-45840	Cylinder Head Set
1	11100-45841	Cylinder Head Set
2	11115-49290	. Guide, Intake Valve
3	11115-49290	. Guide, Exhaust Valve
4	09381-10004	. Ring, Valve Guide
5	09103-06026	. Bolt
6	09206-08001	. Pin
7	11141-45401	Gasket
8	04211-11189	Pin
9	01517-06558	Bolt
10	01517-06308	Bolt
11	09159-10026	Nut
12	09159-10029	Nut
13	09168-10019	Gasket
14	11145-49200	Seal Nut
15	08316-16108	Nut
16	09160-10039	Washer
17	09280-17002	O Ring
18	09106-05006	Bolt, Intake Port
19	09168-05010	Gasket
20	11152-45000	Rubber Pad
21	11151-45000	Rubber Pad
22	11251-48000	Rubber Pad (n4)
24	13111-45400	Pipe, Intake Rh
25	13121-45400	Pipe, Intake Lh
26	09402-50306	Clamp
27	09247-14012	Plug, Cylinder Head
28	09168-14004	Gasket
29	09241-23002	Plug, Cylinder Head


Ref No	Part No	Description
1	11210-45400	Cylinder
2	09108-10032	Stud Bolt
3	09108-10034	Stud Bolt
4	09108-10033	Stud Bolt
5	11241-45400	Gasket
6	09280-70001	O Ring
7	09206-13006	Pin

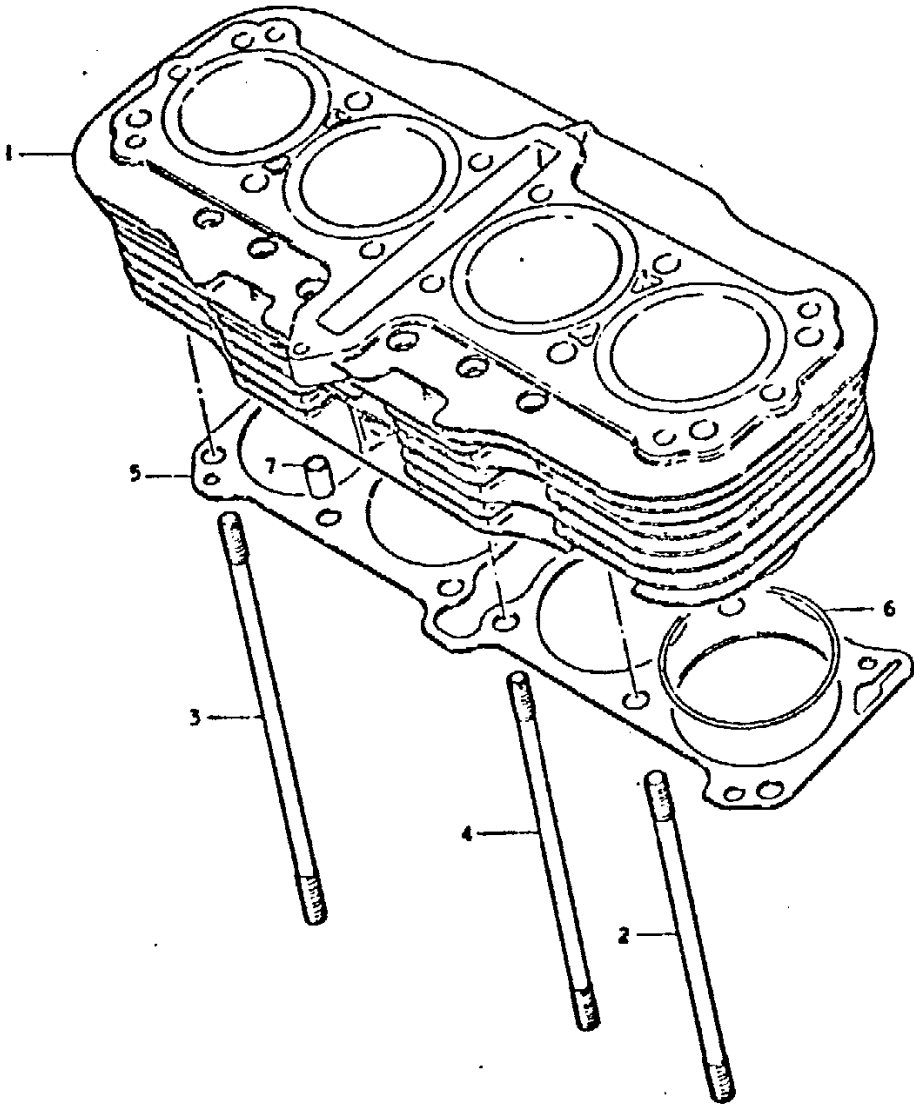


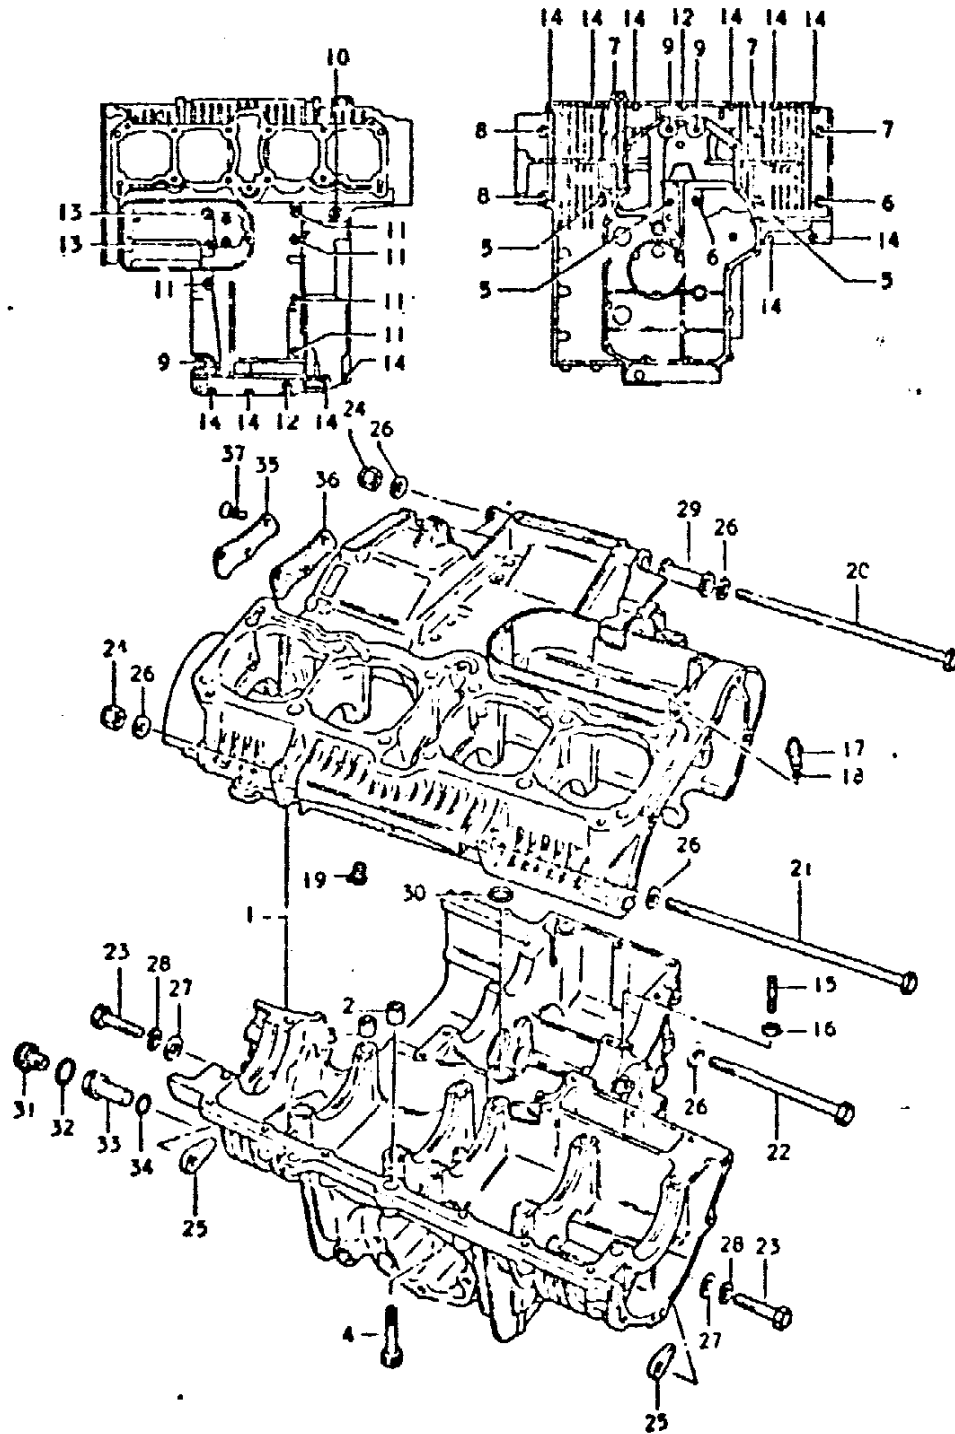

Ref No	Part No	Description
1	11300-45830	Crankcase Set
2	09206-13004	. Pin
3	09206-11005	. Pin
4	09106-08015	. Bolt (8*60)
5	09103-08040	. Bolt (8*140)
6	09103-08024	. Bolt (8*110)
7	01517-08958	. Bolt (8*95)
8	01517-08708	. Bolt (8*70)
9	01517-08658	. Bolt (8*65)
10	01517-08958	. Bolt (6*95)
11	01517-06808	. Bolt (6*80)
12	01517-06308	. Bolt (6*60)
13	01517-06458	. Bolt (6*45)
14	01517-06408	. Bolt (6*40)
15	01421-06358	. Stud Bolt
16	08316-16068	. Nut
17	09493-24008	. Jet, Oil Gallery Cylinder
18	09280-03001	. O Ring
19	09493-24005	. Jet, Oil Gallery Mission
20	09100-10140	Bolt (10*230)
21	09101-10010	Bolt (10*250)
22	09100-10078	Bolt (10*165)
23	01107-10608	Bolt (10*60)
24	09159-10011	Nut
25	09159-10020	Nut
26	08322-11108	Washer
27	09160-10005	Washer
28	08321-21108	Lock Washer
29	11010-49000	Spacer
30	09280-13001	O Ring, Oil Gallery
31	09247-18001	Plug, Oil Gallery
32	09280-18004	O Ring
33	11329-45400	Pin
34	09280-10005	O Ring
35	11394-45000	Cap, Oil Gallery
36	11497-45000	Gasket
37	02122-06168	Screw

Ref No	Part No	Description
1	11340-45400	Cover, Clutch
2	11482-45400	Gasket
3	04211-09129	Pin
4	02112-06408	Screw (6*40)
5	02112-06358	Screw (6*35)
6	02112-06308	Screw (6*30)
7	02112-06258	Screw (6*25)
8	02112-06208	Screw (6*20)
9	09259-30001	Plug, Engine Oil Filler
10	09280-32005	O Ring
11	11381-49200	Cover, Contact Breaker
12	68235-49200	Emblem
13	11491-49200	Gasket
14	02112-05308	Screw (5*30)
15	11351-45400	Cover, Generator
16	68233-49200	Emblem
17	11483-49200	Gasket
18	09206-13001	Pin
19	02112-06458	Screw (6*45)
20	02112-06408	Screw (6*40)
21	02112-06358	Screw (6*35)
22	02112-06308	Screw (6*30)
23	11360-49200	Cover, Engine Sprocket
24	04211-09129	Pin
25	02112-06958	Screw (6*95)
26	02112-06858	Screw (6*85)
27	02112-06708	Screw (6*70)
28	02112-06557	Screw (6*55)
29	02112-06308	Screw (6*30)
30	11382-49002	Cover, Starter Motor
31	01104-05108	Bolt (5*10)
32	08322-21058	Washer

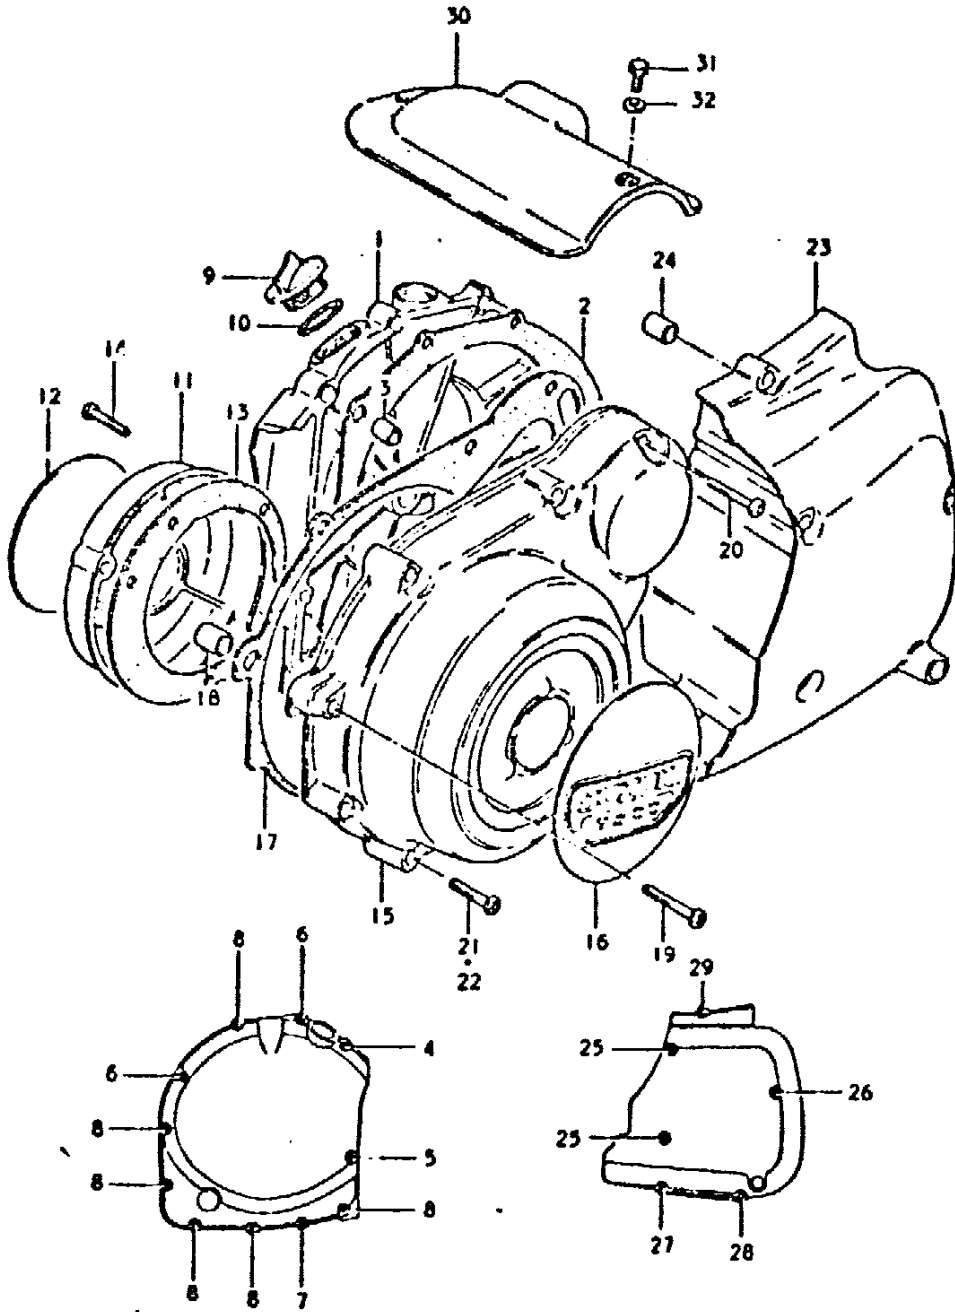


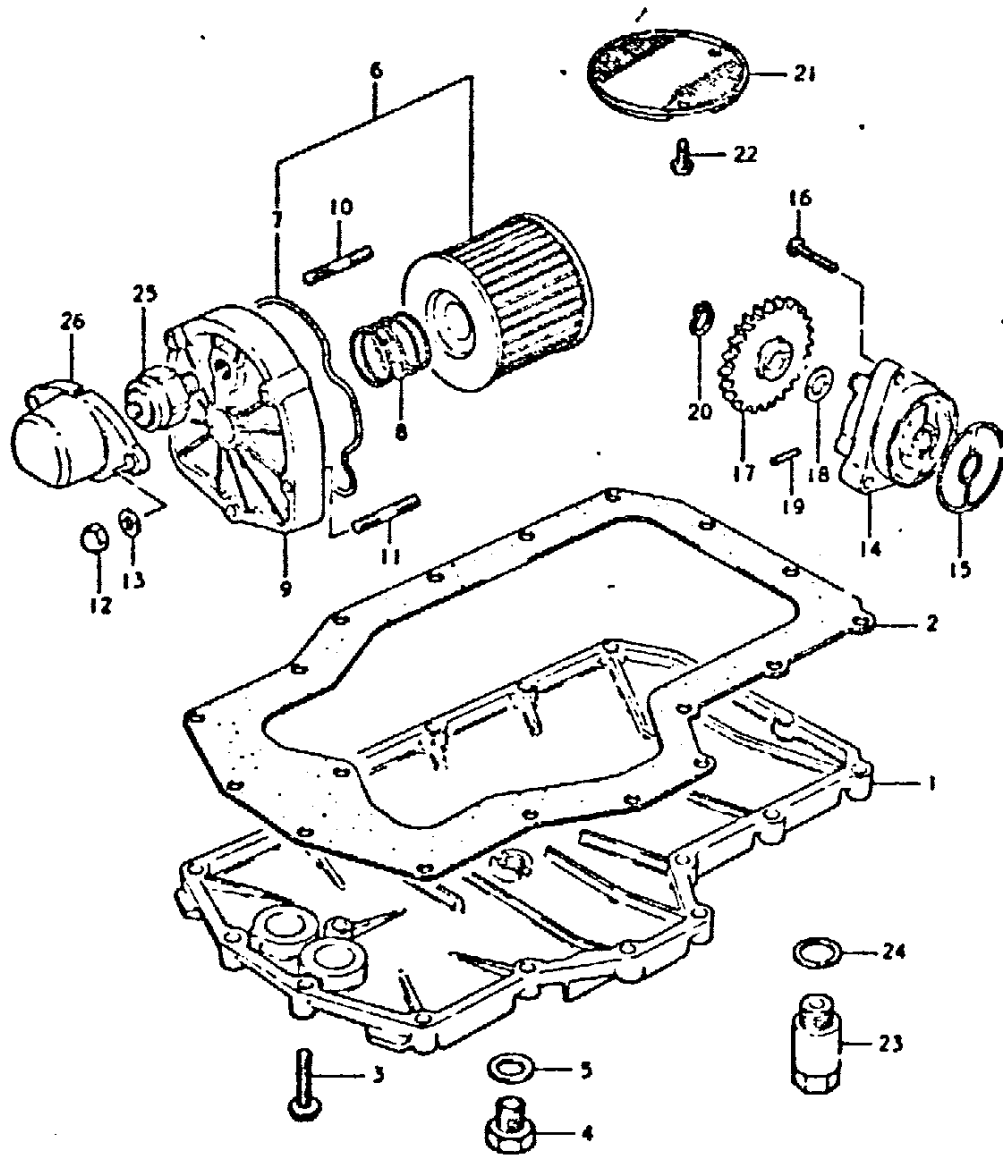


Ref No	Part No	Description
1	11511-45400	Pan, Oil
2	11489-45400	Gasket
3	01517-06258	Bolt (6*25)
4	09247-14001	Plug, Oil Drain
5	09168-14004	Gasket
6	16500-45820	Filter Set, Engine Oil
7	16518-49200	• O Ring
8	09440-32004	Spring
9	16531-45400	Cap
10	01421-05308	Stud Bolt
11	01421-06258	Stud Bolt
12	08313-11068	Nut
13	08322-21068	Washer
14	16400-49210	Pump, Engine Oil
15	16491-49200	O Ring
16	02112-06258	Screw
17	16331-45000	Gear, Driven (nt:29)
18	08221-10185	Washer
19	09261-04009	Pin
20	08331-31109	Circlip
21	16520-45400	Strainer, Engine Oil
22	02112-06128	Screw
23	16440-45400	Regulator, Engine Oil
24	08212-16221	Washer
25	37820-44100	Switch, Oil Pressure
26	37821-45400	Cover, Oil Pressure Switch

Ref No Part No Description


1	12160-45400	Rod Assy, Connecting
2	09159-08033	• Nut
3	12164-45400-010	Bearing, Crank Pin
3	12164-45400-020	Bearing, Crank Pin
3	12164-45400-030	Bearing, Crank Pin
3	12164-45400-040	Bearing, Crank Pin
3	12164-45400-025	Bearing, Crank Pin
3	12164-45400-050	Bearing, Crank Pin
4	12220-45402	Crankshaft
5	12229-45400-010	Bearing, Crankshaft
5	12229-45400-020	Bearing, Crankshaft
5	12229-45400-030	Bearing, Crankshaft
5	12229-45400-040	Bearing, Crankshaft
5	12229-45400-025	Bearing, Crankshaft
5	12229-45400-050	Bearing, Crankshaft
6	09283-30031	Oil Seal
7	12111-45401	Piston (std)
7	12111-45401-050	Piston (os:0.5)
7	12111-45401-100	Piston (os:1.0)
8	12140-45410	Piston Ring Set (std)
8	12140-45410-050	Piston Ring Set (os:0.5)
8	12140-45410-100	Piston Ring Set (os:1.0)
9	12151-92201	Pin, Piston
10	09381-18002	Circlip

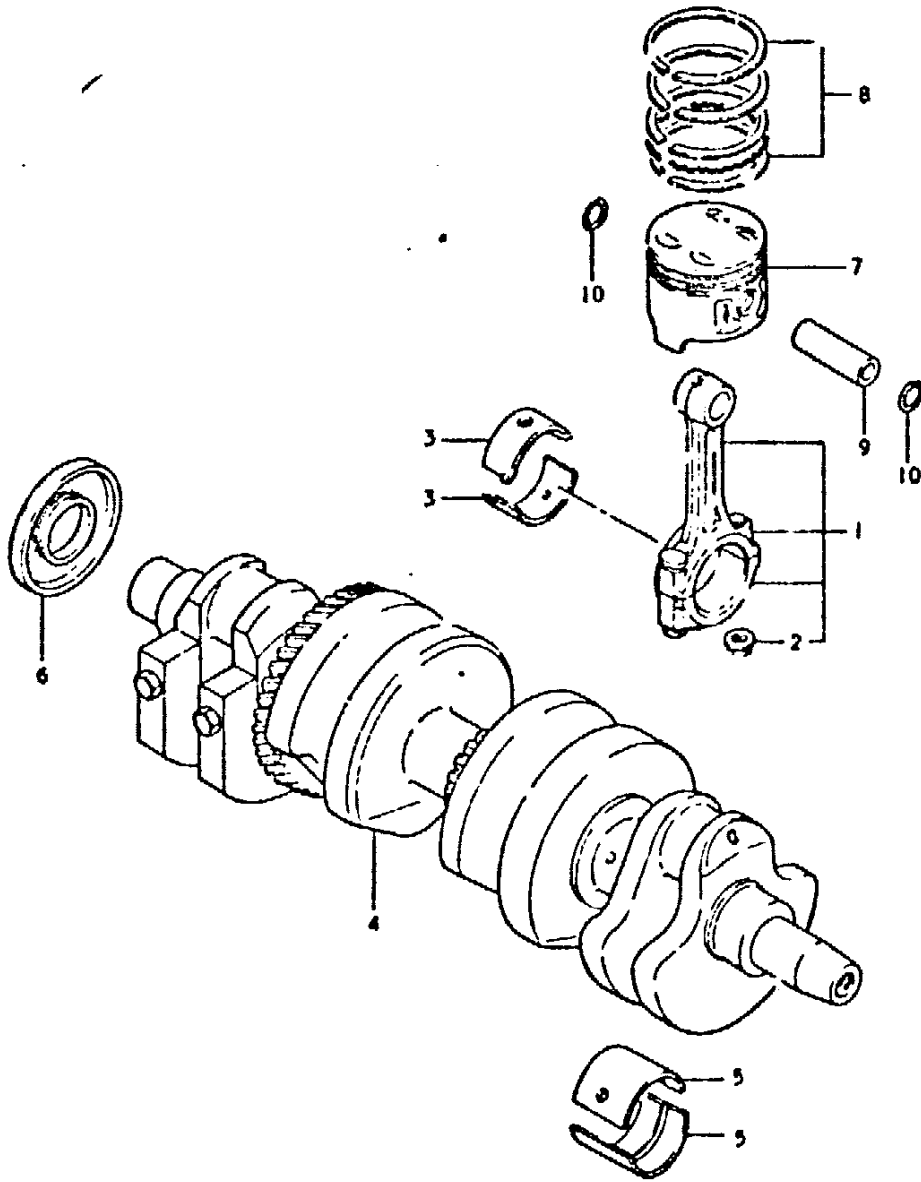


Ref No	Part No	Description
1	12611-45000	Gear, Starter Idle (nt:55/21)
2	09206-13003	Pin
3	08211-14225	Washer
4	12600-45830	Starter Clutch Set
5	09261-15001	• Roller
6	09440-04015	• Spring
7	12633-31000	• Piece, Push
8	09106-08006	Bolt
9	12649-45000	Shim, Starter Clutch

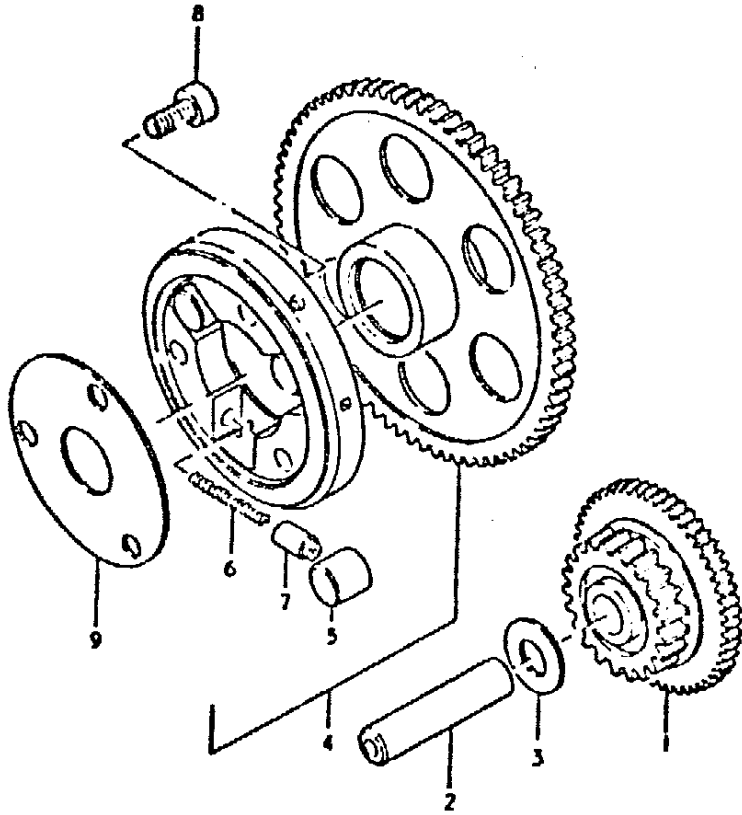




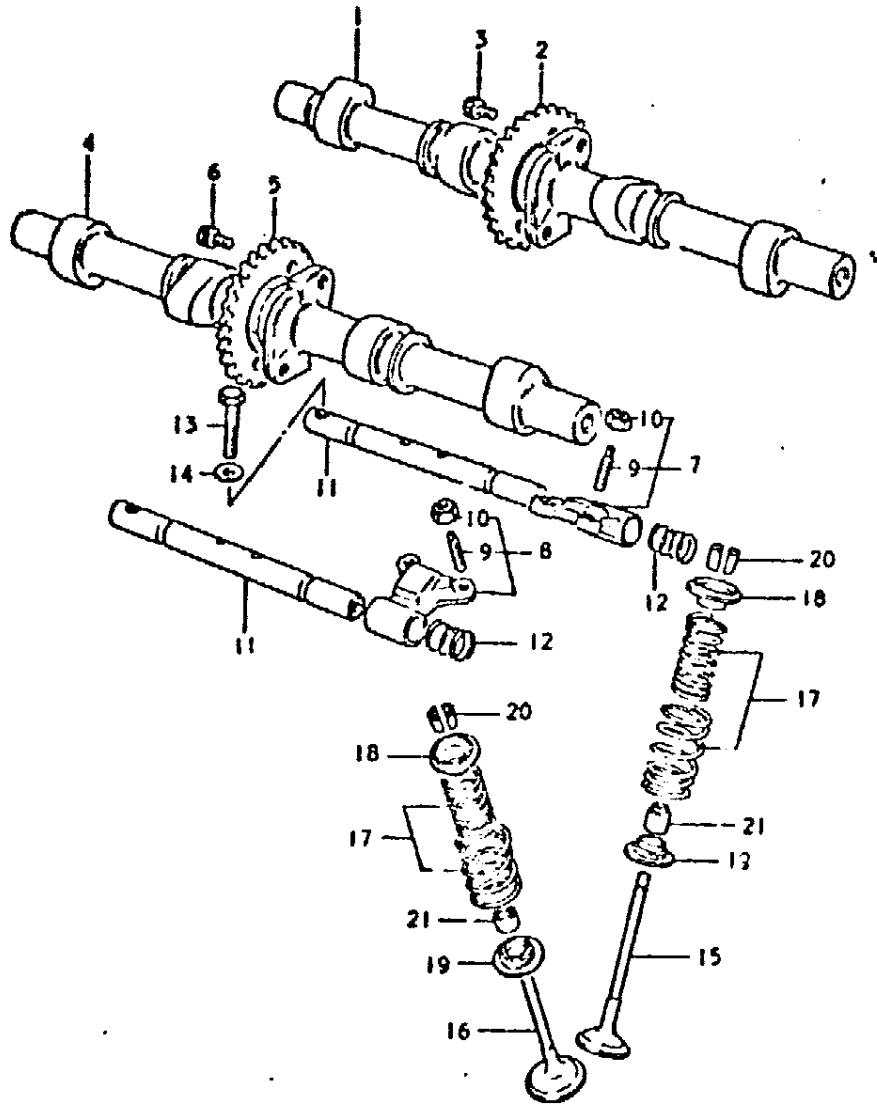


Ref No	Part No	Description
1	12711-45400	Cam Shaft, Intake
2	12741-45400	Sprocket, Intake Cam Shaft
3	09106-06024	Bolt
4	12721-45400	Cam Shaft, Exhaust
5	12751-45400	Sprocket, Exhaust Cam Shaft
6	09106-06024	Bolt
7	12840-45400	Arm, Valve Rocker Intake
8	12850-45400	Arm, Valve Rocker Exhaust
9	12842-49200	• . Screw
10	12843-49200	• . Nut
11	12860-49200	Shaft, Valve Rocker Arm
12	09440-13014	Spring
13	09100-06093	Bolt
14	08322-21068	Washer
15	12911-45410	Valve, Intake
16	12912-45410	Valve, Exhaust
17	12900-49810	Spring Set, Valve
18	12931-49200	Retainer, Spring
19	12933-49200	Seat, Spring
20	12932-49200	Cotter, Valve
21	09289-05003	Oil Seal

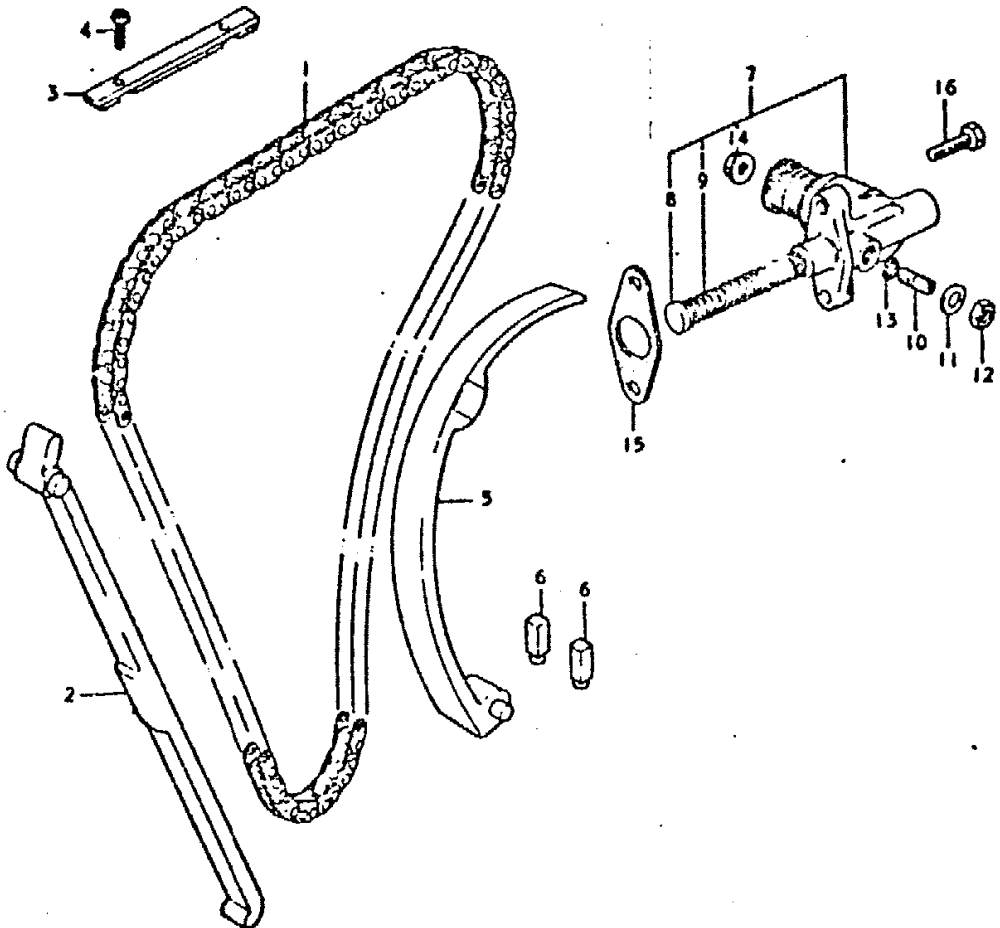


Ref No	Part No	Description
1	12760-45440	Chain, Cam Shaft Drive
2	12771-45451	Guide, Cam Chain
3	12782-47040	Guide, Cam Chain
4	02112-05128	Screw
5	12810-44150	Tensioner, Cam Chain
6	12814-44100	Cushion
7	12830-47001	Adjuster Assy, Tensioner
8	12833-47001	. Push Rod
9	09440-12017	. Spring
10	12838-45001	. Screw
11	08322-11088	. Washer
12	08310-12088	. Nut
13	09280-06003	. O Ring
14	09159-06017	. Nut
15	12837-47000	Gasket
16	09128-06024	Bolt

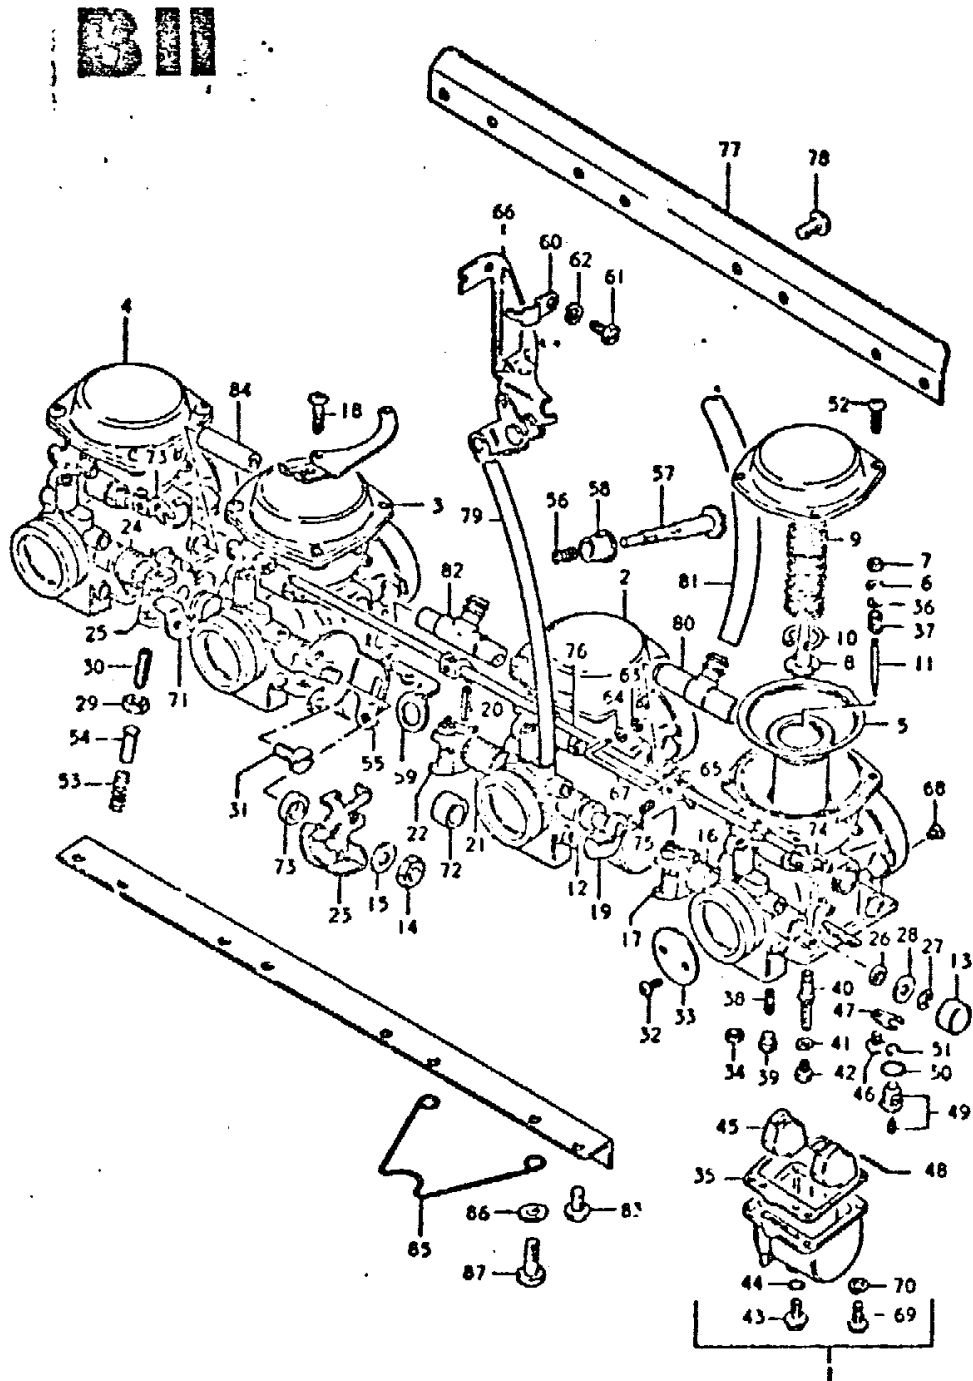

Ref No	Part No	Description
16	13200-45410	Carburetor Assy
1	13201-45410	• Carburetor, No.1
2	13202-45410	• Carburetor, No.2
3	13203-45410	• Carburetor, No.3
4	13204-45410	• Carburetor, No.4
5	13500-45110	•• Diaphragm
6	13394-31210	•• E Ring
7	13387-44030	•• Ring
8	13389-44030	•• Guide Holder
9	13503-44080	•• Spring
10	13581-44030	•• Clip
11	13383-45410	•• Needle, Jet (5c32-3)
12	13557-49200	• Gasket
13	13578-47070	•• Cap
14	08310-12088	•• Nut
15	13606-47070	•• Washer
16	13573-47070	•• Spring
17	13550-47070	•• Shaft
18	02111-05158	•• Screw
19	13550-45400	•• Shaft
20	13563-47070	•• Pin
21	13573-45110	•• Spring
22	13553-47070	•• Lever
23	13555-47070	•• Lever
24	13573-47080	•• Spring
25	13550-47090	•• Shaft
26	13651-51010	•• Seal
27	13617-44080	•• E Ring
28	13557-47070	•• Gasket
29	13607-47070	•• Nut
30	13605-47070	•• Screw
31	13605-45110	•• Screw
32	13604-44080	•• Screw
33	13551-47090	•• Valve, Throttle (135)
34	13258-44080	•• Gasket
35	13251-44080	•• Gasket
36	13382-44030	•• Washer
37	13388-44030	•• Spring
38	09492-42005	•• Jet, Pilot (42.5)
39	13357-44080	•• Plug
40	09494-00278	•• Jet, Needle (y-5)
41	13332-44080	•• Washer
42	09491-22005	•• Jet, Main (112.5)
43	13247-44080	•• Screw
44	13246-44080	•• O Ring
45	13250-44080	•• Float
46	02111-04067	•• Screw
47	13373-39110	•• Plate
48	13254-92311	•• Pin
49	13370-44080	•• Valve, Needle
50	13374-44080	•• O Ring
51	13376-44080	•• Filter
52	02112-05128	•• Screw

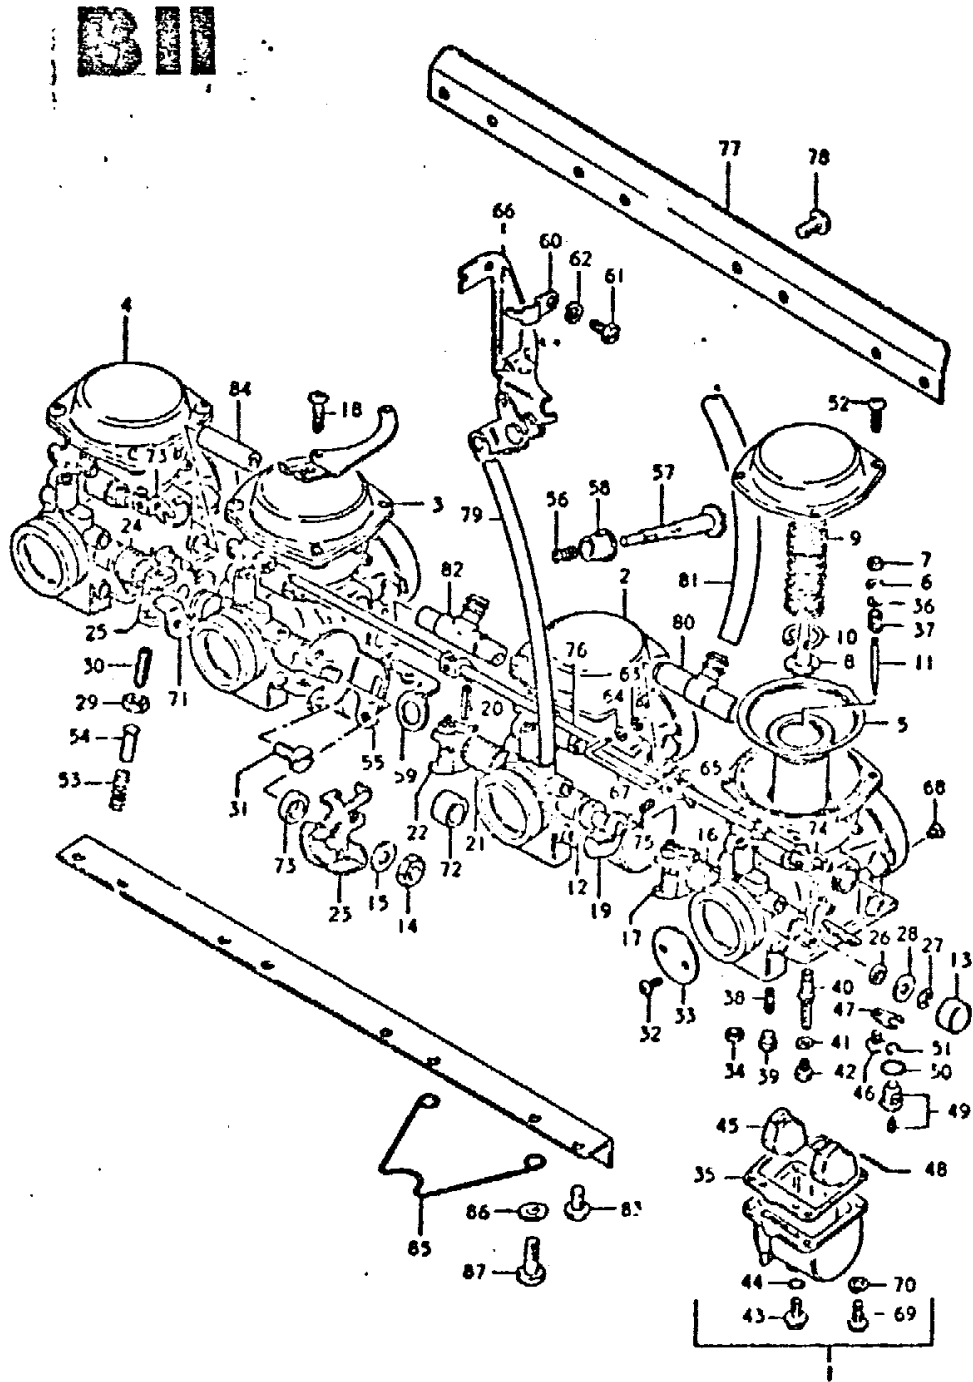


Ref No	Part No	Description
53	13268-44010	••.. Spring
54	13575-47070	••.. Pin
55	13627-45110	••.. Bracket
56	13271-93011	••.. Spring
57	13267-47070	••.. Adjuster
58	13276-31210	••.. Bush
59	13627-44090	••.. Bracket
60	13421-47070	••.. Plate
61	01104-05108	••.. Bolt
62	08321-21058	••.. Lock Washer
63	13415-47070	••.. E Ring
64	13523-98010	••.. Washer
65	13422-47070	••.. Lever
66	13624-45110	••.. Bracket
67	13425-45110	••.. Rod
68	09493-30003	••.. Jet, Pilot Air (150)
69	02112-05168	••.. Screw
70	08321-21058	••.. Lock Washer
71	13550-45410	••.. Shaft
72	13574-45110	••.. Ring
73	13574-45120	••.. Ring
74	13422-44080	•.. Lever
75	13605-47070	•.. Screw
76	13410-45400	•.. Shaft
77	13628-45400	•.. Plate
78	13605-47090	•.. Screw
79	13683-45110	•.. Hose
80	13685-45400	•.. Nipple
81	13683-47070	•.. Hose
82	13685-45110	•.. Nipple
83	02112-06128	•.. Screw
84	13685-49210	•.. Nipple
85	13619-49200	•.. Clip
86	13615-49200	•.. Washer
87	02112-06168	•.. Screw

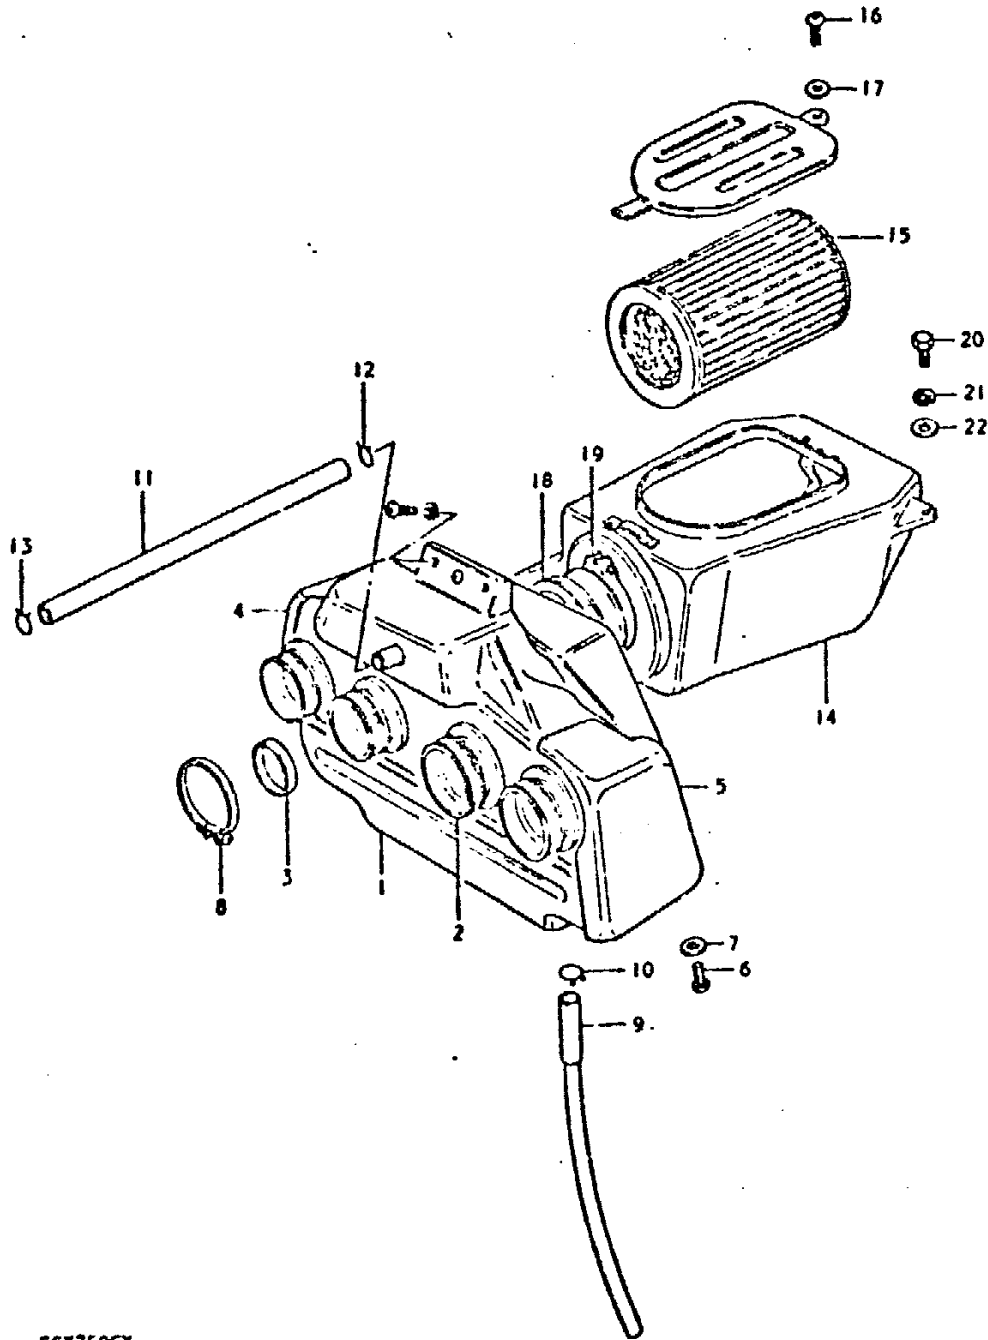


Ref No	Part No	Description
1	13710-45400	Case Assy, Front
2	13881-49200	. Tube, Outlet
3	13885-49200	. Ring
4	13831-49200	. Cover, Rh
5	13832-49200	. Cover, Lh
6	02112-05108	. Screw
7	08322-21058	. Washer
8	09402-60306	Clamp
9	13870-00020	Hose, Drain
10	09401-14301	Clip
11	13851-00225	Hose, Breather
12	13859-49200	Clip, No. 1
13	09401-14301	Clip, No. 2
14	13700-49810	Case Set, Rear
15	13780-49200	. Filter Assy
16	02112-05128	. Screw
17	08322-21058	. Washer
18	13801-49200	. Tube, Joint
19	09402-70306	. Clamp
20	01107-06208	Bolt
21	08321-21068	Lock Washer
22	08322-11068	Washer

GSX750EX

Ref No	Part No	Description
1	14100-45400	Pipe, Exhaust Center
2	14181-11010	Gasket
3	14182-49000	Clamp
4	01107-08358	Bolt
5	08321-21088	Lock Washer
6	14155-49000	Plate, Exhaust Pipe
7	14771-49001	Connector, Muffler
8	14459-49000	Clamp, Connector Rh
9	14469-49000	Clamp, Connector Lh
10	01517-08258	Bolt
11	14301-45400	Muffler, Rh
12	14302-45400	Muffler, Lh
13	14780-49201	Cover, Muffler Rh
14	14790-49201	Cover, Muffler Lh
15	02112-05108	Screw
16	08321-21058	Lock Washer
17	08322-21058	Washer
18	09168-06005	Gasket

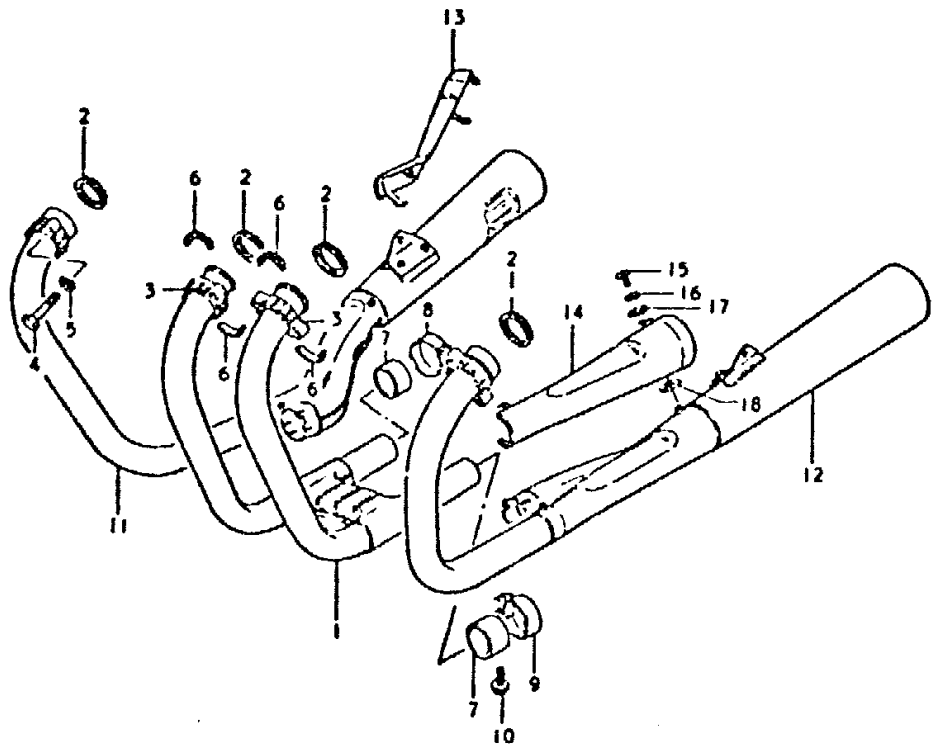

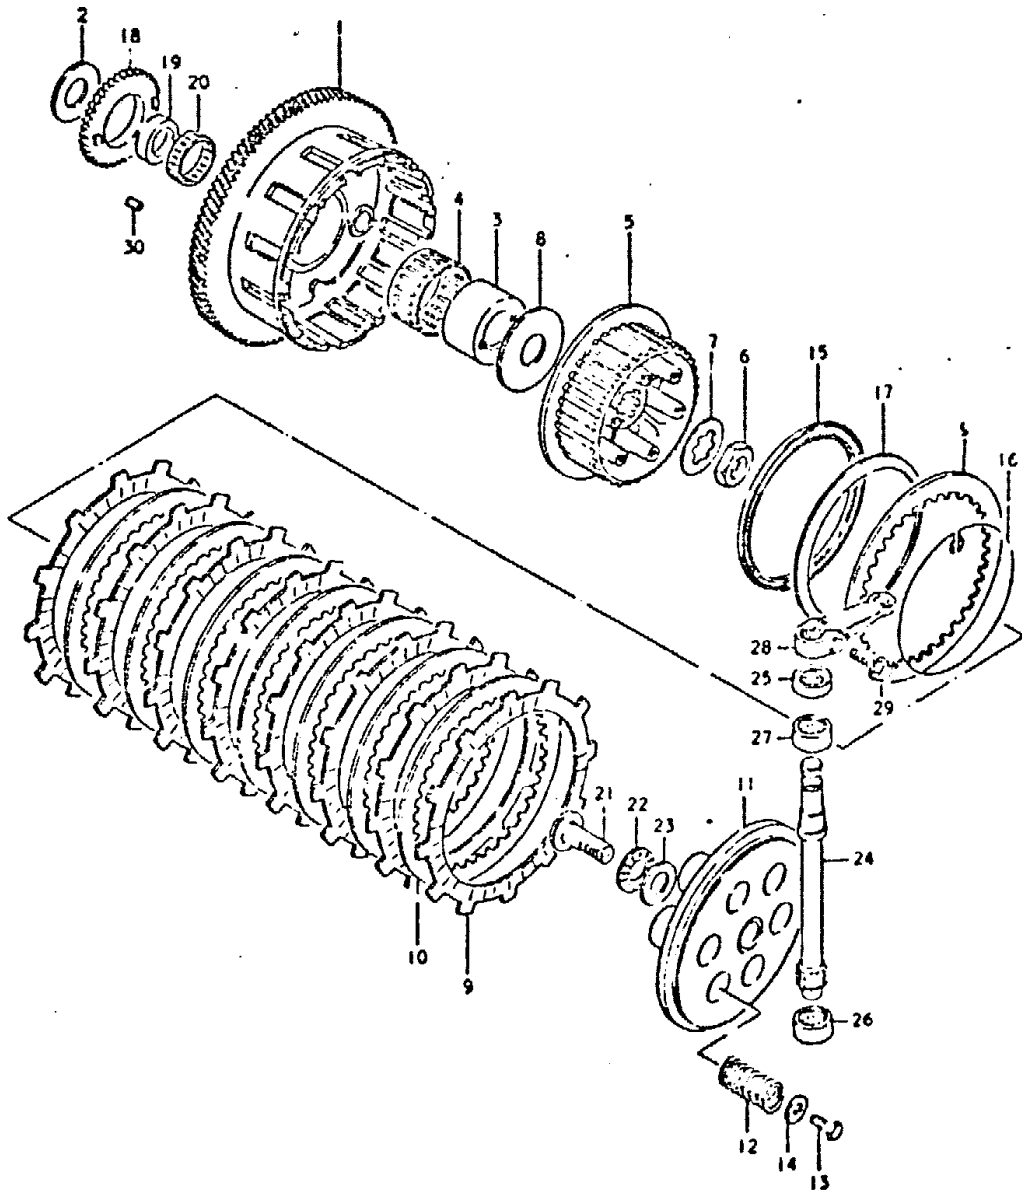


Ref No	Part No	Description
1	21200-45400	Gear, Primary Driven (nt:93)
2	09160-25023	Washer
3	21251-45001	Spacer
4	09263-51001	Bearing
5	21411-45100	Hub, Sleeve
6	09140-24004	Nut
7	09167-25007	Washer
8	09160-25022	Washer
9	21441-45100	Plate, Drive
10	21451-31000	Plate, Driven
11	21462-45100	Disc, Pressure
12	09440-19007	Spring
13	01107-06168	Bolt
14	09160-06020	Washer
15	21471-45101	Seat, Wave Washer
16	21481-45100	Ring, Stopper
17	09164-00003	Wave Washer
18	16321-45002	Gear, Oil Pump Drive (nt:38)
19	16325-45001	Spacer
20	09263-36002	Bearing
21	23165-49000	Rack, Release
22	09263-15003	Bearing
23	09160-15015	Washer
24	23261-45400	Pinion, Release
25	09285-12002	Oil Seal
26	09263-12014	Bearing
27	09263-15012	Bearing
28	23271-49001	Arm, Release
29	01517-06208	Bolt
30	21215-49000	Cushion


GSX750EX

Ref No	Part No	Description
--------	---------	-------------


1	24120-45400	Countershaft Assy
2	24100-45810	• Countershaft (nt:14)
3	24221-49001	• Gear, 2nd Drive (nt:18)
4	24231-49000	• Gear, 3rd Drive (nt:21)
5	24240-49000	• Gear, 4th Drive (nt:24)
6	09167-28001	• Washer
7	08331-11289	• Circlip
8	24250-49000	• Gear, 5th Drive (nt:26)
9	09262-25051	Bearing, Rh
10	09390-62006	C Ring
11	09241-47004	Plug, Countershaft Lh
12	23117-45000	Holder
13	01107-06128	Bolt
14	24741-45000	Holder, Bearing
15	02122-06168	Screw
16	09262-20044	Bearing, Lh
17	09390-47003	C Ring
18	24131-49001	Driveshaft
19	24310-45000	Gear, 1st Driven (nt:36)
20	24321-45400	Gear, 2nd Driven (nt:32)
21	09301-28001	Bush
22	08331-11289	Circlip
23	24331-45100	Gear, 3rd Driven (nt:29)
24	24332-49000	Bush
25	09167-28001	Washer, Rh
26	08331-11289	Circlip, Rh
27	09167-28002	Washer, Lh (t:1.5)
28	09169-28001	Washer, Lh (t:1.0)
29	24341-45100	Gear, 4th Driven (nt:27)
30	24351-45400	Gear, 5th Driven (nt:25)
31	09262-20041	Bearing, Rh
32	09390-47003	C Ring
33	09262-25051	Bearing, Lh
34	09390-62006	C Ring
35	09283-32012	Oil Seal
36	09390-62008	C Ring
37	24761-45000	Plate
38	24762-45000	Gasket
39	02122-06168	Screw
40	27510-49001	Sprocket, Engine (nt:15)
41	09180-25052	Spacer
42	09159-20001	Nut
43	09167-25014	Lock Washer
44	09280-25001	O Ring
45	27600-45410	Chain, Drive

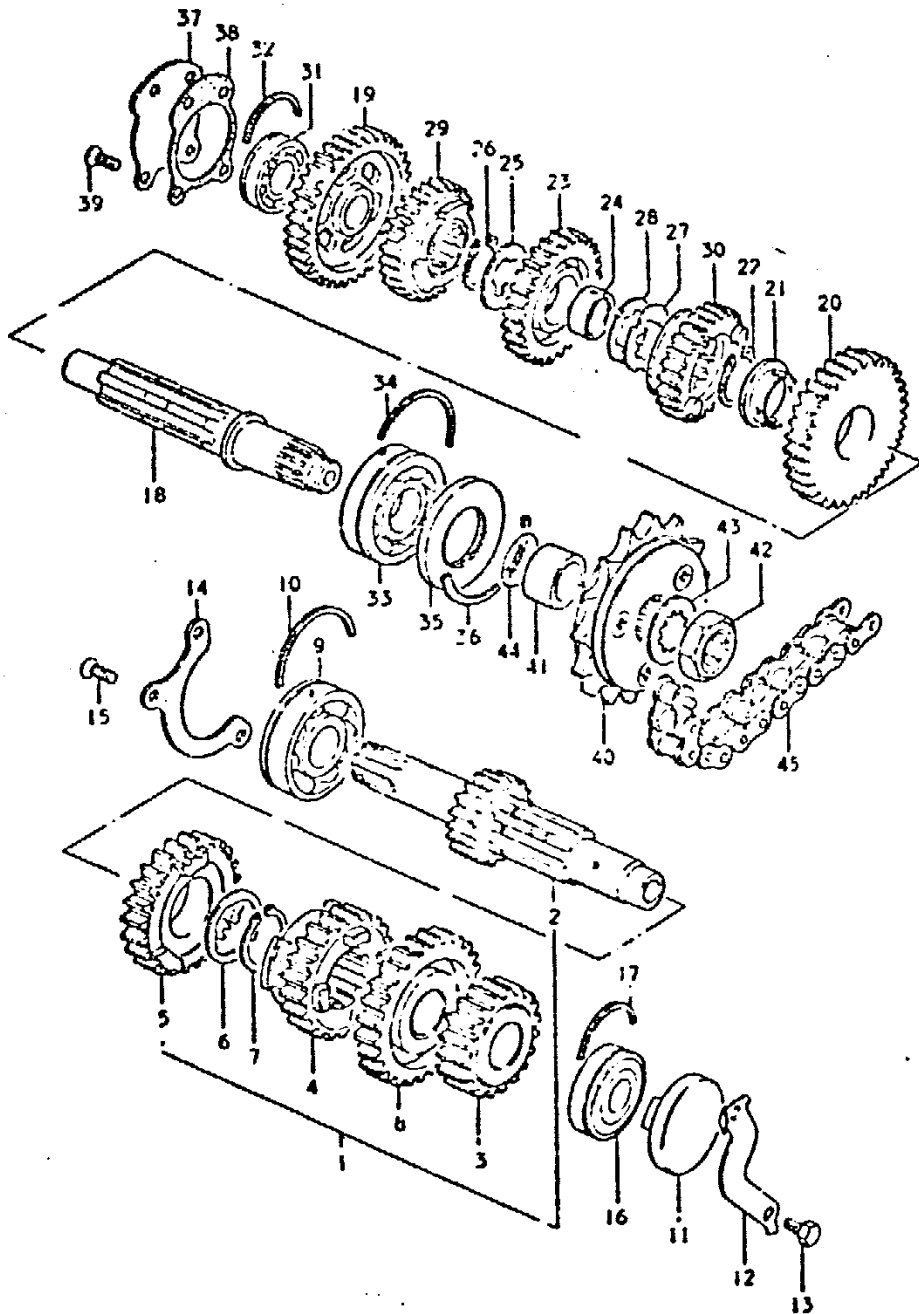



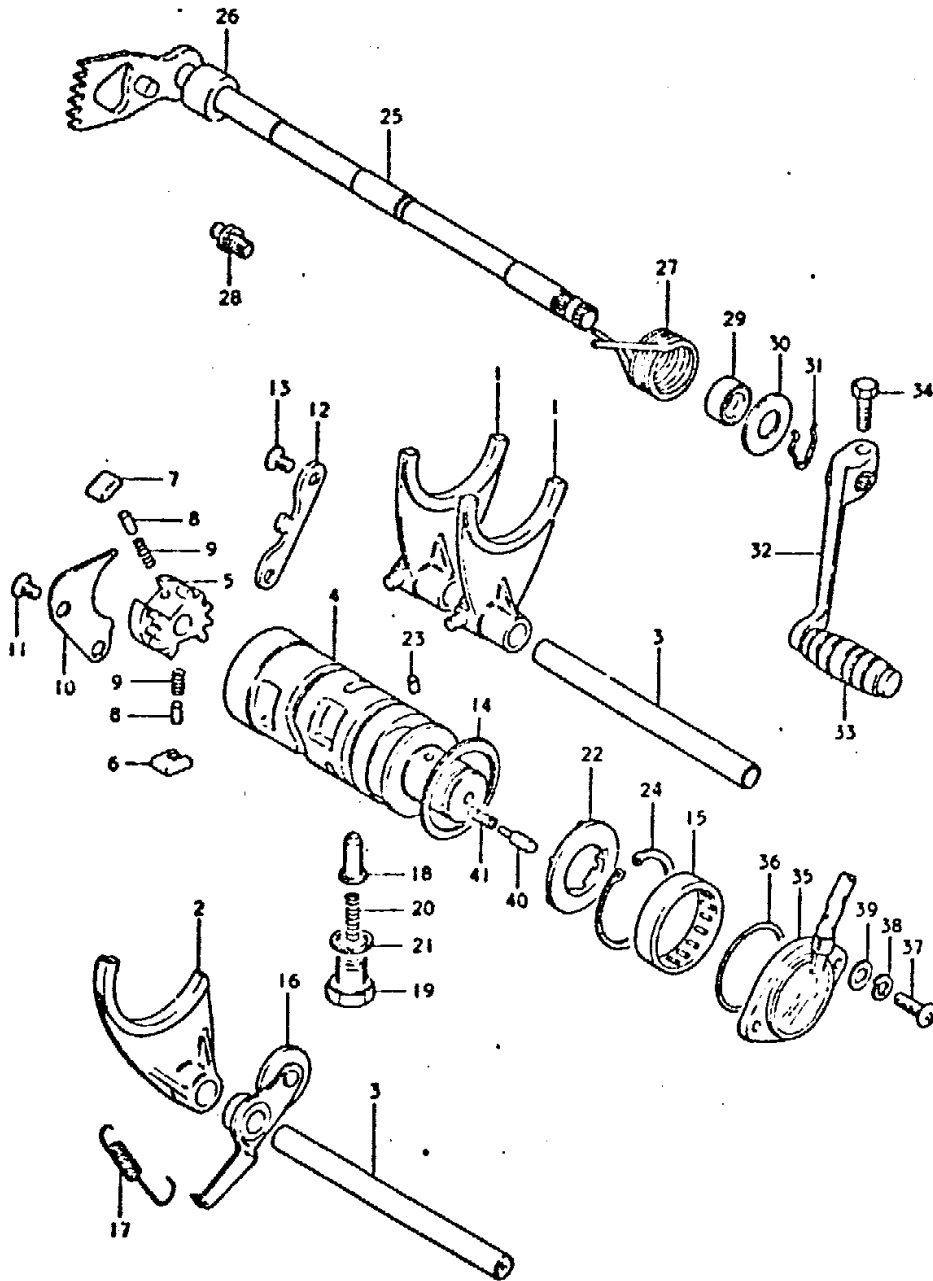


Ref No	Part No	Description
1	25211-34000	Fork, Driven Gear Shifting
2	25231-34000	Fork, Driven Gear Shifting
3	25411-49200	Shaft, Gear Shifting Fork
4	25310-45400	Cam, Gear Shifting
5	25322-11000	Gear, Cam Driven
6	25323-11000	Pawl, No. 1
7	25324-11000	Pawl, No. 2
8	09261-05003	Pin
9	09440-04003	Spring
10	25331-49200	Lifter, Pawl
11	02122-06128	Screw
12	25341-18000	Guide, Cam
13	02122-06128	Screw
14	09160-40001	Washer
15	09263-25018	Bearing
16	25350-45400	Stopper, Cam
17	09443-08019	Spring
18	25351-30010	Stopper, Cam
19	25354-30000	Holder, Stopper
20	09440-06018	Spring
21	09168-14004	Gasket
22	25381-45400	Plate, Stopper
23	06211-04063	Pin
24	08331-11258	Circlip
25	25510-45400	Shaft, Gear Shifting
26	09180-12088	Spacer
27	09444-26017	Spring
28	25671-01000	Stopper, Arm
29	09285-12002	Oil Seal
30	09160-12020	Washer
31	09384-12001	Circlip
32	25600-33003	Lever Assy, Gear Shifting
33	25652-16500	• . Cover
34	01107-08208	Bolt
35	37720-45100	Body, Gear Shifting Switch
36	09280-26003	O Ring
37	02112-05208	Screw
38	08321-21058	Lock Washer
39	08322-21058	Washer
40	09209-05011	Contact
41	09440-04010	Spring

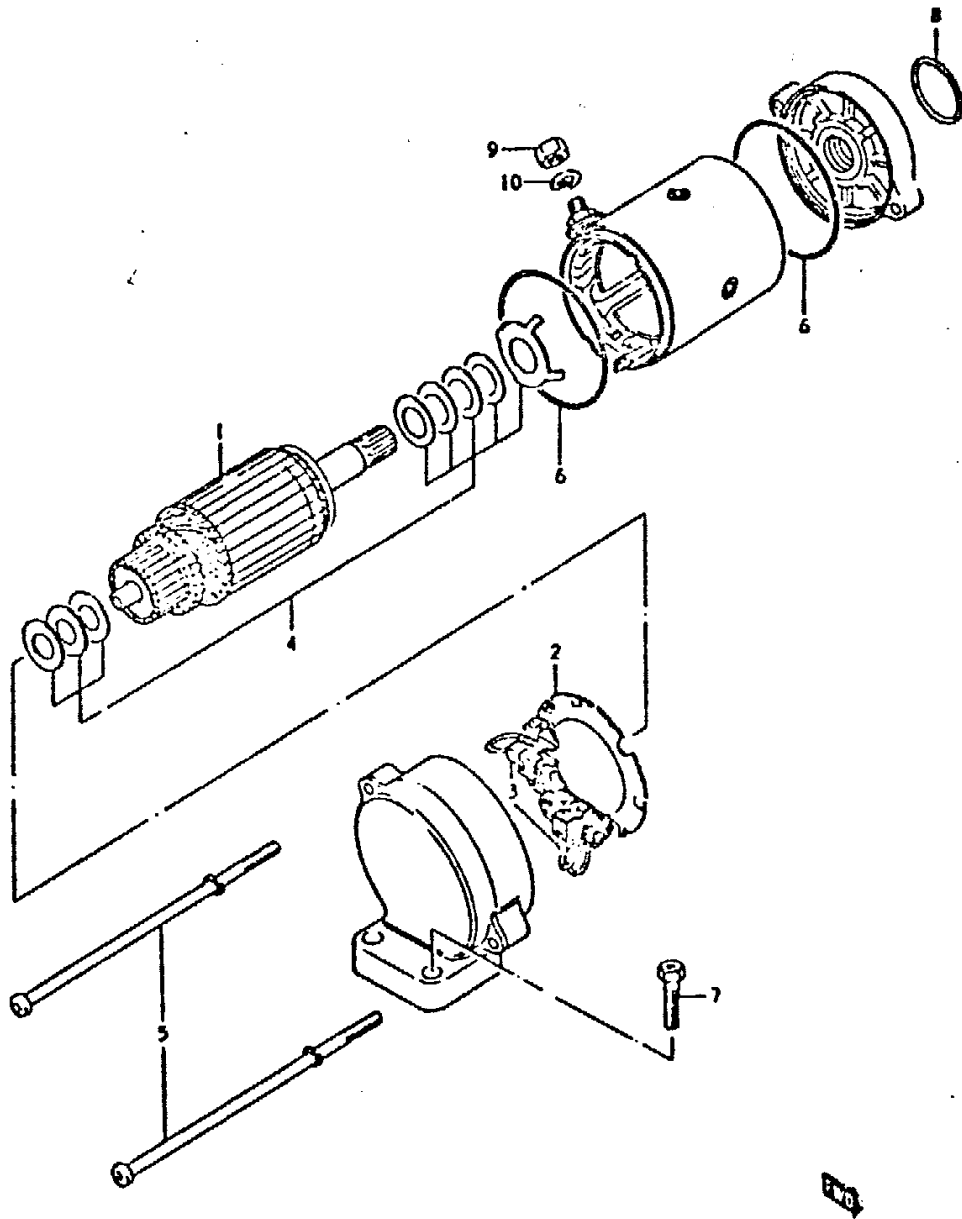


Ref No	Part No	Description
41	31100-45040	Motor Assy, Starting
1	31311-31040	• . Armature
2	31173-31040	• . Holder, Brush
3	31131-31040	• . Brush Set (2pcs./set)
4	31361-31040	• . Shim Set
5	31281-31040	• . Bolt Set
6	31264-31040	• . O Ring
7	09128-06024	Bolt
8	09280-24001	O Ring
9	08310-22068	Nut
10	08321-21068	Lock Washer


Ref No	Part No	Description
--------	---------	-------------

1	31400-45110	Generator Assy
2	31401-45110	• Stator
3	31402-45110	• Rotor
4	02112-05308	Screw
5	08321-21058	Lock Washer
6	01107-12458	Bolt
7	08321-31128	Lock Washer
8	31497-45000	Clamp
9	02112-05068	Screw
10	31498-45000	Clamp
11	02112-05108	Screw

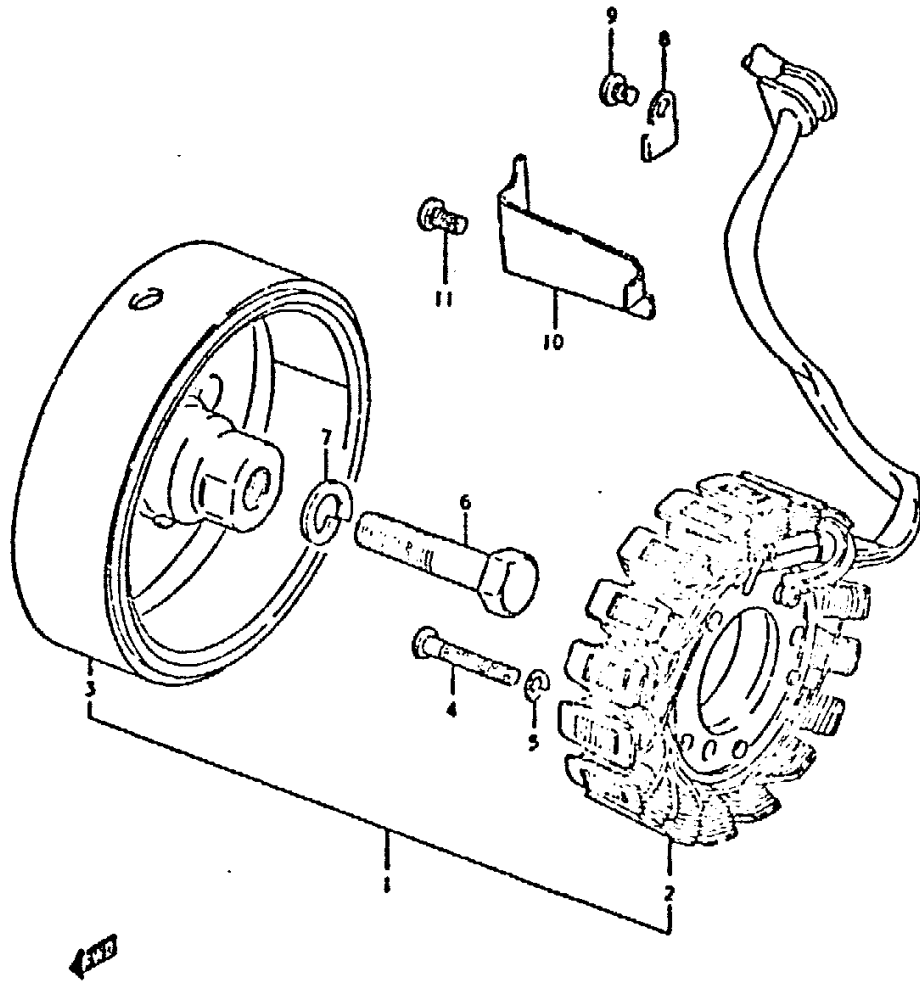


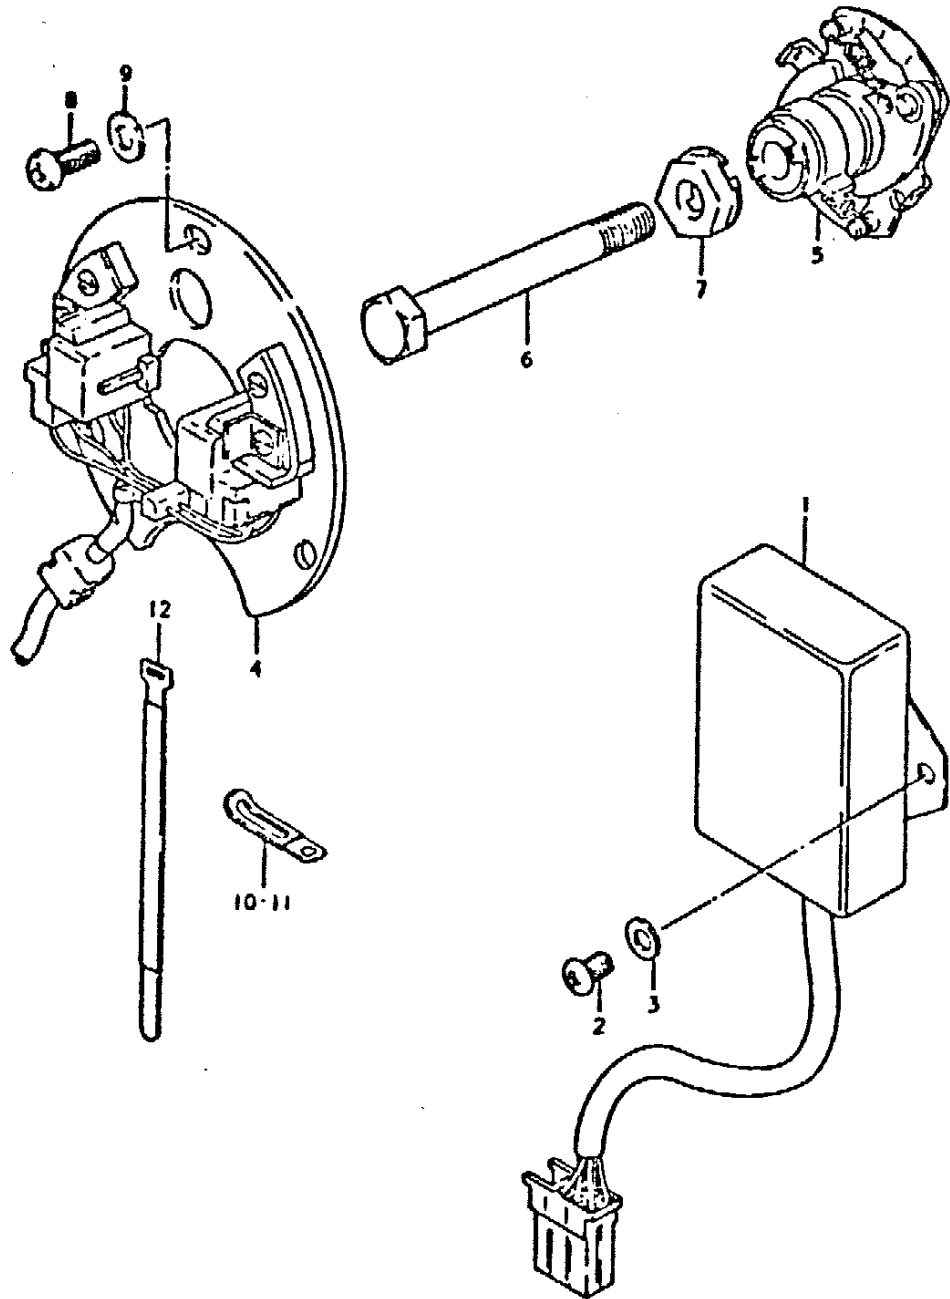



Ref No	Part No	Description
1	32900-45110	Igniter Unit
2	02112-06108	Screw
3	08322-21068	Washer
4	33110-45110	Signal Generator Assy
5	33120-45410	Governor Assy, Advance
6	01107-08658	Bolt
7	33465-47000	Washer
8	09125-05024	Screw
9	09160-05027	Washer
10	09404-06401	Clamp
11	09404-08401	Clamp
12	09407-18301	Clamp

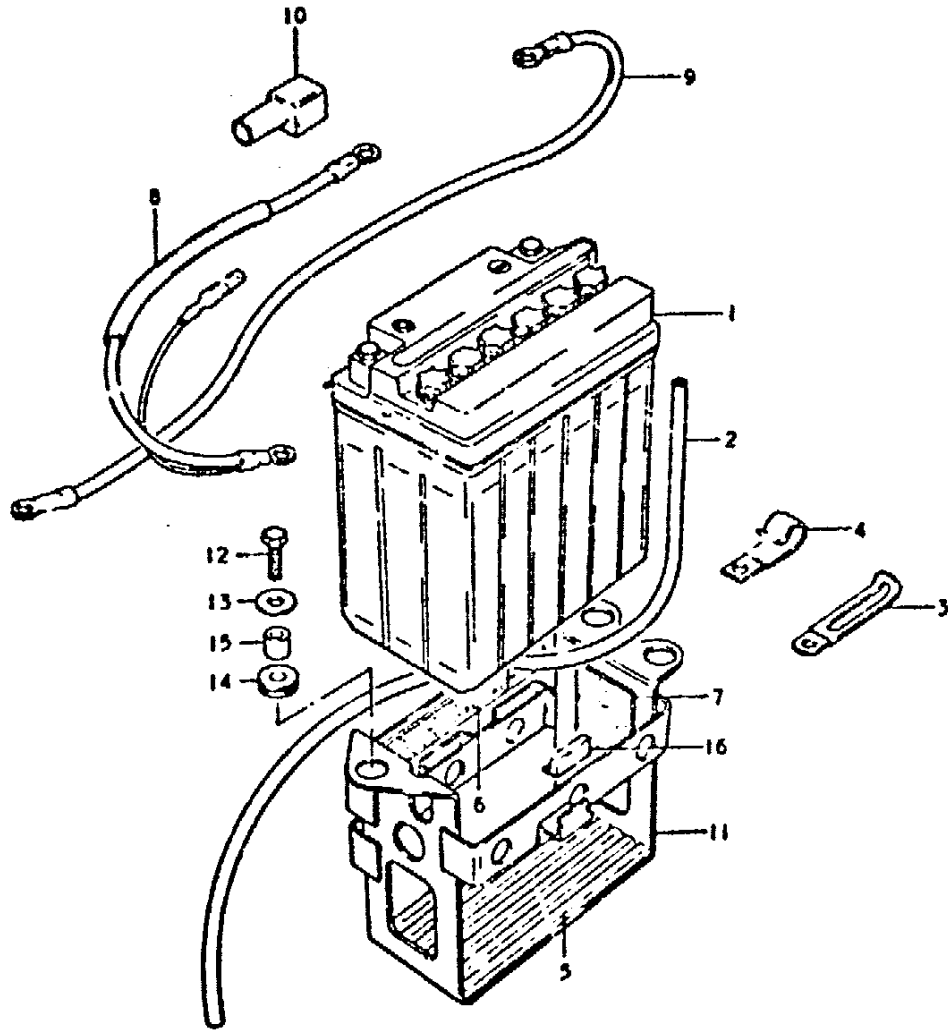


Ref No	Part No	Description
1	33610-49210	Battery (12v, 14ah)
2	33680-49000	Hose, Battery Exhaust
3	09404-06401	Clamp
4	09403-09303	Clamp
5	33651-31000	Cushion
6	33652-49000	Protector
8	33820-49000	Lead Wire, (+)
9	33850-03201	Lead Wire, (-)
10	33624-45000	Cap, Terminal
11	41540-49200	Holder, Battery
12	01107-06168	Bolt
13	09160-06020	Washer
14	09320-08007	Cushion
15	09180-06038	Spacer
16	47117-02400	Cushion

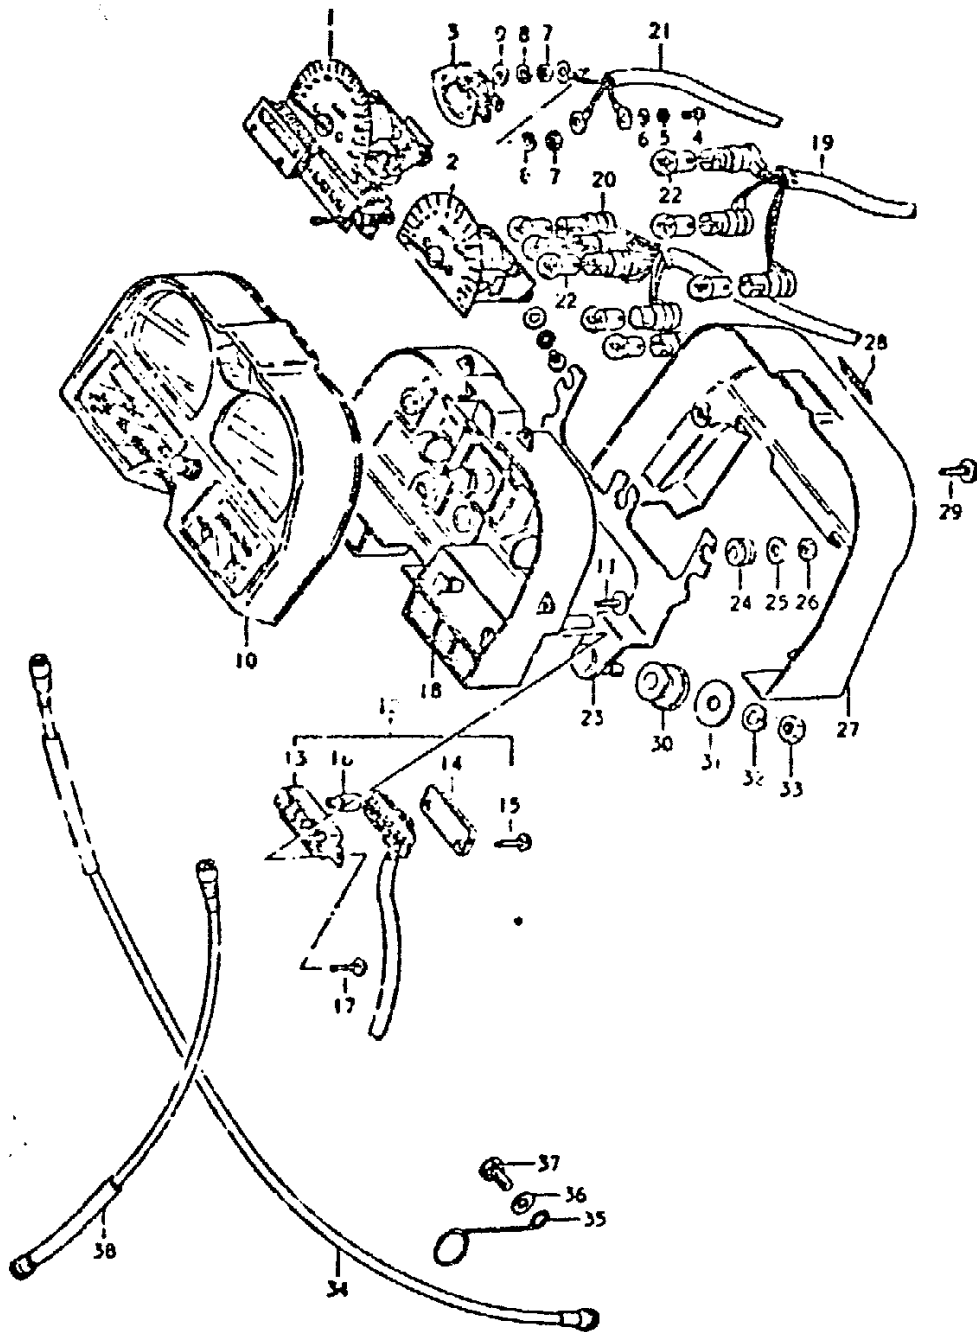

Ref No	Part No	Description
1	34120-45430	Speedometer
2	34220-45400	Tachometer
3	34320-45410	Fuelmeter
4	02112-03128	Screw
5	08321-21038	Lock Washer
6	08322-21038	Washer
7	08310-22048	Nut
8	08321-21048	Lock Washer
9	08322-21048	Washer
10	34150-45410	Hood, Meter
11	03141-04128	Screw
12	36450-45101	Indicator, Gear Position
13	36452-45100	• . Case, Indicator
14	36454-45100	• . Cover, Lower
15	36456-45100	• . Screw
16	09471-12071	• . Bulb
17	36457-45100	Screw
18	34111-45410	Case
19	34173-45410	Socket, Meter
20	36325-45410	Socket, Pilot Lamp
21	34378-45410	Lead Wire, Fuelmeter
22	09471-12001	Bult (12v, 3.4w)
23	34950-45410	Bracket
24	34189-45410	Cushion
25	34181-45410	Washer
26	08310-11058	Nut
27	34193-45410	Cover, Lower
28	34157-45410	• . Emblem
29	03141-04168	Screw
30	34956-31001	Cushion
31	09160-08002	Washer
32	08321-21088	Lock Washer
33	08310-12088	Nut
34	34910-45410	Cable, Speedometer
35	34938-37000	Clamp
36	08322-21068	Washer
37	01107-06168	Bolt
38	34940-47030	Cable, Tachometer

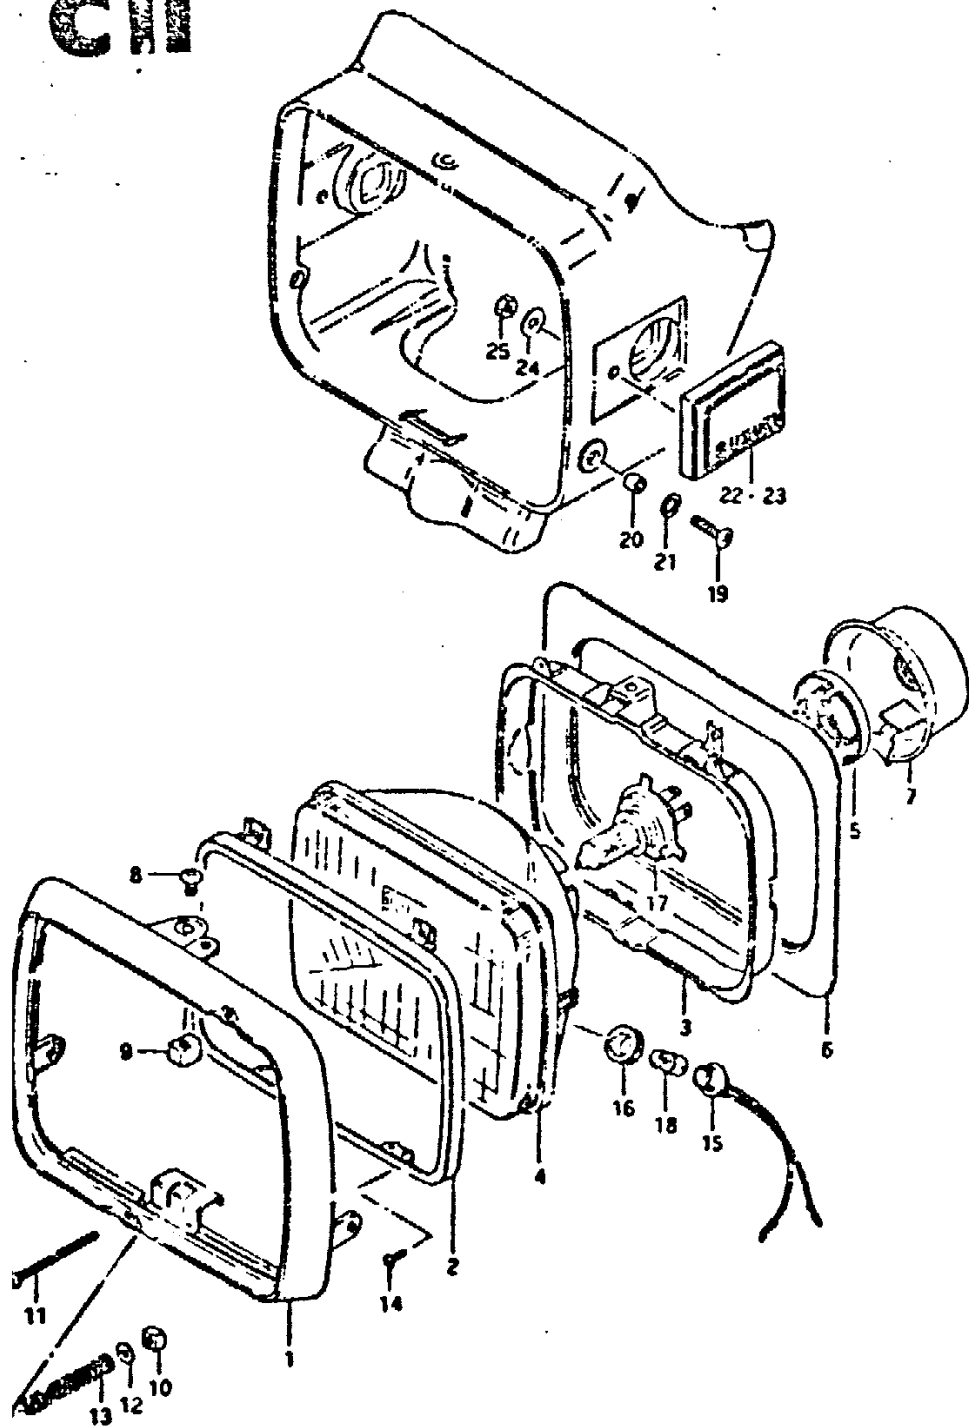

Ref No	Part No	Description
38	35100-49220-999	Headlamp Assy
1	35111-49200	. Rim
2	35127-49200	. Ring
3	35130-49200	. Ring, Mounting
4	35121-49220	. Unit
5	35136-49200	. Holder, Bulb
6	35129-49200	. Shade
7	35173-49200	. Cover
8	02112-05128	. Screw
9	35152-49200	. Nut
10	35135-45600	. Nut
11	35151-49200	. Screw
12	35157-48510	. Washer
13	35154-49200	. Spring
14	02112-03088	. Screw
15	36118-30691	. Socket
16	36116-22630	. Cushion
17	09471-12060	Bulb (12v, 60/55w, H4)
18	09471-12063	Bulb (12v, 4w)
19	02142-05167	Screw
20	09180-05012	Spacer
21	09168-08011	Washer
22	35993-49200	Emblem, Front Side Rh
23	35994-49200	Emblem, Front Side Lh
24	09160-05013	Washer
25	08310-11058	Nut

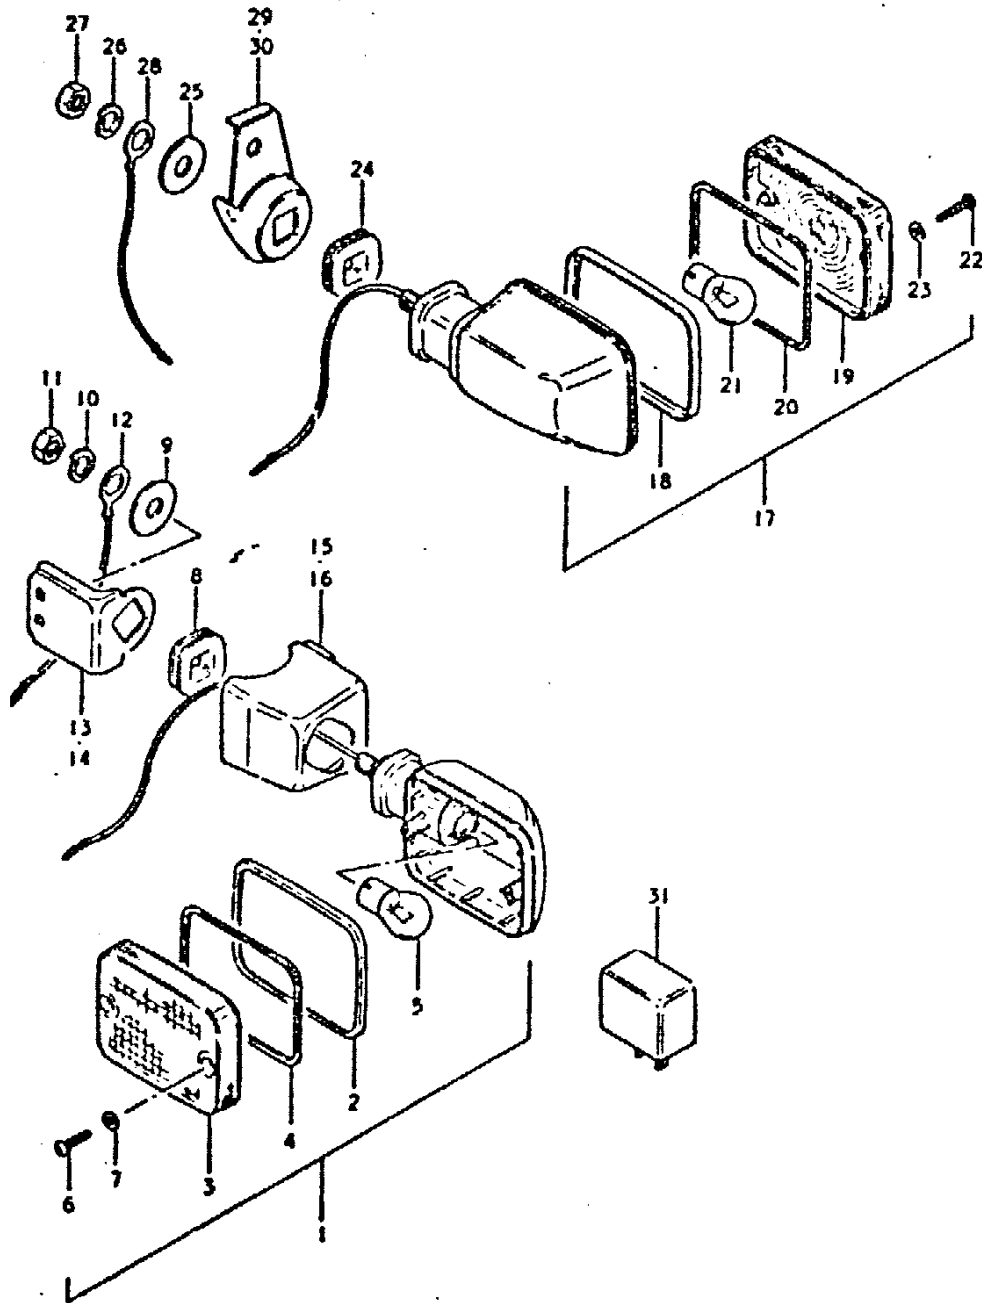



Ref No	Part No	Description
1	35601-44120	Lamp, Front Turn Signal
2	35611-49230	• . Rim
3	35612-49230	• . Lens
4	35613-49230	• . Gasket
5	09471-12056	• . Bulb (12v, 21w)
6	03211-04208	• . Screw
7	35627-43010	• . Gasket
8	09320-15002	Cushion
9	09160-10006	Washer
10	08321-21108	Lock Washer
11	08310-12108	Nut
12	36851-49000	Lead Wire, Earth
13	35670-45400	Bracket, Front Rh
14	35680-45400	Bracket, Front Lh
15	35697-49200	Cover, Rh
16	35698-49200	Cover, Lh
17	35603-44170	Lamp, Rear Turn Signal
18	35611-49230	• . Rim
19	35652-44181	• . Lens
20	35613-49230	• . Gasket
21	09471-12056	• . Bulb (12v, 21w)
22	03211-04208	• . Screw
23	35627-43010	• . Gasket
24	09320-15002	Cushion
25	09160-10006	Washer
26	08321-21108	Lock Washer
27	08310-12108	Nut
28	36660-33000	Lead Wire, Earth
29	35620-49200	Bracket, Rear Rh
30	35640-49200	Bracket, Rear Lh
31	38610-45031	Relay, Turn Signal



Ref No	Part No	Description
--------	---------	-------------


1	35710-49221	Lamp, Rear Combination
2	35712-49221	• Lens
3	35713-49230	• Gasket
4	09471-12057	• Bulb (12v, 21/5w)
5	09471-12058	• Bulb (12v, 5w)
6	03211-04208	• Screw
7	35627-43010	• Gasket
8	35733-49230	• Gasket
9	09320-09010	Cushion
10	09160-06060	Washer
11	09180-06006	Spacer
12	08310-11068	Nut
13	08321-21068	Lock Washer
14	35927-49210	Plate, License

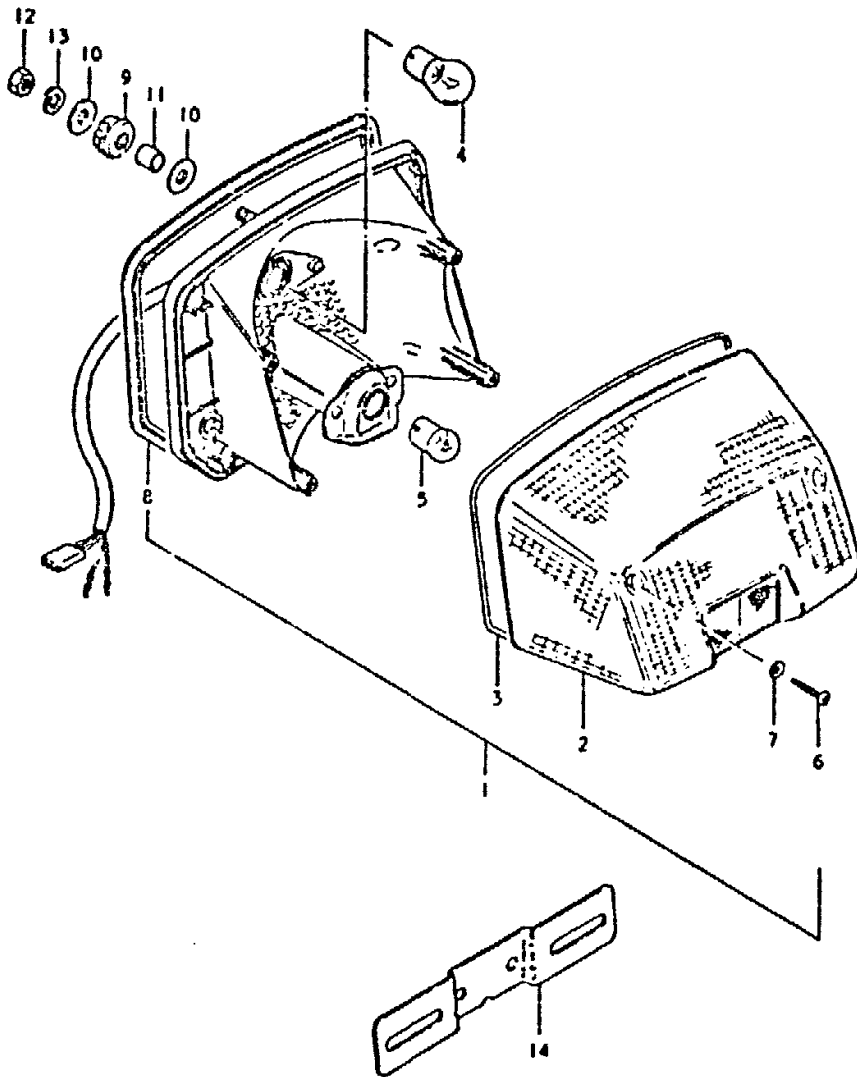

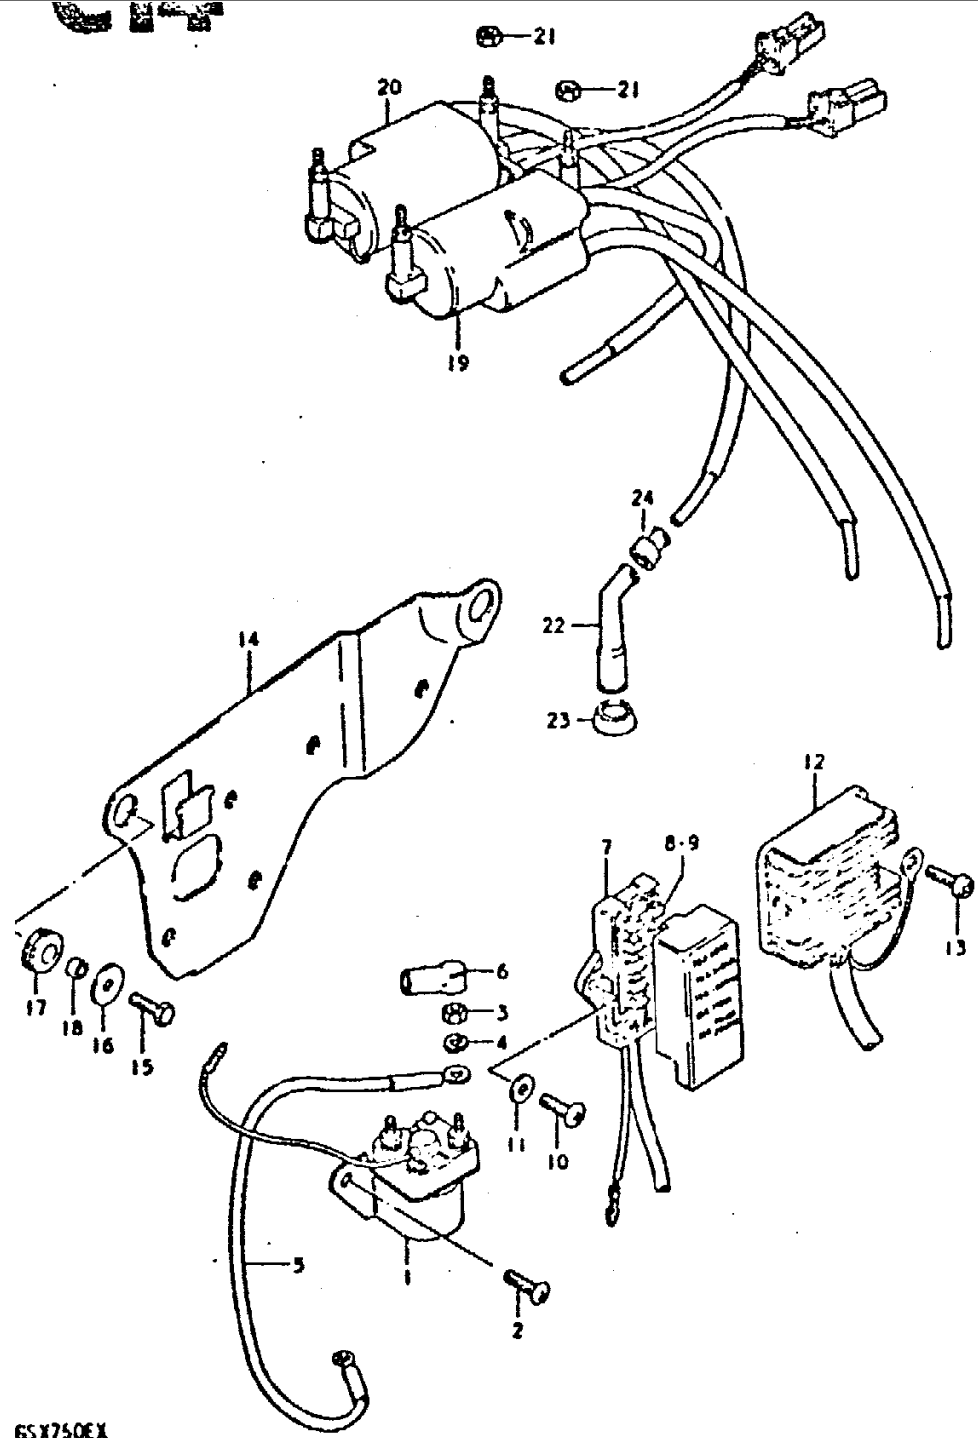

Ref No	Part No	Description
1	31800-37020	Relay, Starting Motor
2	02112-06108	Screw
3	08310-22068	Nut
4	08321-21068	Lock Washer
5	33850-49001	Lead Wire, Starting Motor
6	31861-35100	Cap, Terminal
7	36740-49200	Fuse Case Assy
8	09481-10001	• Fuse (10a)
9	09481-15001	• Fuse (15a)
10	02112-06208	Screw
10	02112-06168	Screw
11	08322-21068	Washer
12	32800-45210	Rectifier, Regulator
13	02112-06128	Screw
14	47410-49200	Plate, Electric Parts Holder
15	01107-06168	Bolt
16	09160-06012	Washer
17	09320-08013	Cushion
18	09180-07005	Spacer
19	33410-49110	Coil, Ignition No. 1
20	33420-49110	Coil, Ignition No. 2
21	08310-11068	Nut
22	33510-45010	Cap, Spark Plug
23	33541-32410	Seal, Spark Plug
24	33542-98000	Seal, Hightension Cord

GSX750EX

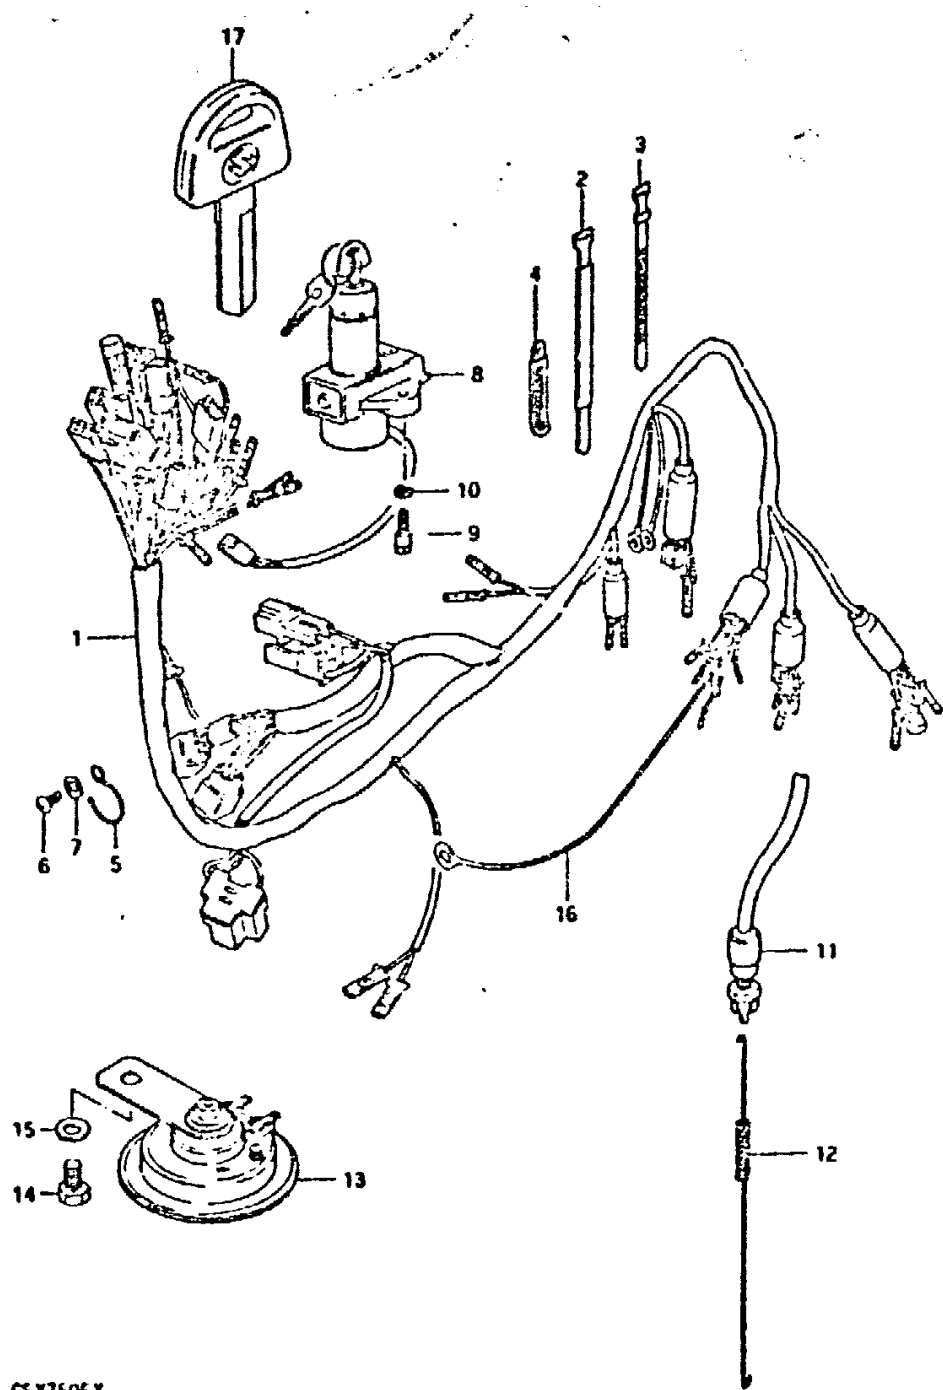



Ref No	Part No	Description
1	36610-45400	Wiring Harness
2	09407-18301	Clamp (l:180)
3	09407-12402	Clamp
4	09404-06414	Clamp (l:80)
4	09404-06401	Clamp (l:50)
4	09404-08401	Clamp (l:80)
5	36619-44000	Clip
6	02112-06128	Screw
7	08322-21068	Washer
8	37100-49200	Switch Assy, Ignition
9	37152-47010	• Bolt
10	08321-21068	• Lock Washer
11	37740-04571	Switch, Brake Lamp
12	09443-06030	Spring
12	09443-06033	Spring
13	38502-47000	Horn
14	01107-08128	Bolt
15	08322-11088	Washer
16	36851-45400	Lead Wire, Pressure Switch
17	37146-47010	Key, Blank

GSX750EX


Ref No	Part No	Description
--------	---------	-------------

1	41100-45400-019	Frame (black)
2	41910-49200-019	Plate, No.1 (black)
3	01107-08658	Bolt
4	08321-21088	Lock Washer
5	41921-49000-019	Plate, No.2 (black)
6	01107-08168	Bolt
7	08321-21088	Lock Washer
8	41940-49000-019	Plate, No.3 (black)
9	01107-08358	Bolt
10	08321-21088	Lock Washer
11	41610-49201	Grip, Frame Handle
12	01107-08168	Bolt
13	08322-11088	Washer
14	41550-49200	Holder, Tool
15	09160-06007	Washer
16	08310-11068	Nut
17	09462-00072	Band

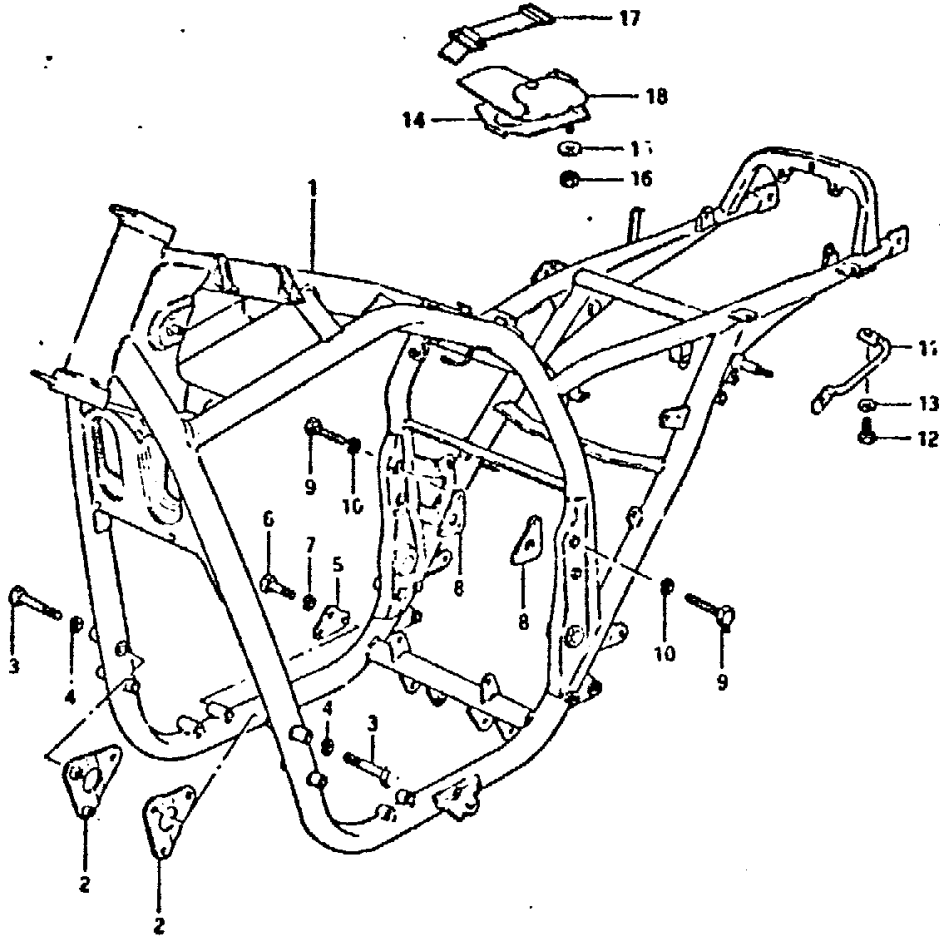

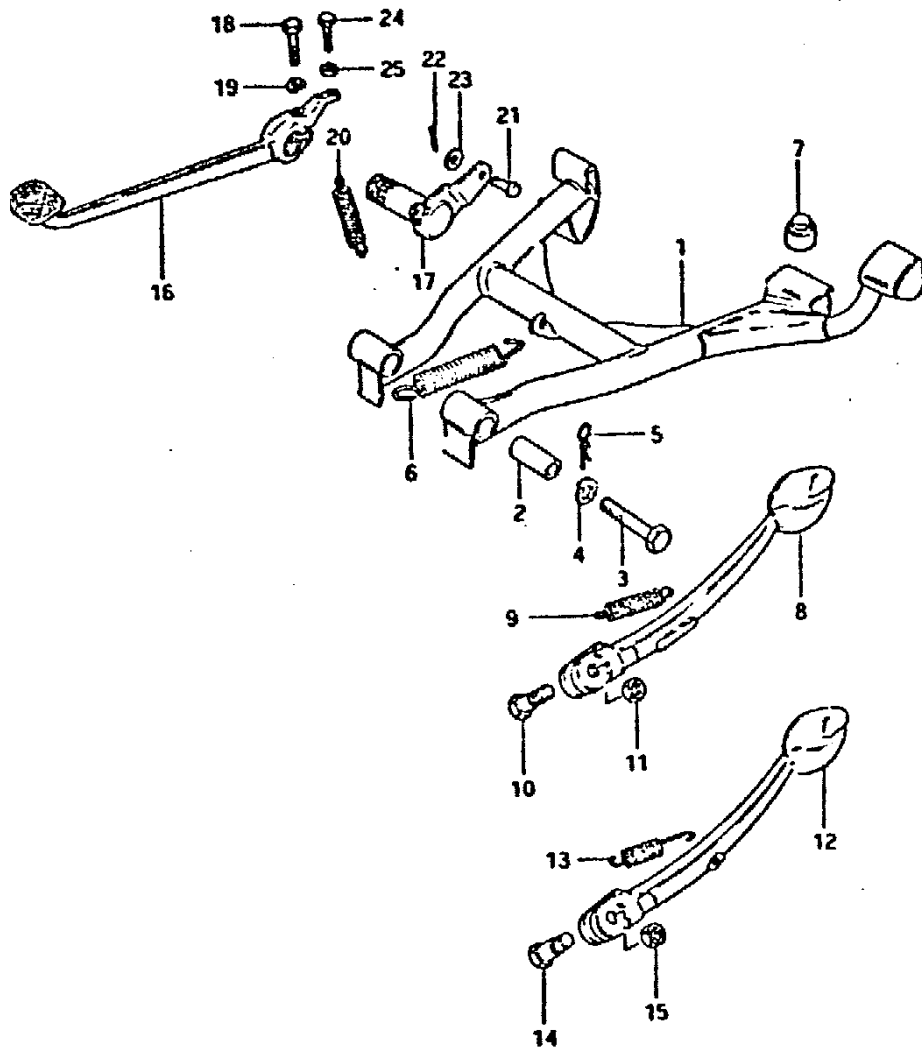


Ref No	Part No	Description
1	42100-49200	Stand, Center
2	09180-10040	Spacer (10.7*15.9*38)
3	09101-10018	Bolt
4	08321-21108	Lock Washer
5	09385-10001	Clip
6	09443-20001	Spring
7	09321-10001	Cushion
8	42311-49200	Stand, Prop
9	09443-17005	Spring
10	09100-10067	Bolt (10*30)
11	08310-22108	Nut
16	43110-49200	Pedal, Brake
17	43120-49210	Arm, Brake Pedal Rod
18	01107-08258	Bolt
19	08321-21088	Lock Washer
20	09443-14013	Spring
21	09200-06029	Pin
22	04111-20158	Cotter Pin
23	08322-21068	Washer
24	01107-06208	Bolt
25	08310-11068	Nut

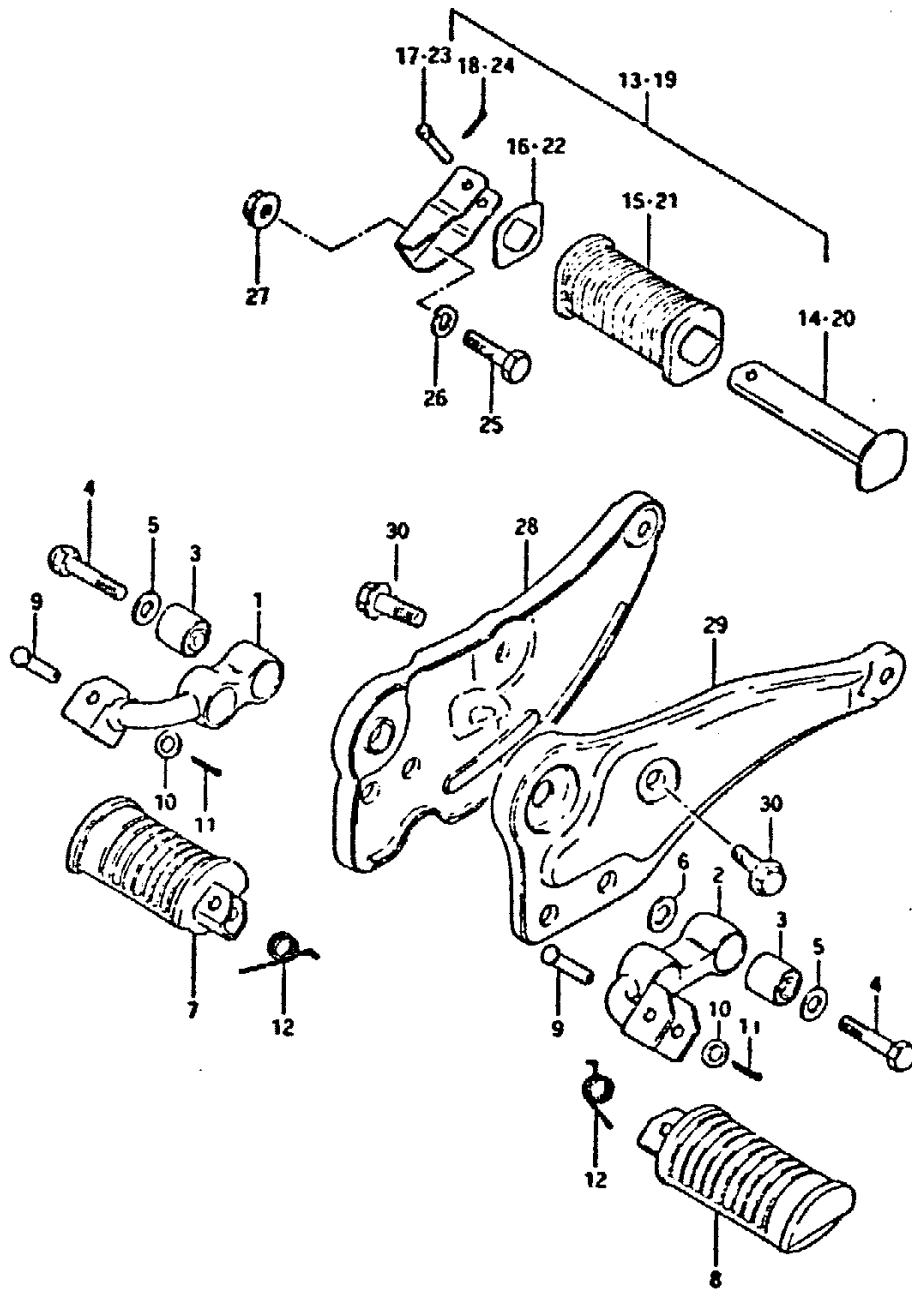


Ref No	Part No	Description
1	43510-49210	Bar, Front Footrest Rh
2	43520-49210	Bar, Front Footrest Lh
3	09319-10008	Bushing
4	09104-10009	Bolt
5	09160-10013	Washer
6	09160-10058	Washer
7	43550-49002	Cover, Rh
8	43560-49002	Cover, Lh
9	09200-08002	Pin
10	08322-11088	Washer
11	04111-20158	Cotter Pin
12	09448-14012	Spring
13	43600-49200	Footrest, Pillion Rh
13	43700-49200	Footrest, Pillion Lh
14	43610-49200	. . Bar, Rh
14	43620-49200	. . Bar, Lh
15	43612-49200	. . Cover
16	43631-49200	. . Washer
17	09200-06010	. . Pin
18	04111-20158	. . Cotter Pin
19	43600-49201	Footrest, Pillion Rh
19	43700-49201	Footrest, Pillion Lh
20	43610-49201	. . Bar, Rh
20	43620-49201	. . Bar, Lh
21	43612-49201	. . Cover
22	43631-49201	. . Washer
23	09200-06010	. . Pin
24	04111-20158	. . Cotter Pin
25	01107-10358	Bolt
26	08321-21108	Lock Washer
27	08316-16108	Nut
28	43810-45400	Bracket, Muffler Rh
29	43820-45400	Bracket, Muffler Lh
30	01527-10207	Bolt


Ref No	Part No	Description
1	44100-45420-08E	Tank, Fuel (black)
2	68110-45420-71P	• . Tape Set
3	44100-45420-07P	Tank, Fuel (red)
4	68110-45420-60T	• . Tape Set
5	44100-45420-04Y	Tank, Fuel (blue)
6	68110-45420-65Y	• . Tape Set
8	68111-45010	Emblem
9	02132-03065	Screw
10	44200-49701	Cap, Filler
11	09329-10007	Cushion, Front
12	09329-01005	Cushion, Center
13	09320-12010	Cushion, Rear No. 1
14	09320-12023	Cushion, Rear No. 2
15	09160-08002	Washer (8.5*29*1.6)
16	09180-08067	Spacer
17	01107-08308	Bolt

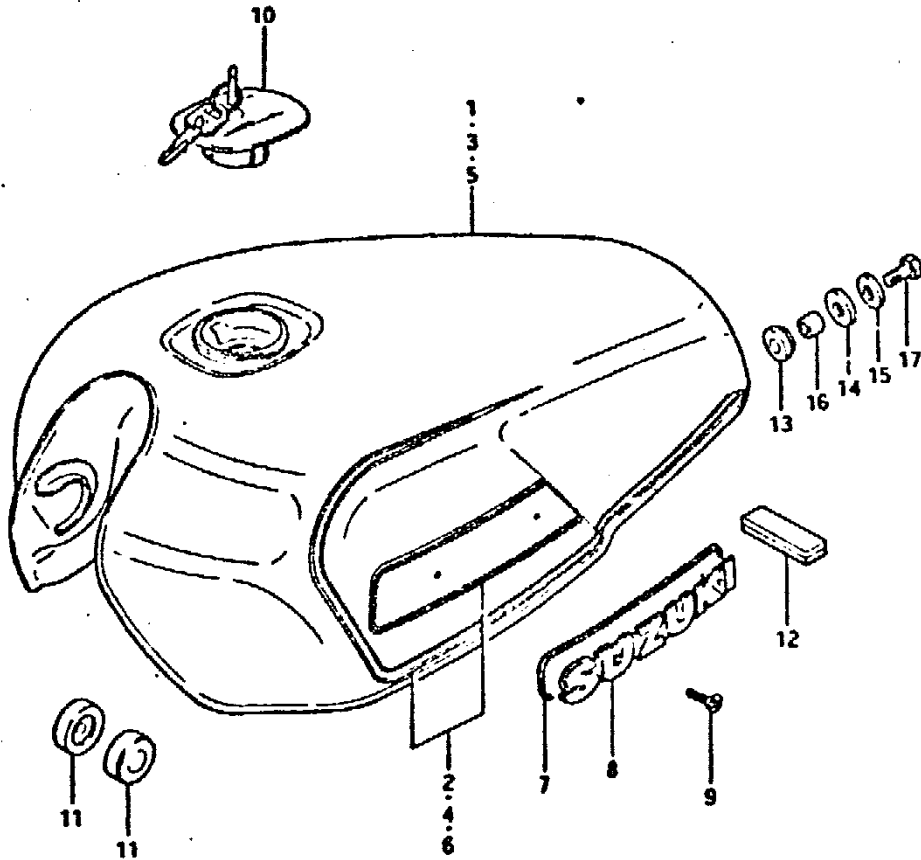


Ref No	Part No	Description
1	44100-45810-08E	Tank, Fuel (black)
2	68110-45450-71L	• . Tape Set
3	44100-45820-07P	Tank, Fuel (red)
4	68110-45450-73K	• . Tape Set
5	44100-45450-04Y	Tank, Fuel (blue)
6	68110-45450-73K	• . Tape Set
7	68111-45010	Emblem
8	02132-03065	Screw
9	44200-49702	Cap, Filler
10	09329-10007	Cushion, Front
11	44542-49200	Cushion, Front
12	09329-01005	Cushion, Center
13	09320-12010	Cushion, Rear No. 1
14	09320-12023	Cushion, Rear No. 2
15	09160-08002	Washer (8.5*29*1.6)
16	09180-08067	Spacer
17	01107-08308	Bolt

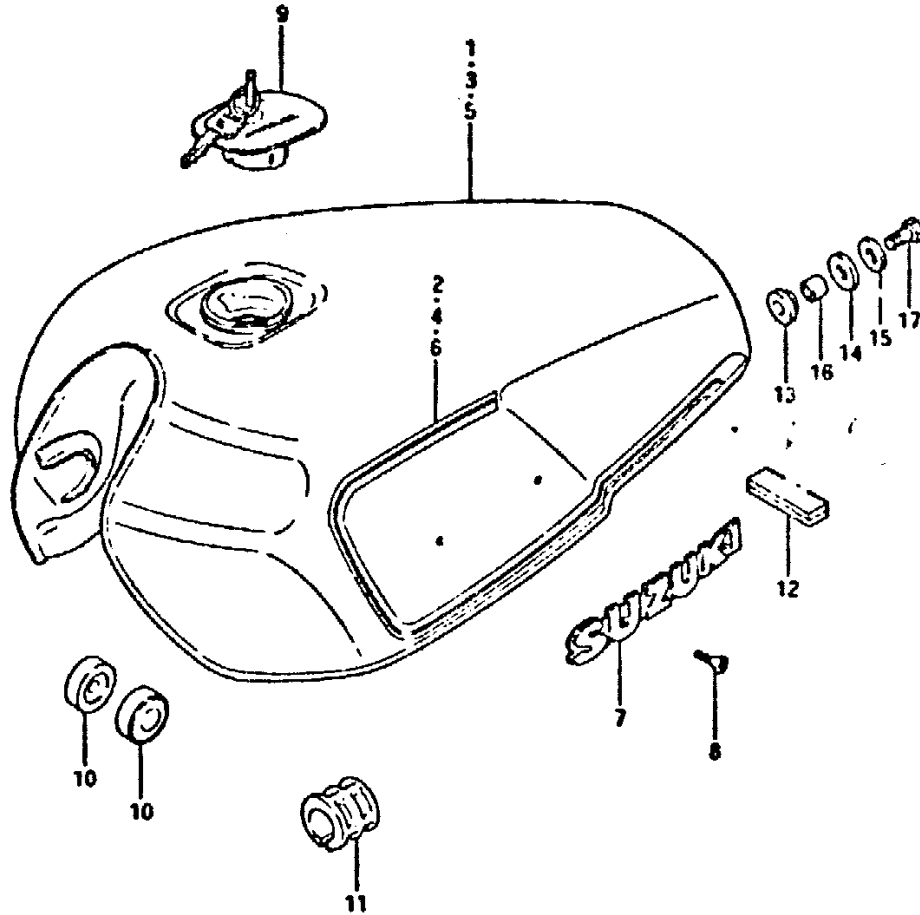



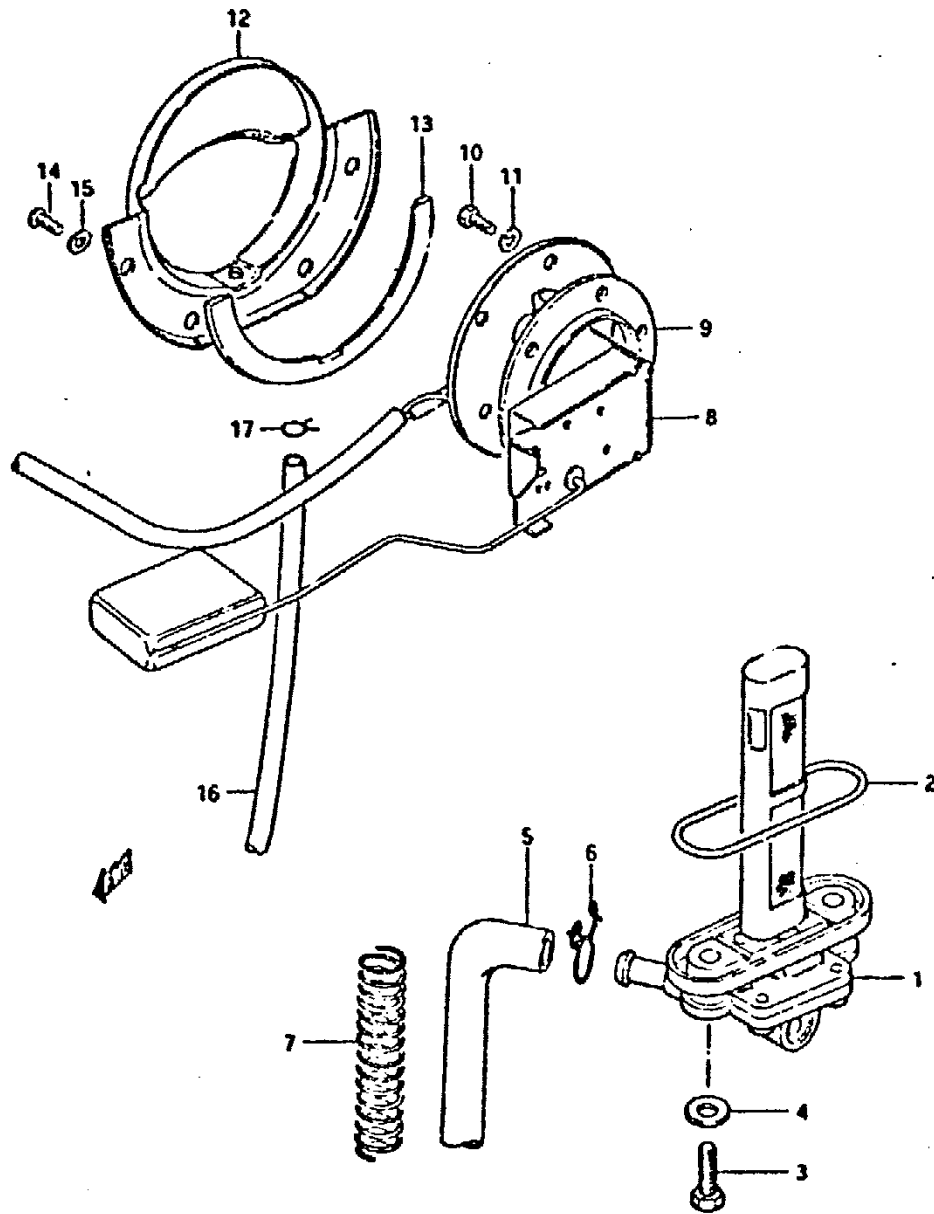



Ref No	Part No	Description
1	44300-47270	Cock Assy, Fuel
2	44348-47270	• O Ring
3	09128-06024	Bolt
4	09168-06010	Gasket
5	09343-07026	Hose, Fuel (l:250@rl:190)
6	09401-10403	Clip
7	09440-13017	Spring
9	34825-45100	• Gasket
10	01104-05108	Bolt
11	08321-21058	Lock Washer
12	34885-49002	Plate, Fuel Drain
13	34888-49000	Gasket
14	02112-05088	Screw
15	08321-21058	Lock Washer
16	09343-05165	Hose
17	09401-08402	Clip

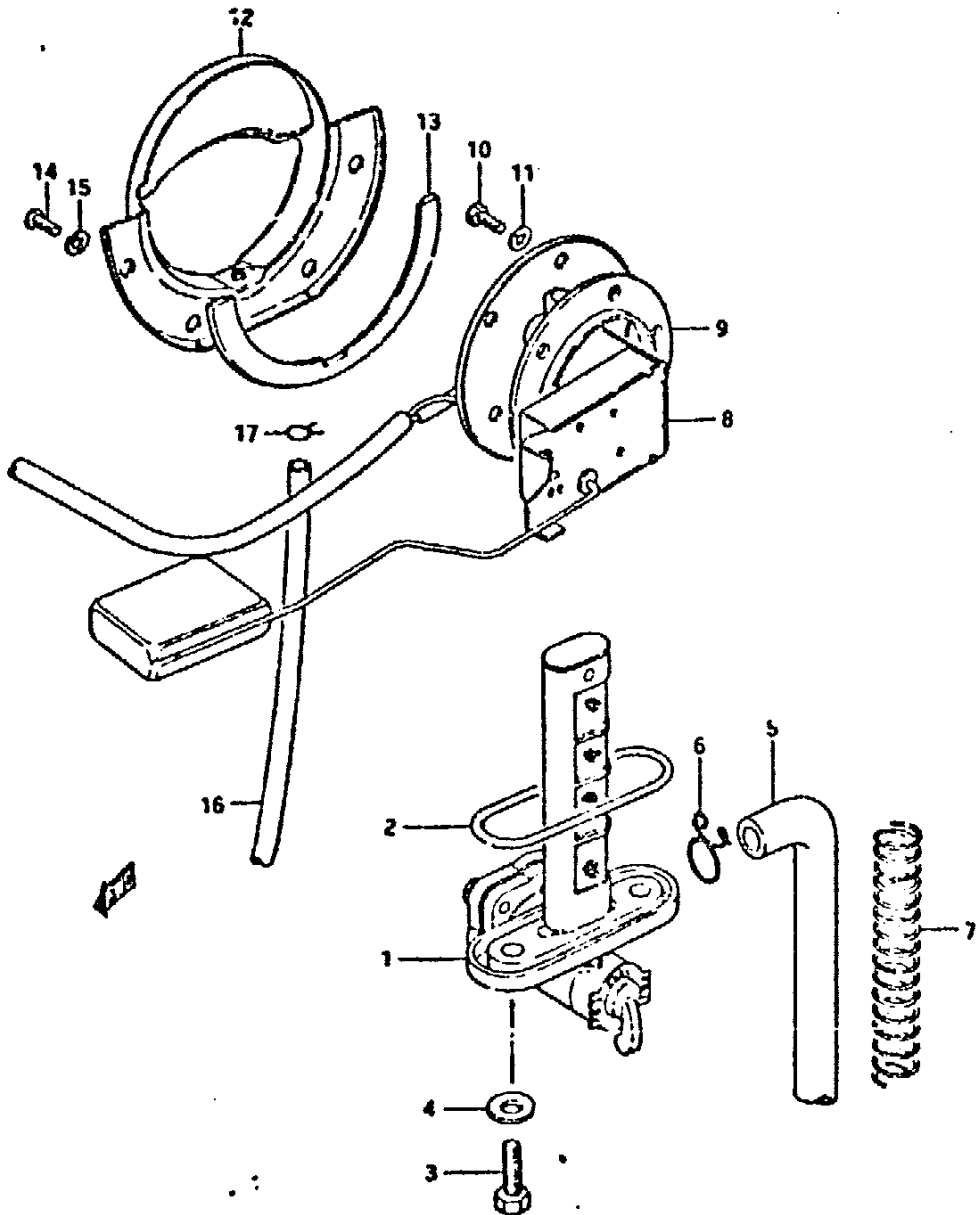

Ref No	Part No	Description
1	44300-34470	Cock Assy, Fuel
2	44348-49170	• O Ring
3	09128-06024	Bolt
4	09168-06010	Gasket
5	09343-07091	Hose, Fuel (l:270)
6	09401-10403	Clip
7	09440-13020	Spring
9	34825-45100	• Gasket
10	01104-05108	Bolt
11	08321-21058	Lock Washer
12	34885-49003	Plate, Fuel Drain
13	34888-49000	Gasket
14	02112-05088	Screw
15	08321-21058	Lock Washer
16	09343-05165	Hose
17	09401-08402	Clip


Ref No	Part No	Description
1	45100-49220-41G	Seat (black)
2	46210-49200	• . Handle, Pillion Rider
3	46212-49000	• . Cushion
4	46213-49000	• . End, Handle
5	01107-08208	• . Bolt
6	08321-21088	• . Lock Washer
7	08322-21088	• . Washer
9	09321-08006	Cushion
10	45210-49201	Striker, Seat Lock
11	08310-22068	Nut
12	08321-21068	Lock Washer
13	08322-21068	Washer
14	45217-49200	Plate
15	95700-35821	Lock Assy, Helmet
16	09106-06005	Bolt
17	08321-21068	Lock Washer

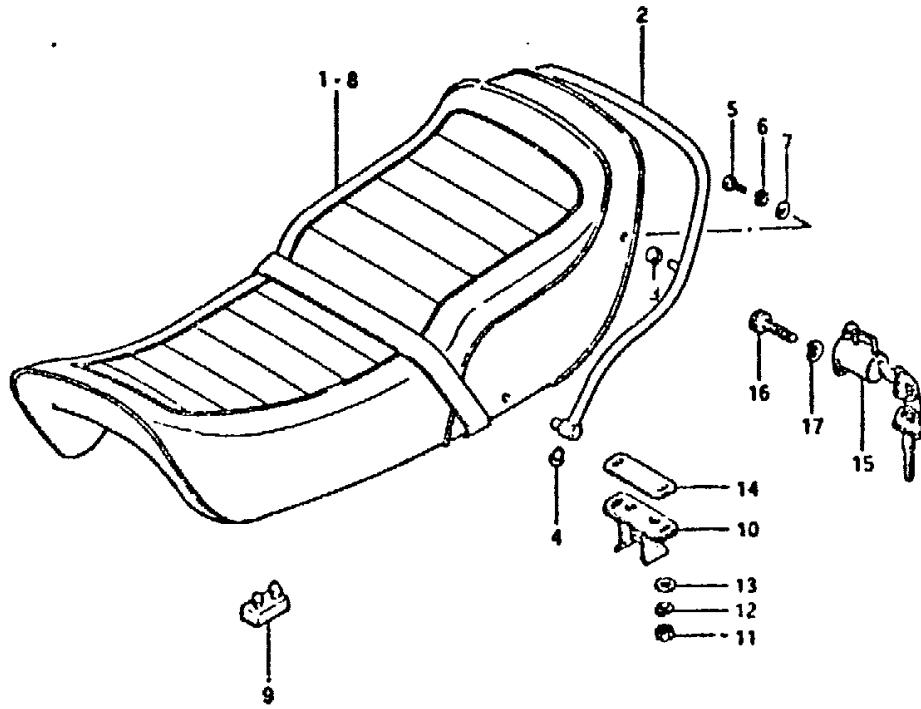

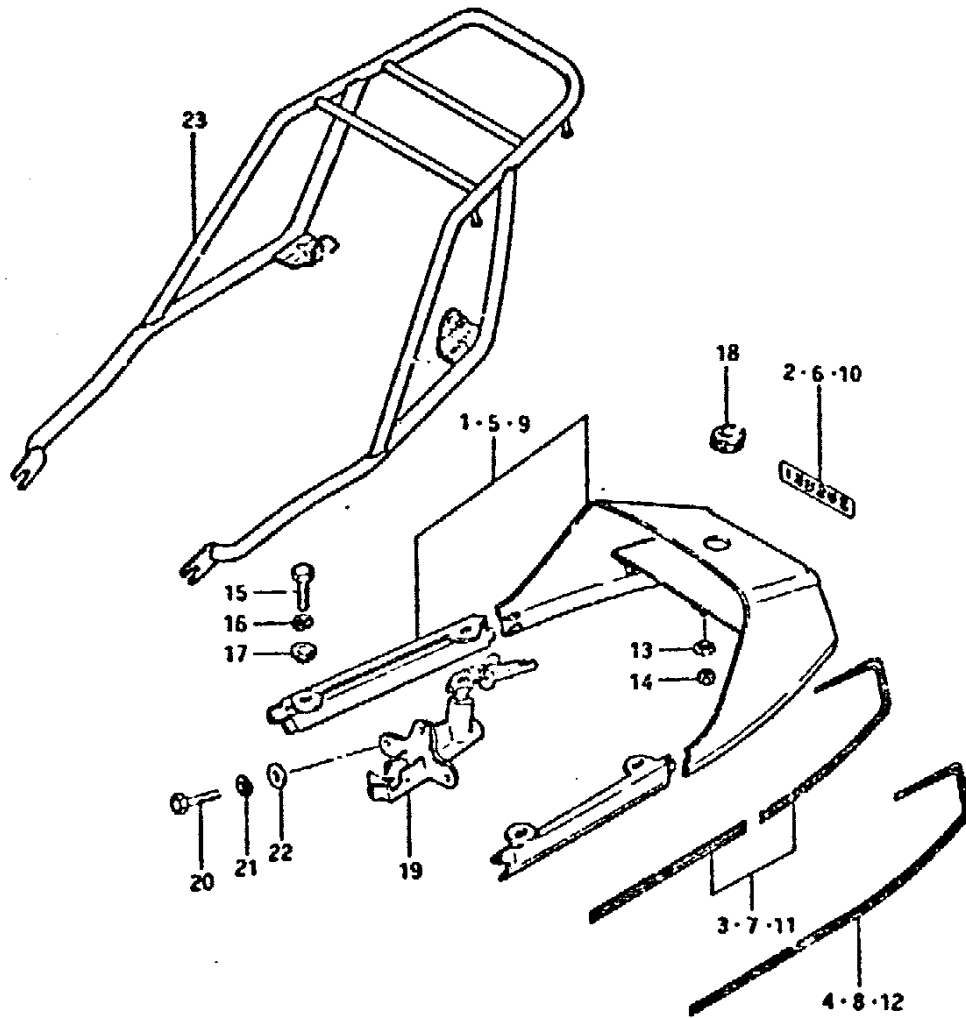


Ref No	Part No	Description
1	45501-49831-08E	Cover Set, Seat Tail (black)
2	68166-49200-998	• Emblem
3	68102-49851-71P	• Tape Set
4	68160-49200-71P	Tape Set
5	45501-49841-07P	Cover Set, Seat Tail (red)
6	68166-49200-998	• Emblem
7	68102-49851-60T	• Tape Set
8	68160-49200-60T	Tape Set
9	45501-49811-04Y	Cover Set, Seat Tail (blue)
10	68166-49200-998	• Emblem
11	68102-49851-65Y	• Tape Set
12	68160-49200-65Y	Tape Set
13	09169-06016	Washer
14	08319-21068	Nut
15	01107-06128	Bolt
16	08321-21068	Lock Washer
17	09169-06016	Washer
18	45522-49200	Grommet
19	95700-49820	Seat Lock Set
20	01107-06128	Bolt
21	08321-21068	Lock Washer
22	08322-11068	Washer
23	46310-45400	Copper, Sports

Ref No	Part No	Description
1	45502-49830-08E	Cover Set, Seat Tail (black)
2	68160-45450-71L	• . Tape Set
3	45502-49840-07P	Cover Set, Seat Tail (red)
4	68160-45450-73K	• . Tape Set
5	45502-49840-04Y	Cover Set, Seat Tail (blue)
6	68160-45450-73K	• . Tape Set
7	68166-49200-998	Emblem
8	09169-06016	Washer
9	08319-21068	Nut
10	45191-49200-08E	Moulding, Seat Rh (black)
10	45191-49200-07P	Moulding, Seat Rh (red)
10	45191-49200-04Y	Moulding, Seat Rh (blue)
11	45192-49200-08E	Moulding, Seat Lh (black)
11	45192-49200-07P	Moulding, Seat Lh (red)
11	45192-49200-04Y	Moulding, Seat Lh (blue)
12	01107-06128	Bolt
13	08321-21068	Lock Washer
14	09169-06016	Washer
15	45522-49200	Grommet
16	95700-49830	Seat Lock Set
17	01107-06128	Bolt
18	08321-21068	Lock Washer
19	08322-11068	Washer
20	46310-45400	Capper, Sports

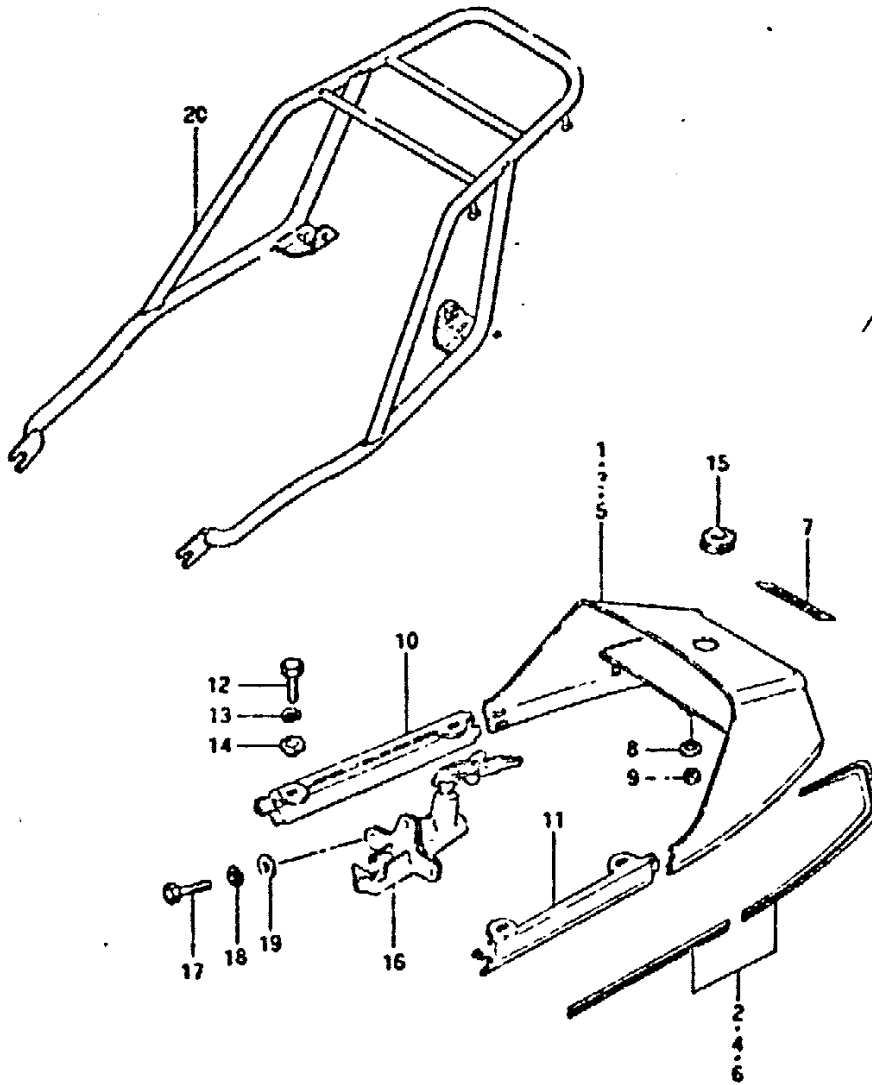


Ref No	Part No	Description
--------	---------	-------------


1	47111-49200-08E	Cover, Frame Rh (black)
2	68136-45420-71P	Tape, Rh
3	47111-49200-07P	Cover, Frame Rh (red)
4	68136-45420-60T	Tape, Rh
5	47111-49200-04Y	Cover, Frame Rh (blue)
6	68136-45420-65Y	Tape, Rh
7	47211-49200-08E	Cover, Frame Lh (black)
8	68146-45420-71P	Tape, Lh
9	47211-49200-07P	Cover, Frame Lh (red)
10	68146-45420-60T	Tape, Lh
11	47211-49200-04Y	Cover, Frame Lh (blue)
12	68146-45420-65Y	Tape, Lh
13	09320-08018	Cushion
14	47117-02400	Cushion
15	68131-45410	Emblem
16	09148-03002	Nut

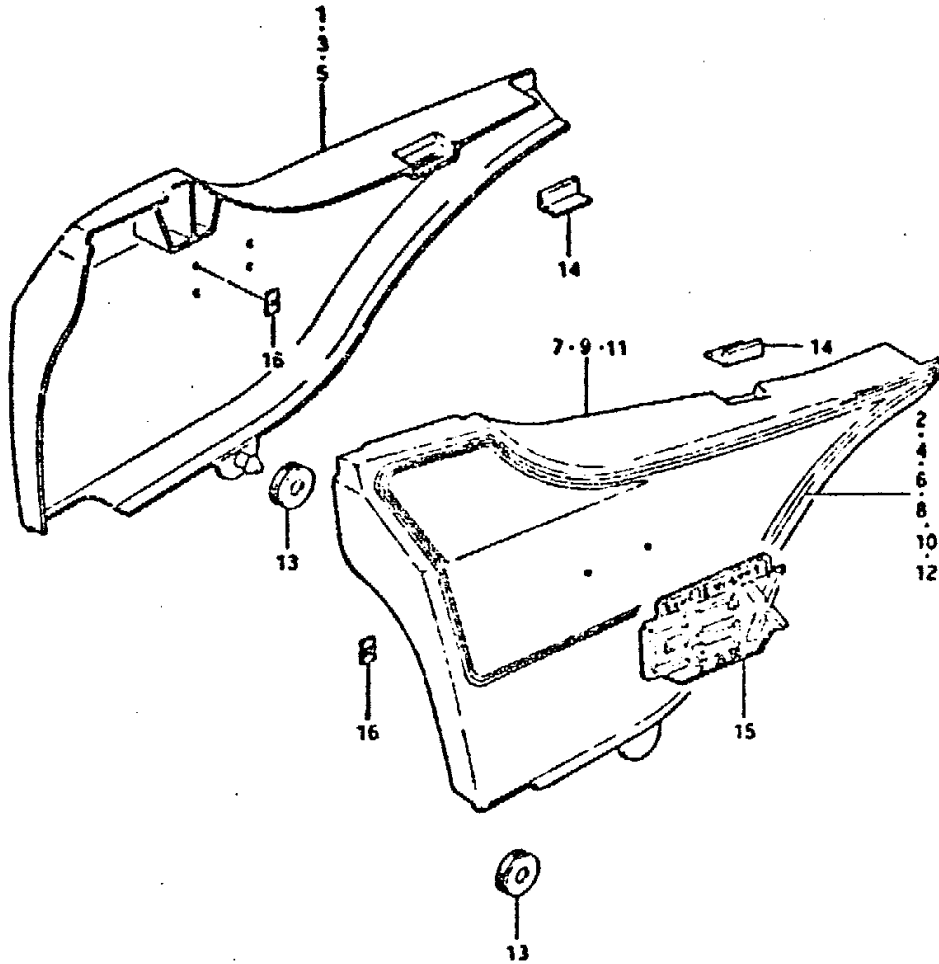

Ref No	Part No	Description
--------	---------	-------------


1	47100-45880-08E	Cover, Frame Rh (black)
2	68130-45440-71L	• . Tape, Rh
3	47100-45890-07P	Cover, Frame Rh (red)
4	68130-45440-73K	• . Tape, Rh
5	47110-45430-04Y	Cover, Frame Rh (blue)
6	68130-45440-73K	• . Tape, Rh
7	47200-45880-08E	Cover, Frame Lh (black)
8	68140-45440-71L	• . Tape, Lh
9	47200-45890-07P	Cover, Frame Lh (red)
10	68140-45440-73K	• . Tape, Lh
11	47210-45430-04Y	Cover, Frame Lh (blue)
12	68140-45440-73K	• . Tape, Lh
13	09320-08018	Cushion
14	47117-02400	Cushion
15	68131-45410	Emblem
16	09148-03002	Nut
17	47113-49200	Cushion

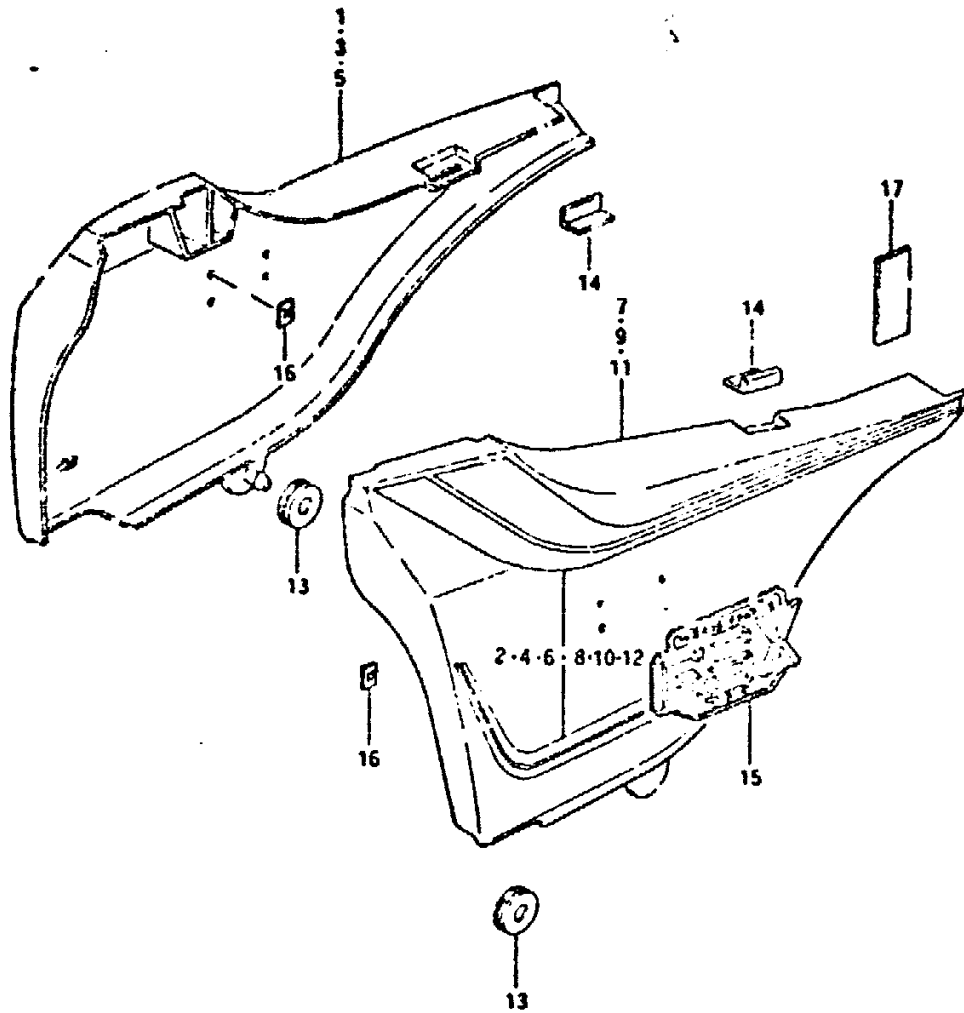

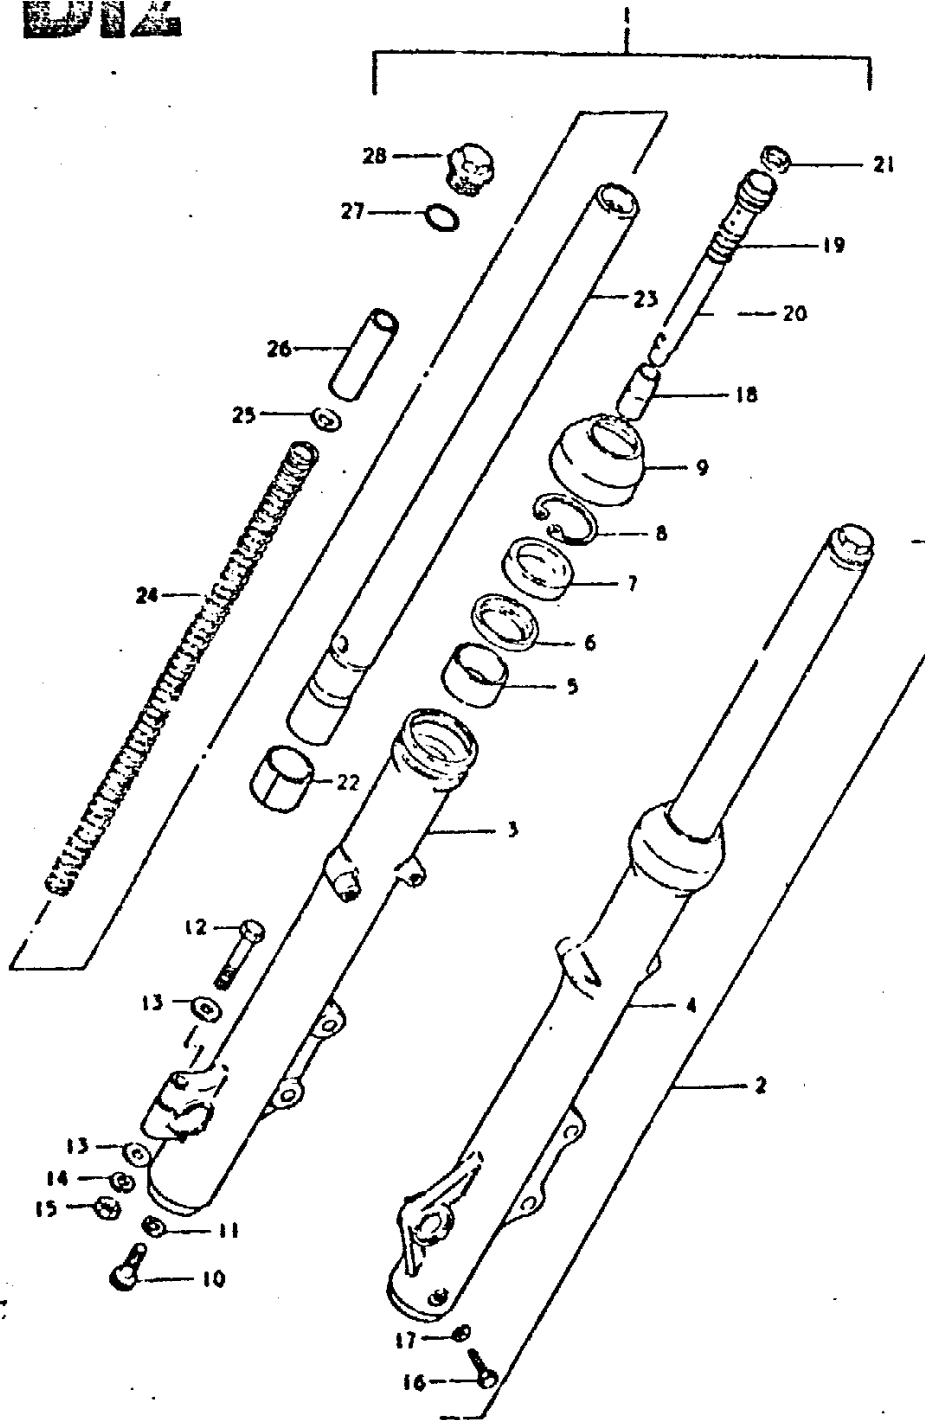

Ref No	Part No	Description
1	51103-45410	Damper Assy, Rh
2	51104-45410	Damper Assy, Lh
3	51130-45400	• Outer Tube, Rh
4	51140-45400	• Outer Tube, Lh
5	51152-45400	• Guide, Tube
6	51168-45031	• Spacer
7	51153-45030	• Oil Seal
8	51156-31231	• Ring, Stopper
9	51571-31232	• Dust Seal
10	51147-48130	• Bolt
11	51148-31030	• Gasket
12	01107-08508	• Bolt
13	08322-21088	• Washer
14	08321-21088	• Lock Washer
15	08310-12088	• Nut
16	09100-06011	• Bolt
17	51183-31030	• Gasket
18	51195-45030	• Piece, Oil Lock
19	51177-45030	• Spring
20	51146-45410	• Cylinder
21	51196-21230	• Ring, Piston
22	51121-45400	• Slide Metal
23	51110-45400	• Inner Tube
24	51171-45410	• Spring (l:557.8)
24	51171-45730	• Spring (l:513.4)
25	51192-47200	• Guide, Spring
26	51176-45410	• Spacer (l:50)
26	51176-45411	• Spacer (l:74.4)
27	51117-31030	• O Ring
28	51351-31030	• Bolt




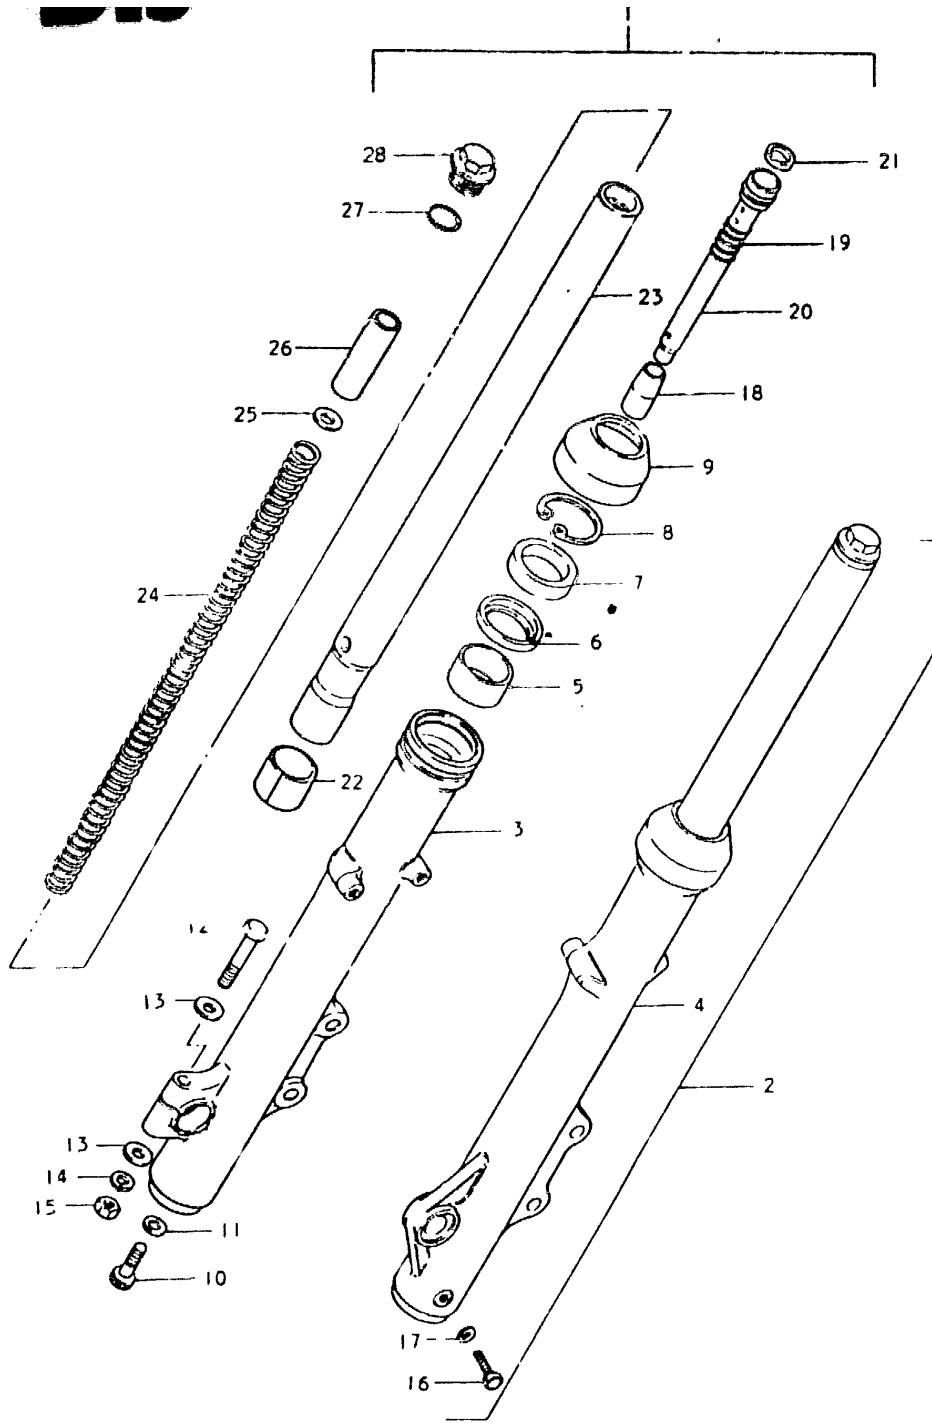


Ref No	Part No	Description
1	51103-45411	Damper Assy, Rh
2	51104-45411	Damper Assy, Lh
3	51130-45400	• Outer Tube, Rh
4	51140-45400	• Outer Tube, Lh
5	51152-45400	• Guide, Tube
6	51168-45031	• Spacer
7	51153-45030	• Oil Seal
8	51156-31231	• Ring, Stopper
9	51571-31232	• Dust Seal
10	51147-48130	• Bolt
11	51148-31030	• Gasket
12	01107-08508	• Bolt
13	08322-21088	• Washer
14	08321-21088	• Lock Washer
15	08310-12088	• Nut
16	09100-06011	• Bolt
17	51183-31030	• Gasket
18	51195-45030	• Piece, Oil Lock
19	51177-45030	• Spring
20	51146-45411	• Cylinder
21	51196-31230	• Ring, Piston
22	51121-45400	• Slide Metal
23	51110-45400	• Inner Tube
24	51171-45411	• Spring (l:557.8)
25	51192-47200	• Guide, Spring
26	51176-45411	• Spacer (l:74.4)
27	51117-31030	• O Ring
28	51351-31030	• Bolt


Ref No Part No Description

1	51103-45450	Damper Assy, Rh
2	51104-45450	Damper Assy, Lh
3	51130-45440	• Outer Tube, Rh
4	51140-45440	• Outer Tube, Lh
5	51152-45400	• Guide, Tube
6	51168-45031	• Spacer
7	51153-34200	• Oil Seal
8	51158-45440	• Ring, Backup
9	51156-45440	• Ring, Stopper
10	51571-34200	• Dust Seal
11	51147-48130	• Bolt
12	51148-31030	• Gasket
13	01107-08508	• Bolt
14	08322-21088	• Washer
15	08321-21088	• Lock Washer
16	08310-12088	• Nut
17	09100-06011	• Bolt
18	51183-31030	• Gasket
19	51195-45030	• Piece, Oil Lock
20	51146-45450	• Cylinder
21	51177-45030	• Spring
22	51196-31230	• Ring, Piston
23	51121-45400	• Guide, Bush
24	51110-45450	• Inner, Tube
25	51184-45450	• Spring B
26	51192-47200	• Seat, Spring
27	51171-45450	• Spring A
28	51117-31030	• O Ring
29	51172-45450	• Seat, Spring
30	51351-45450	• Bolt
31	51185-45450	• Adjuster, Spring
32	51189-45450	• Cap

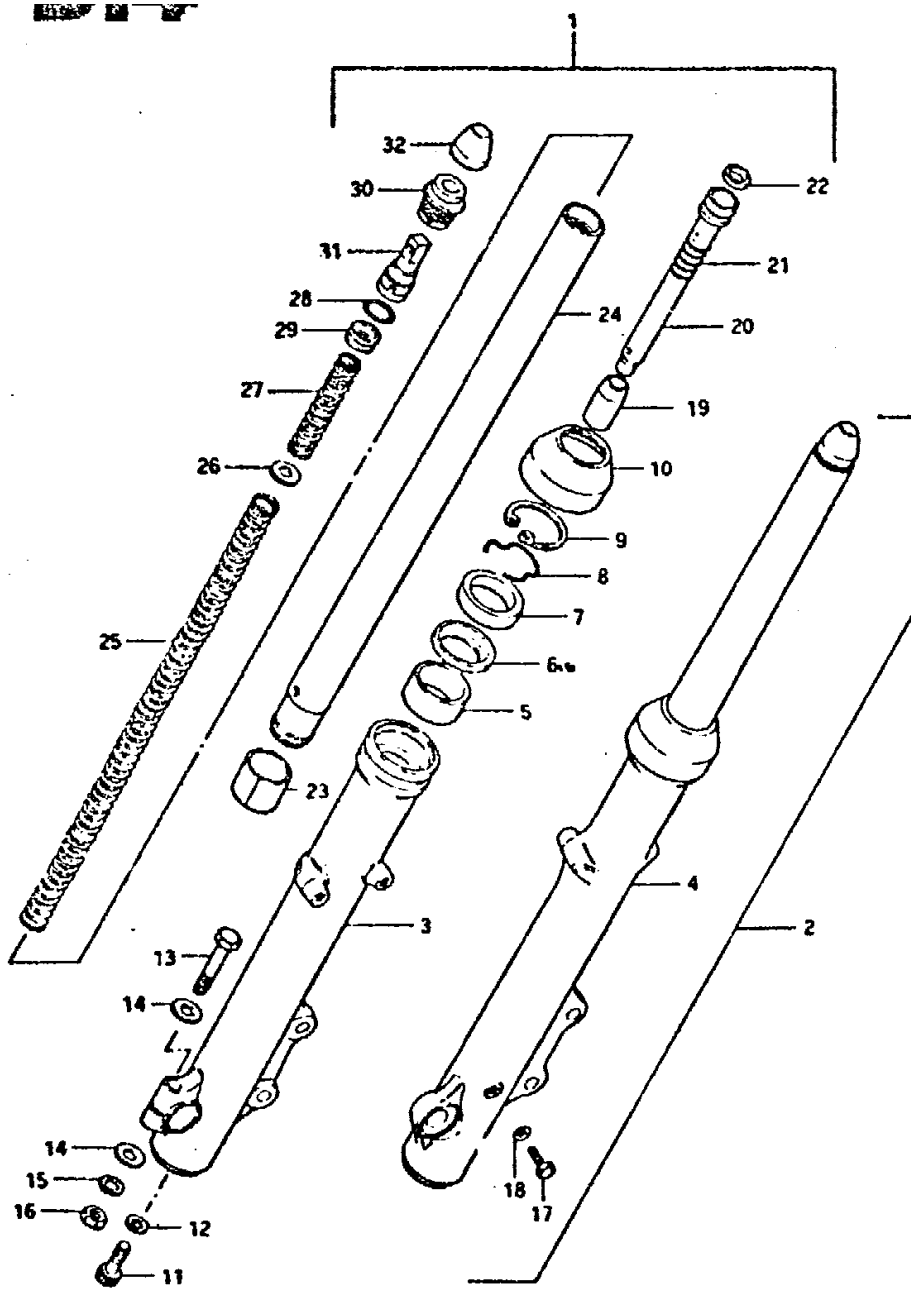



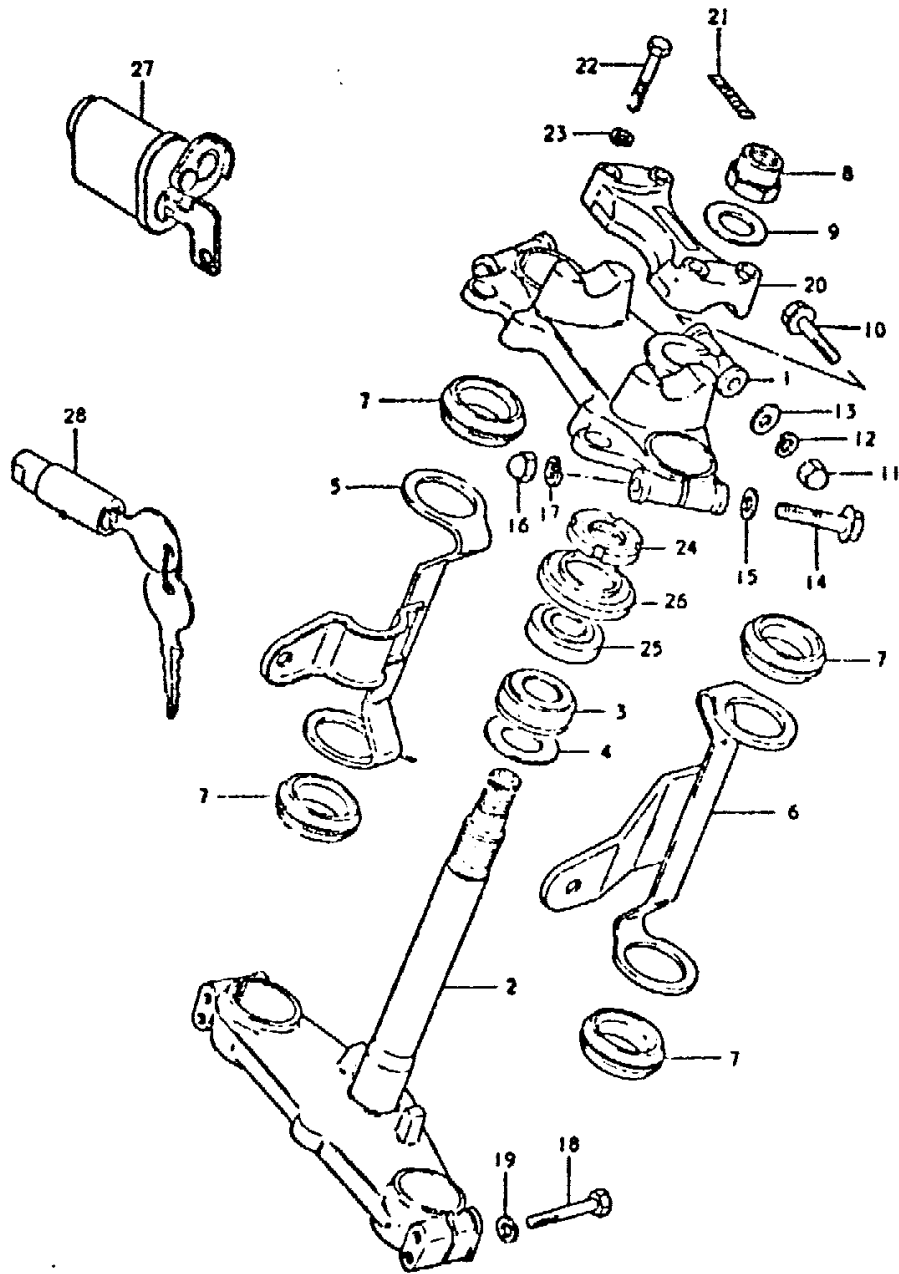


Ref No	Part No	Description
1	51311-47200-291	Stem Head, Steering
2	51400-45841	Stem, Steering
3	09265-30005	• Bearing, Lower
4	08211-30402	• Washer
5	51530-45400-291	Bracket, Headlamp Rh
6	51540-45400-291	Bracket, Headlamp Lh
7	51553-47000	Cushion
8	51353-45000	Nut
9	51356-31700	Washer
10	01517-08508	Bolt
11	08313-11085	Nut
12	08321-21085	Lock Washer
13	08322-11088	Washer
14	01107-10558	Bolt
15	08322-11108	Washer
16	08313-11108	Nut
17	08321-31108	Lock Washer
18	01107-08458	Bolt
19	08321-31088	Lock Washer
20	56211-45400-291	Clamp, Handlebar Upper
21	56212-45400	Emblem
22	01204-08357	Bolt
23	08321-21088	Lock Washer
24	51631-28000	Nut, Steering Stem
25	09265-25008	Bearing
26	51643-49001	Dust Seal

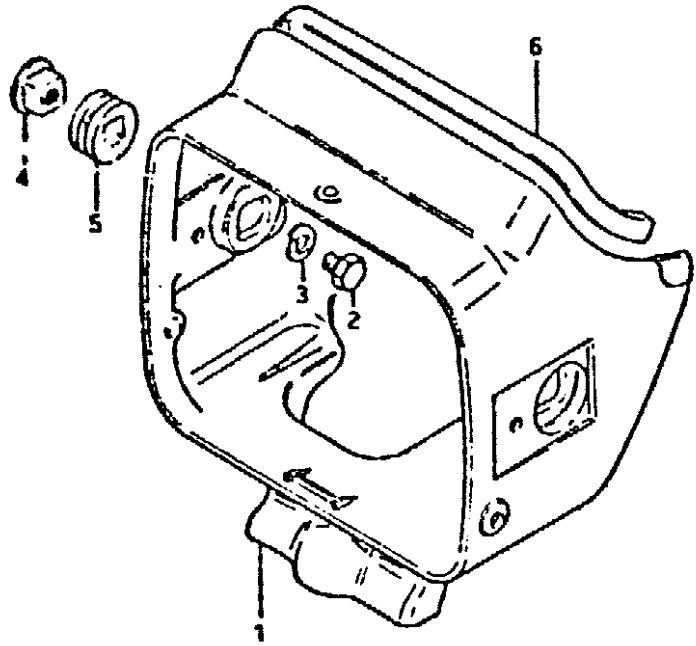


Ref No	Part No	Description
1	51811-49200-04Y	Housing, Headlamp
1	51811-49200-07P	Housing, Headlamp
1	51811-49200-08E	Housing, Headlamp
2	09100-08067	Bolt
3	08321-21088	Lock Washer
4	51821-29001	Spacer
5	51827-49200	Cushion
6	51843-49200	Moulding
7	53110-45420-07P	Fender, Front
7	53110-45420-08E	Fender, Front
7	53110-45420-04Y	Fender, Front
8	01107-08168	Bolt
9	08321-21088	Lock Washer
10	58621-21203	Guide, Cable

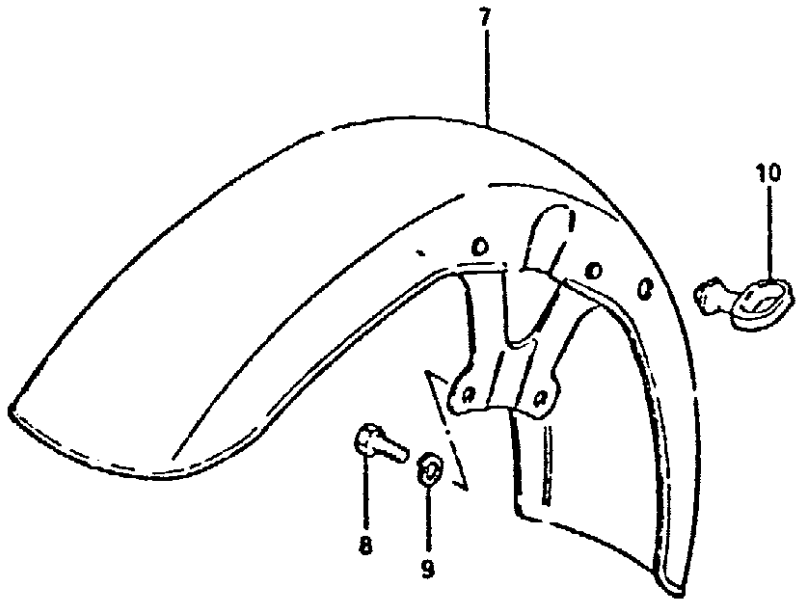

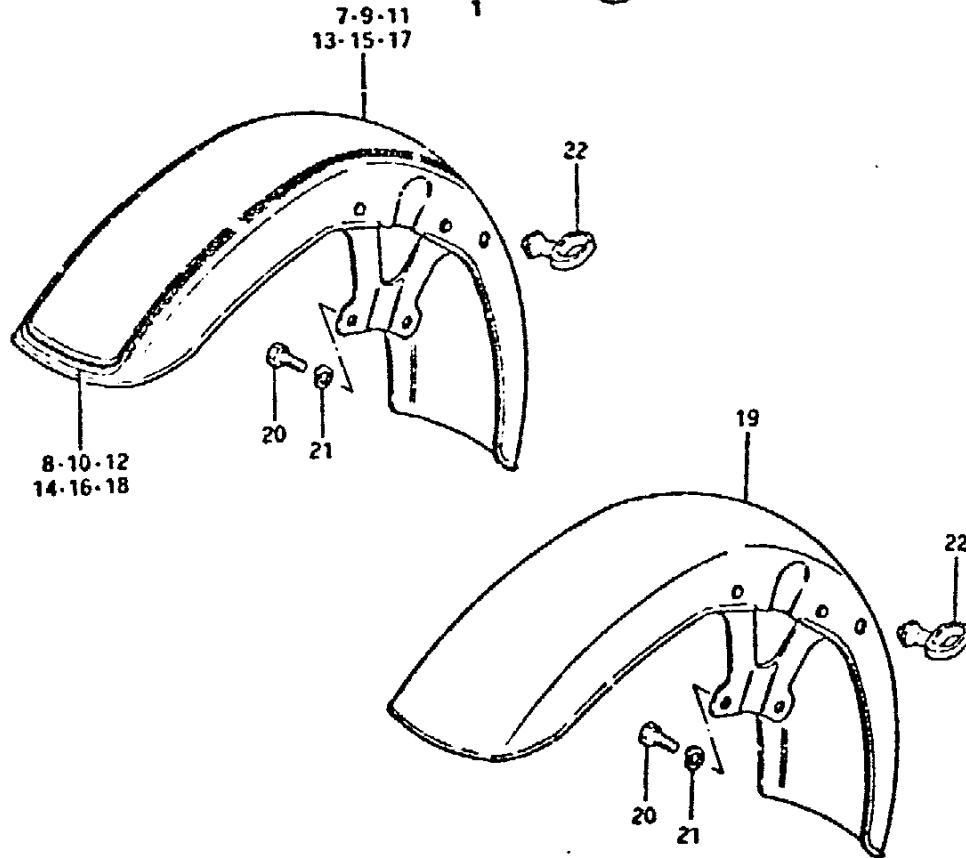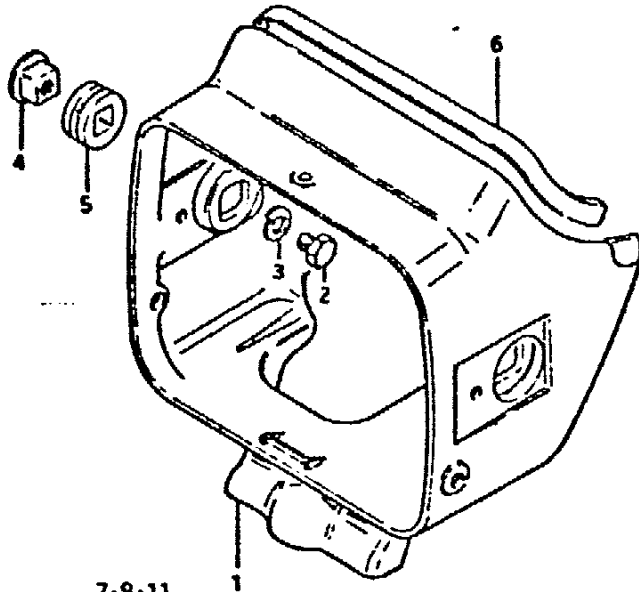


Ref No	Part No	Description
1	51811-49201-04Y	Housing, Headlamp
1	51811-49201-07P	Housing, Headlamp
1	51811-49201-08E	Housing, Headlamp
2	09100-08067	Bolt
3	08321-21088	Lock Washer
4	51821-29001	Spacer
5	51827-49200	Cushion
6	51843-49201	Moulding
7	53100-45830-04Y	Fender, Front
8	68150-49211-76Y	• . Tape
9	53100-45840-07P	Fender, Front
10	68150-49211-69K	• . Tape
11	53100-45830-08E	Fender, Front
12	68150-49211-76Y	• . Tape
20	01107-08168	Bolt
21	08321-21088	Lock Washer
22	58621-21203	Guide, Cable

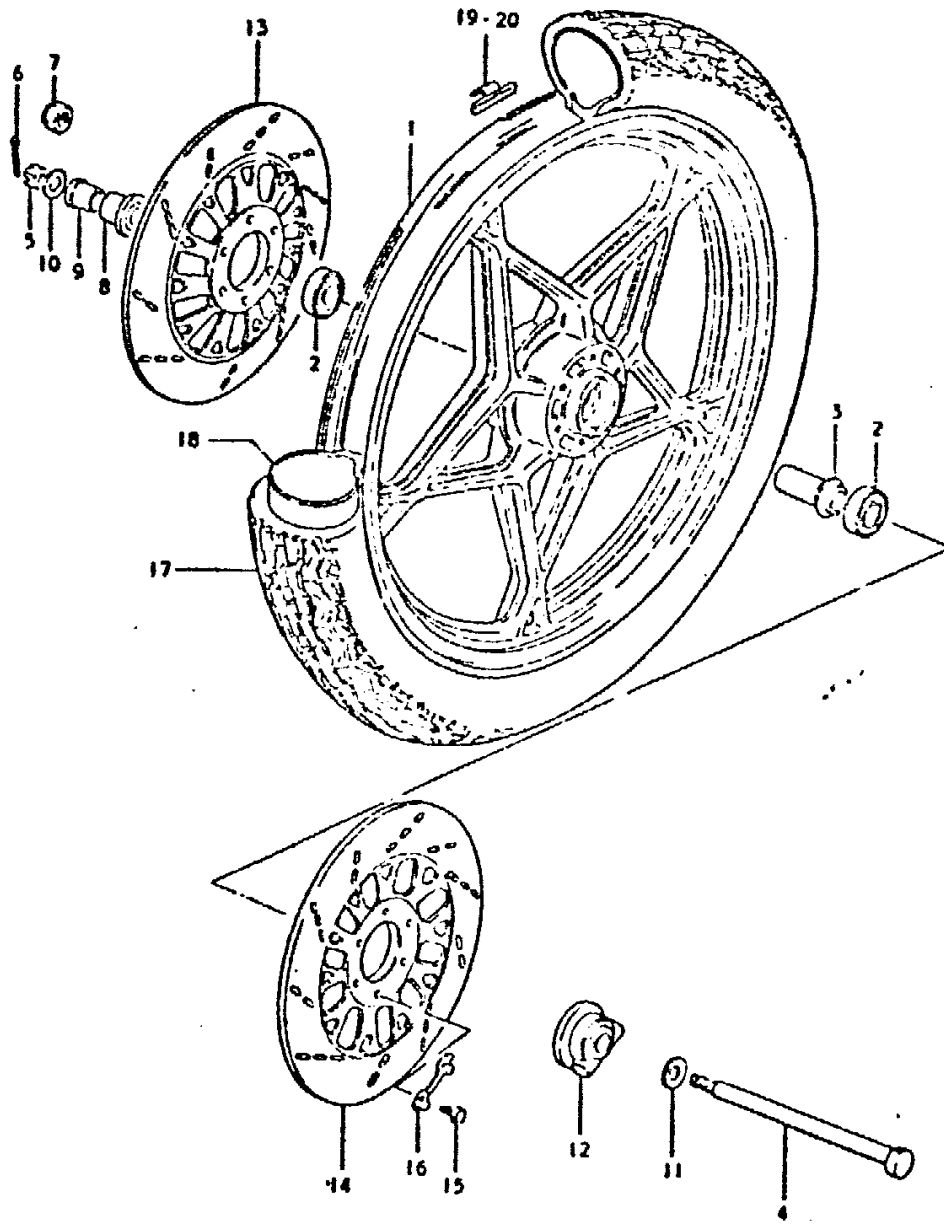


Ref No	Part No	Description
1	54111-47604	Wheel, Front (1.85*19)
2	08123-63027	Bearing
3	54730-18400	Spacer
4	54711-49000	Axle, Front
5	08314-31128	Nut
6	04111-30308	Cotter Pin
8	54740-18402	Spacer, Bearing Rh
9	54741-49101	Spacer, Front Axle
10	08322-21128	Washer
11	09160-15002	Washer, Lh
12	54600-49100	Box, Speedometer Gear
13	59211-45250	Disk, Front Brake Rh
14	59221-45250	Disk, Front Brake Lh
15	09100-08140	Bolt
16	09169-08016	Washer
17	55100-45031	Tire, Front (3.25h19)
17	55100-47615	Tire, Front (3.25h19)
18	55200-15010	Tube, Inner (3.50-19)
19	55411-47001	Balancer (20g)
20	55412-47001	Balancer (30g)

Ref No	Part No	Description
--------	---------	-------------

1	54111-47001	Hub, Front
2	08123-63027	Bearing
3	54730-18400	Spacer
4	54711-49000	Axle, Front
5	08314-31128	Nut
6	04111-30308	Cotter Pin
8	54740-18402	Spacer, Bearing Rh
9	54741-49101	Spacer, Front Axle
10	08322-21128	Washer
11	09160-15002	Washer, Lh
12	54600-49100	Box, Speedometer Gear
13	59211-45250	Disk, Front Brake Rh
14	59221-45250	Disk, Front Brake Lh
15	09100-08140	Bolt
16	09169-08016	Washer
17	55100-45031	Tire, Front (3.25h19)
17	55100-47615	Tire, Front (3.25h19)
18	55200-15010	Tube, Inner (3.50-19)
19	55261-15010	Protector
20	55311-34020	Rim, Front Wheel (1.85*19)
21	55320-34805	Spork Set, Front
22	55411-11000	Balancer (20g)
23	55412-11000	Balancer (30g)

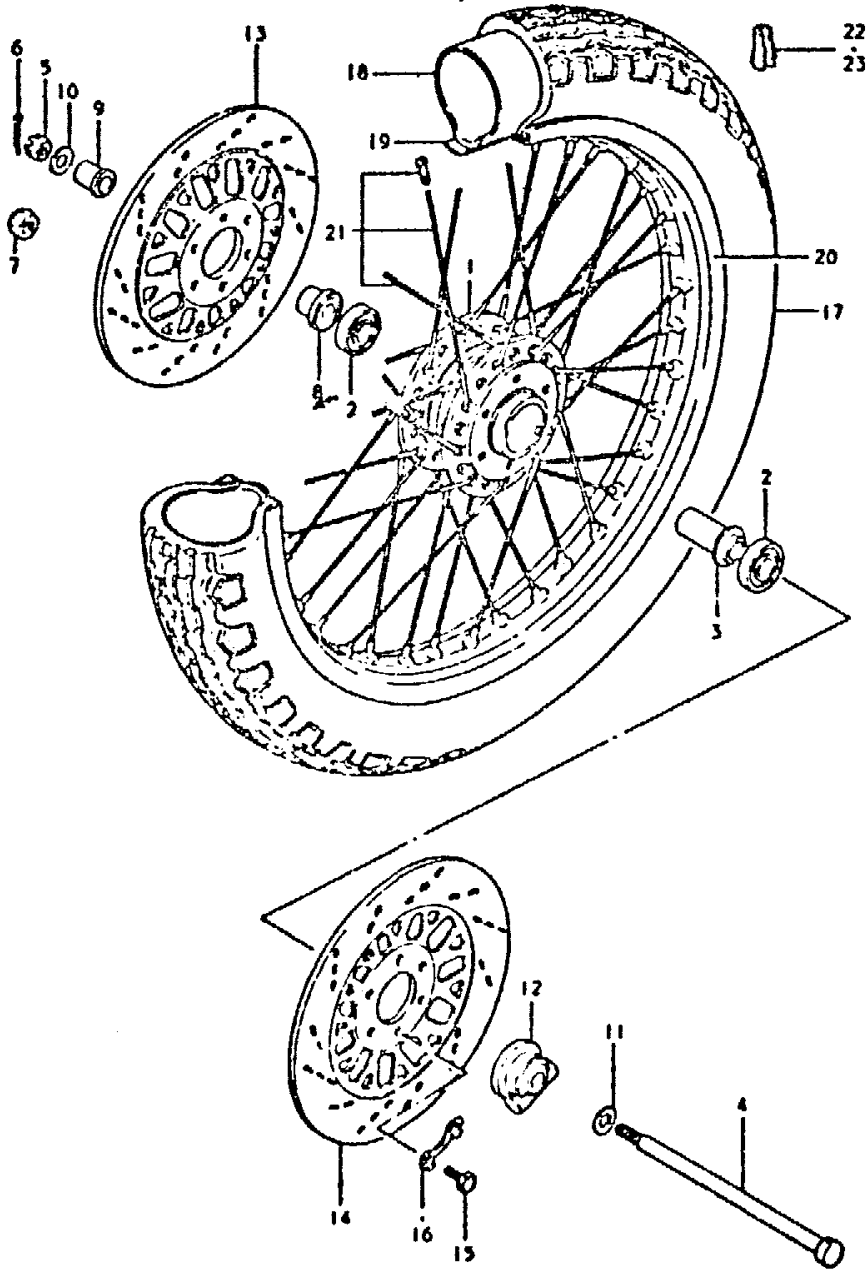

.X750EX


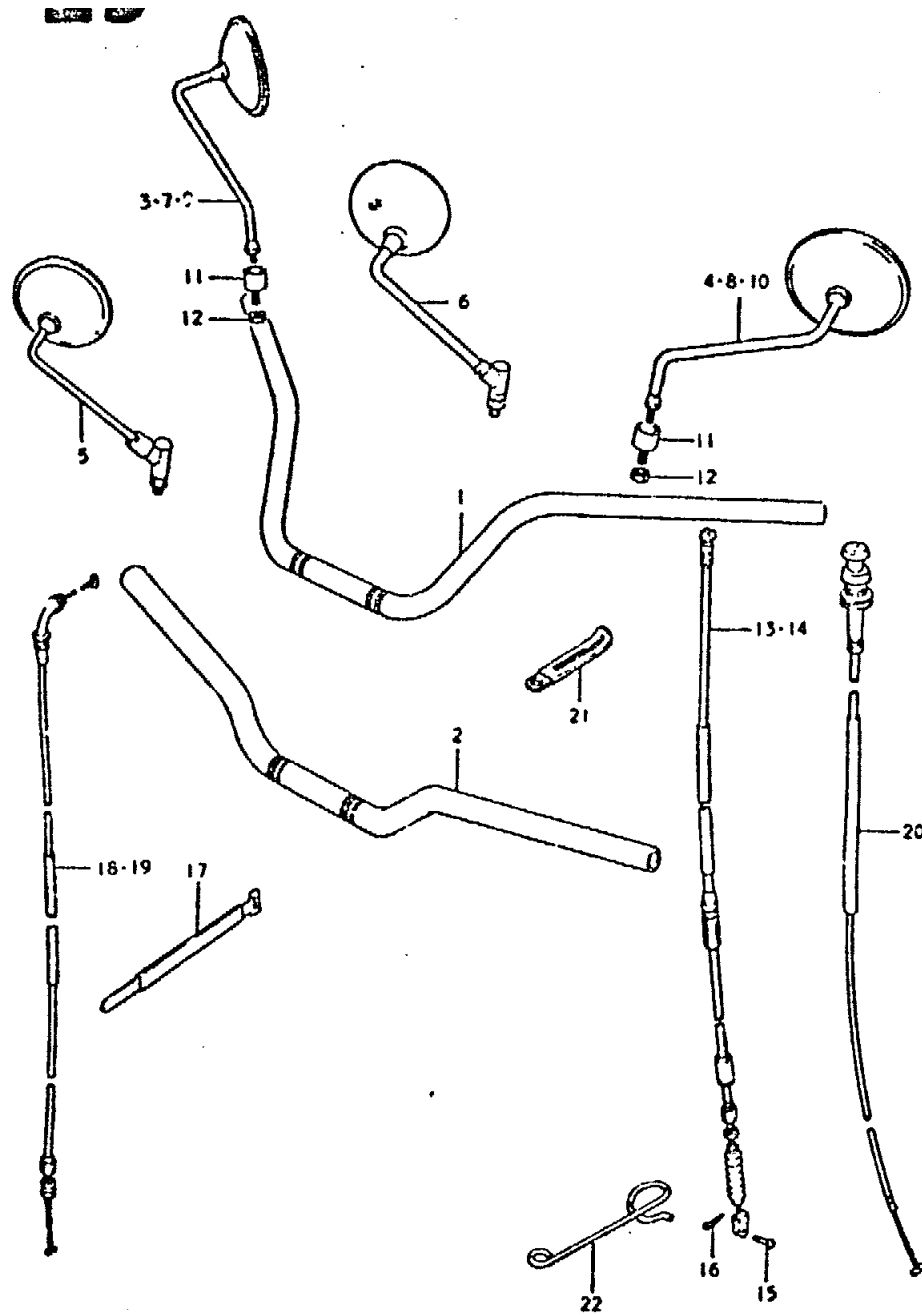


Ref No	Part No	Description
1	56110-45410	Handlebar (neutral Type)
2	56110-49150	Handlebar (flat Type)
5	56500-45650	Mirror, Rear View
11	56700-31001	Cushion, Rear View Mirror
12	08310-22108	Nut
13	58200-49001	Cable, Clutch (neutral Type)
14	58200-49011	Cable, Clutch (flat Type)
15	09200-06011	Pin
16	04111-20158	Cotter Pin
17	09407-18301	Clamp (l:180)
18	58300-45400	Cable, Throttle (neutral Type)
19	58300-44100	Cable, Throttle (flat Type)
20	58400-47000	Cable, Starter
21	09404-06403	Clamp
22	58626-45100	Guide, Clutch Cable


GSX750EX




Ref No	Part No	Description
1	57110-44011	Grip, Throttle
2	57300-49101	Lever Assy Brake
3	57420-49101	• . Lever, Brake
4	57431-18621	• . Bolt
5	08319-21068	• . Nut
6	37200-45210	Switch Assy, Handle Rh
7	02112-05258	• . Screw
8	02112-05358	• . Screw
20	09407-12402	Band (l:120)

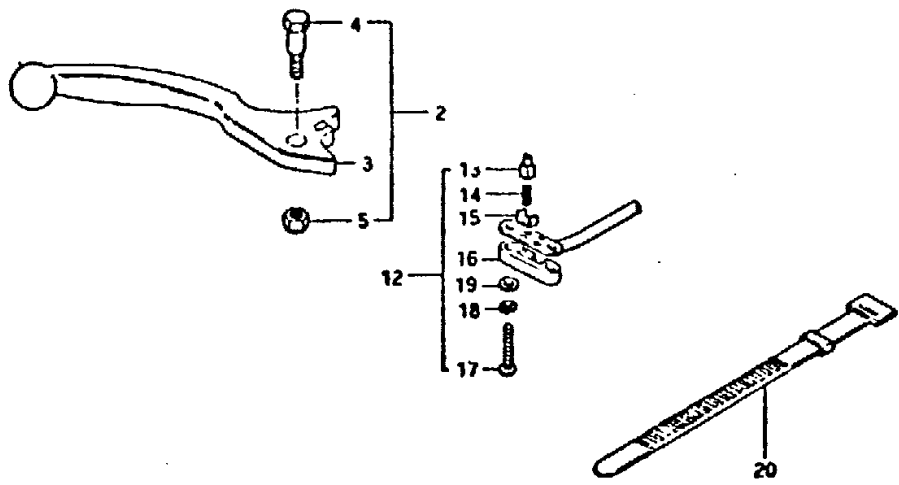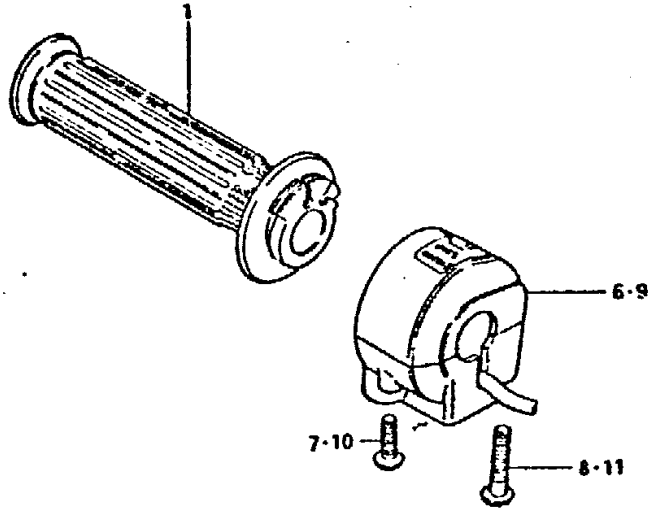


Ref No	Part No	Description
1	57211-45030	Grip, Lh
2	57500-49101	Lever Assy, Clutch
3	57620-49101	• . Lever, Clutch
4	57431-11011	• . Bolt
5	08319-21068	• . Nut
6	57441-11010	• . Adjuster, Cable
7	57442-11010	• . Nut
8	01107-06208	• . Bolt
9	37400-45210	Switch Assy, Handle Lh
10	02112-05258	• . Screw
11	57661-31000	Cover, Clutch Lever
12	58273-31000	Boot, Clutch Cable

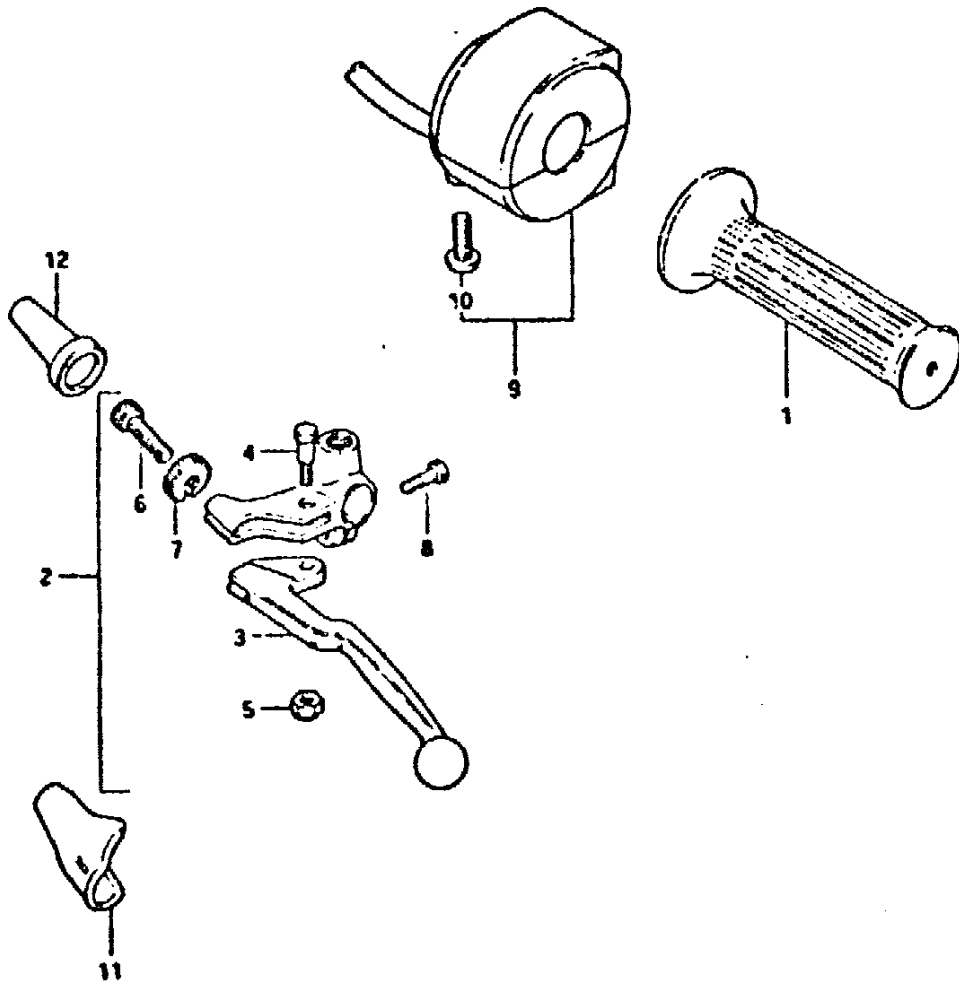


Ref No	Part No	Description
12	59100-44100	Caliper Assy, Front Rh
12	59300-44100	Caliper Assy, Front Lh
1	59301-45820	• . Piston Set
2	59107-18410	•• .. Seal, Piston
3	59308-45200	•• .. Boot, Piston
4	59301-45810	• . Pad Set
5	59371-45200	•• .. Shim
6	59100-44840	• . Holder Set, Calipers Rh
6	59300-44830	• . Holder Set, Calipers Lh
7	59316-45200	•• .. Guide, Pad
8	59315-45200	• . Spring, Pad
9	59305-45200	• . Axle No. 1
10	59306-45200	• . Axle No. 2
11	59312-45200	• . Boot
12	59314-45200	• . Bolt
13	59121-18410	• . Bleeder
14	59122-18410	• . Cap
15	59324-45200	• . Cover
16	01517-10408	Bolt

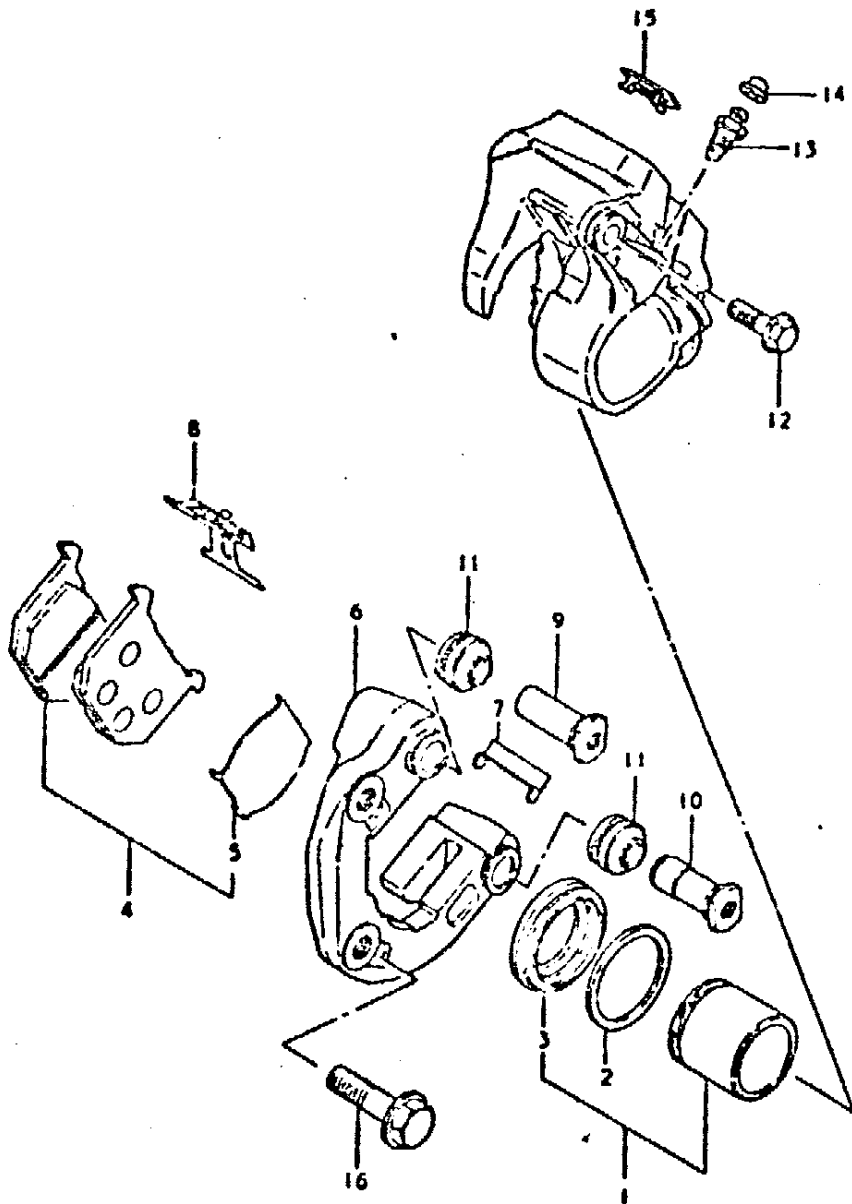


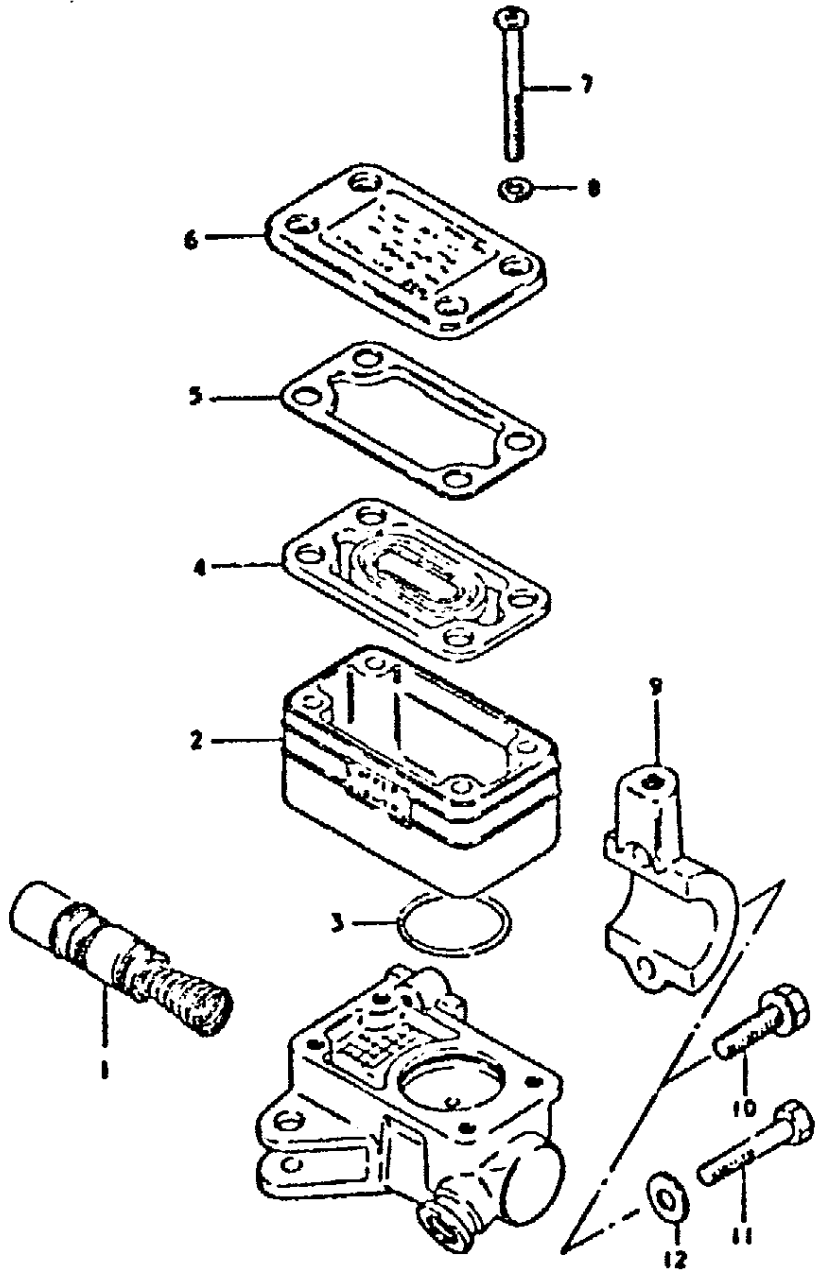

Ref No	Part No	Description
16	59600-45100	Cylinder Assy, Master
1	59600-45830	. Piston & Cup Set
2	59687-45100	. Reservoir
3	59686-45100	. O Ring
4	59667-45100	. Diaphragm
5	59668-45100	. Plate, Diaphragm
6	59669-45100	. Cap
7	59691-45100	. Screw
8	59692-45100	. Washer
9	59671-45100	. Holder
10	59693-45100	. Bolt

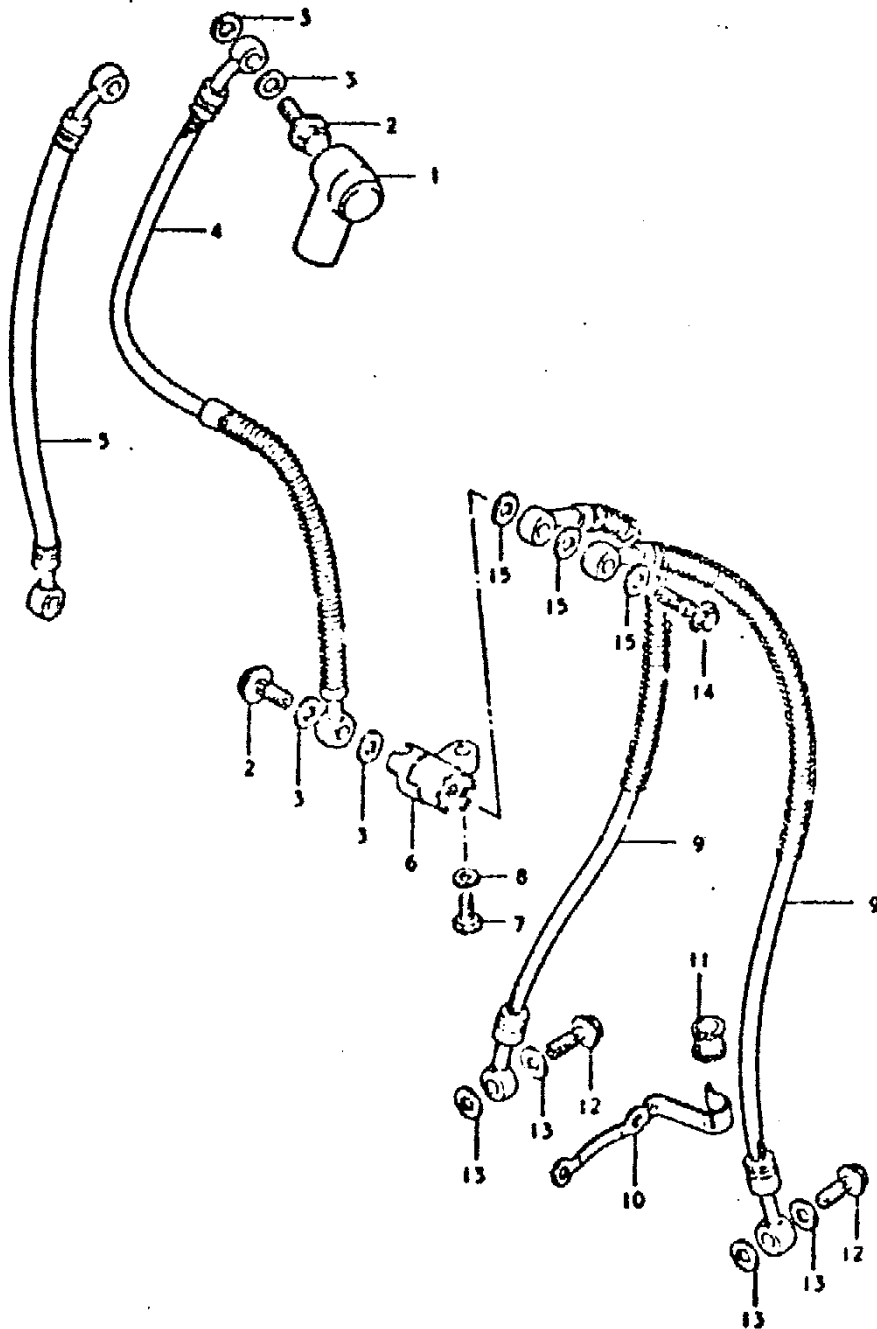



Ref No	Part No	Description
1	59711-49001	Boot, Master Cylinder
2	09360-10007	Union Bolt
3	09161-10005	Gasket
4	59480-45401	Hose, Brake No.1 (neutral Handlebar)
5	59480-45630	Hose, Brake No.1 (flat Handlebar)
6	59491-45000	Joint, Brake Hose
7	01107-06208	Bolt
8	08321-21068	Lock Washer
9	59240-45200	Hose, Brake No. 2
10	59268-49000	Clamp, Hose
11	59244-49000	Bushing
12	09360-10007	Union Bolt
13	09161-10005	Gasket
14	09360-10008	Union Bolt
15	09161-10005	Gasket

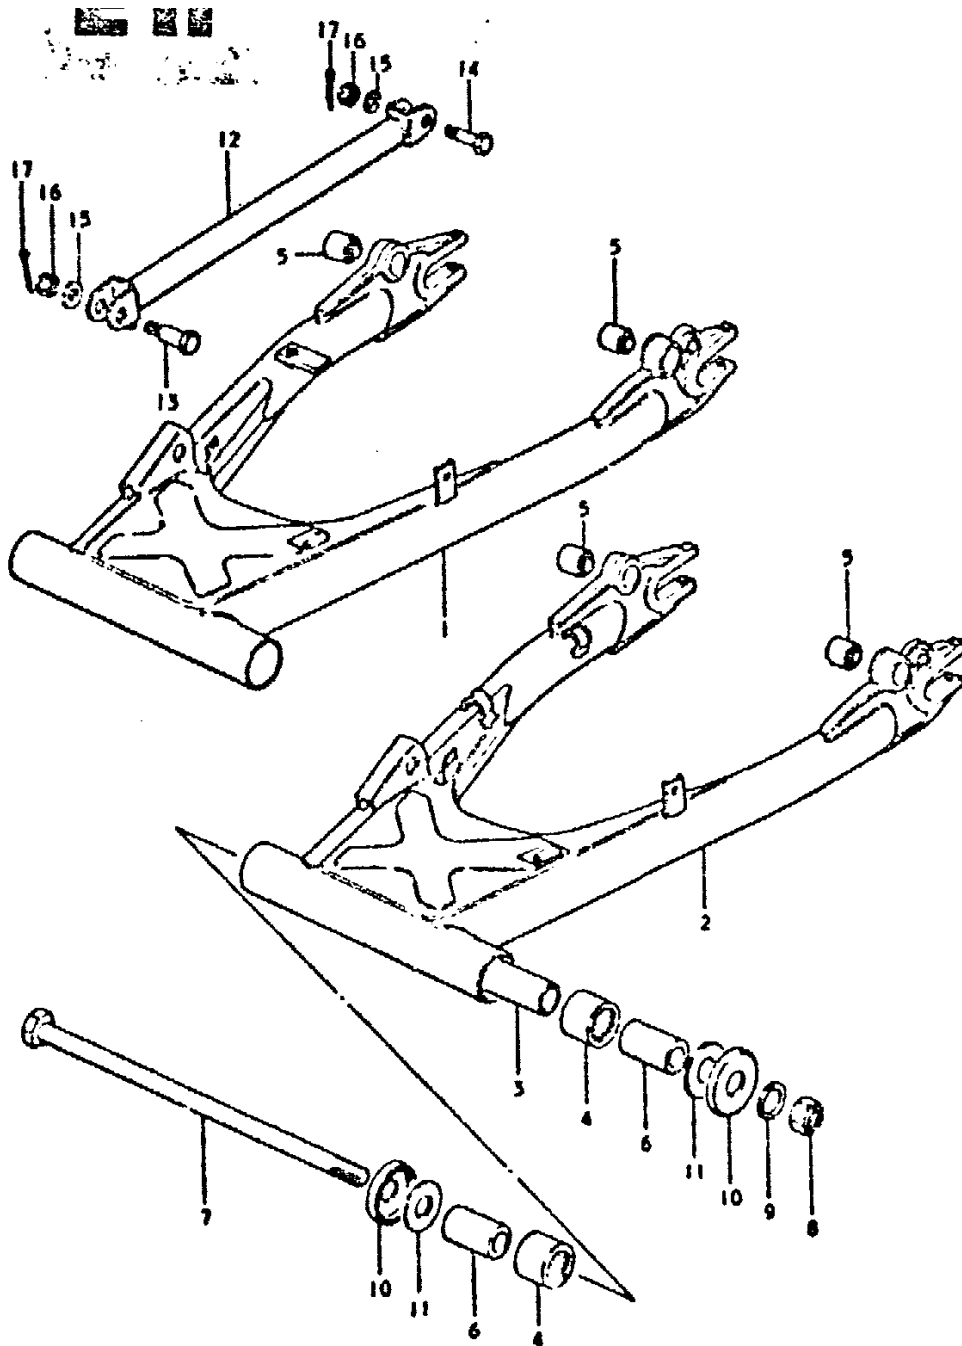

Ref No	Part No	Description
1	61100-45840-019	Rear Swinging Arm Set
2	61100-45841-019	Rear Swinging Arm Set
2	61100-45860-019	Rear Swinging Arm Set
3	61281-45001	. Spacer
4	09263-22017	. Bearing
5	09319-10008	. Bushing, Rear
6	61251-45001	. Spacer
7	61211-31001	Shaft, Pivot
7	61211-45400	Shaft, Pivot
8	08319-21148	Nut
9	08322-11148	Washer
10	61262-45002	Cover, Dust Seal
11	09160-14020	Washer
12	64310-49000-019	Torque Link, Rear
13	09111-10011	Bolt, Front
14	09101-10017	Bolt, Rear
15	08322-11108	Washer
16	08314-41108	Nut
17	04111-20208	Cotter Pin

Ref No	Part No	Description
1	61311-49001-019	Chain Case
1	61311-49002-019	Chain Case
2	61381-45000	Reinforcement, Chain Case
3	09100-06011	Bolt
4	09169-06010	Washer
5	01107-06258	Bolt
6	08321-21068	Lock Washer
7	01107-06108	Bolt, Front
8	09160-06028	Washer
9	09320-08005	Cushion
10	09180-06032	Spacer
11	62100-45732	Shock Absorber, Rear
11	62100-45410	Shock Absorber, Rear
12	08313-11108	Nut
13	08322-11128	Washer, Inner
14	09160-12012	Washer, Inner Rh
15	09160-10001	Washer, Outer
16	09160-10033	Washer, Outer
17	09104-10002	Bolt
18	08322-11108	Washer


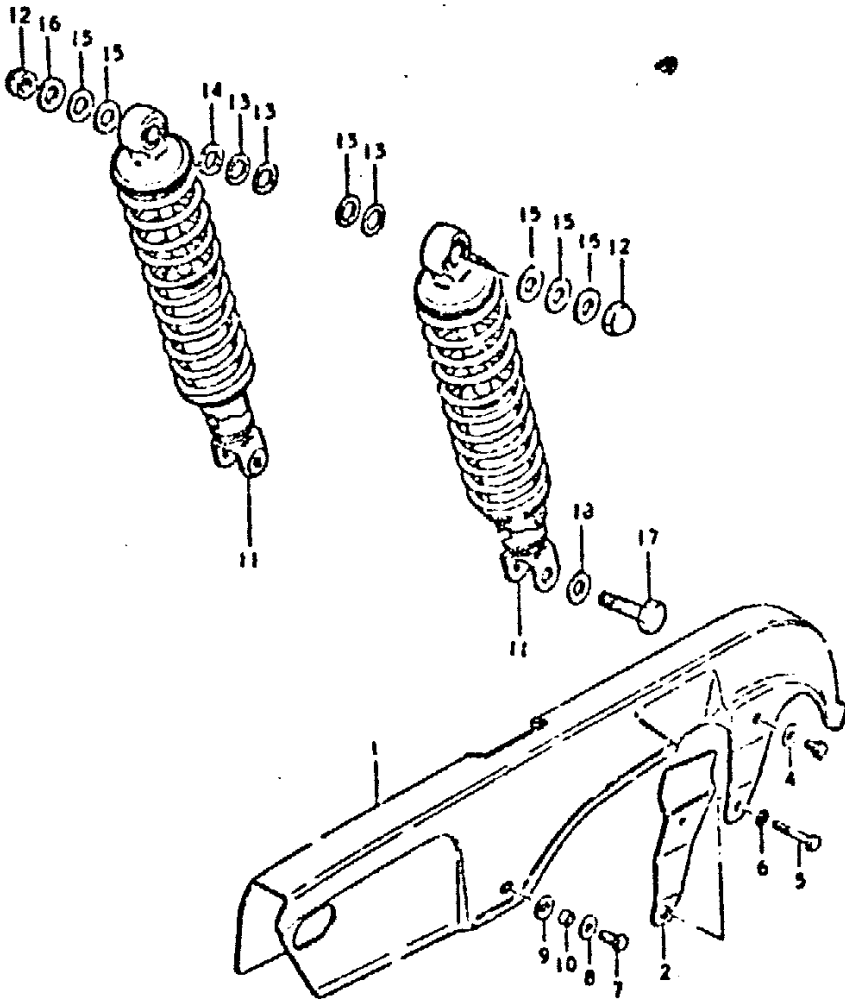


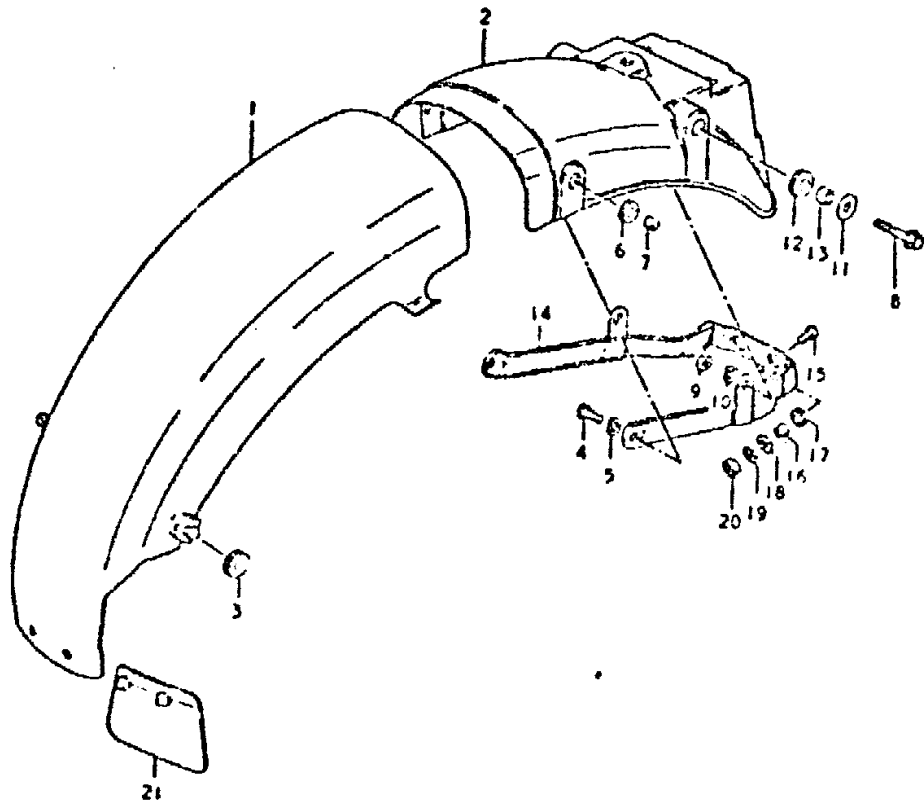


Ref No	Part No	Description
1	63112-49001	Body, Rear Fender Front
2	63113-45400-291	Body, Rear Fender Rear
3	09320-08013	Cushion
4	01107-06208	Bolt
5	08321-21068	Lock Washer
6	09320-08007	Cushion
7	09180-06038	Spacer (6.1*9*7.5)
8	01517-08358	Bolt
9	08310-12088	Nut
10	08321-21088	Lock Washer
11	09160-08032	Washer (8.5*26*1.2)
12	09320-12011	Cushion
13	09180-08021	Spacer (8.2*11.8*7.5)
14	63120-49000	Reinforcement, Rear Fender
15	02142-06207	Screw
16	09180-06011	Spacer (6.1*9*9)
17	09320-08013	Cushion
18	09160-06012	Washer (6.5*22*1.6)
19	08321-21068	Lock Washer
20	08310-11068	Nut
21	63411-31900	Mud Guard, Rear Fender




Ref No	Part No	Description
1	63311-49030	Extension, Rear Fender
2	09125-06009	Screw
3	09180-06001	Spacer
4	09160-06028	Washer
5	08321-21068	Lock Washer
6	08310-11068	Nut

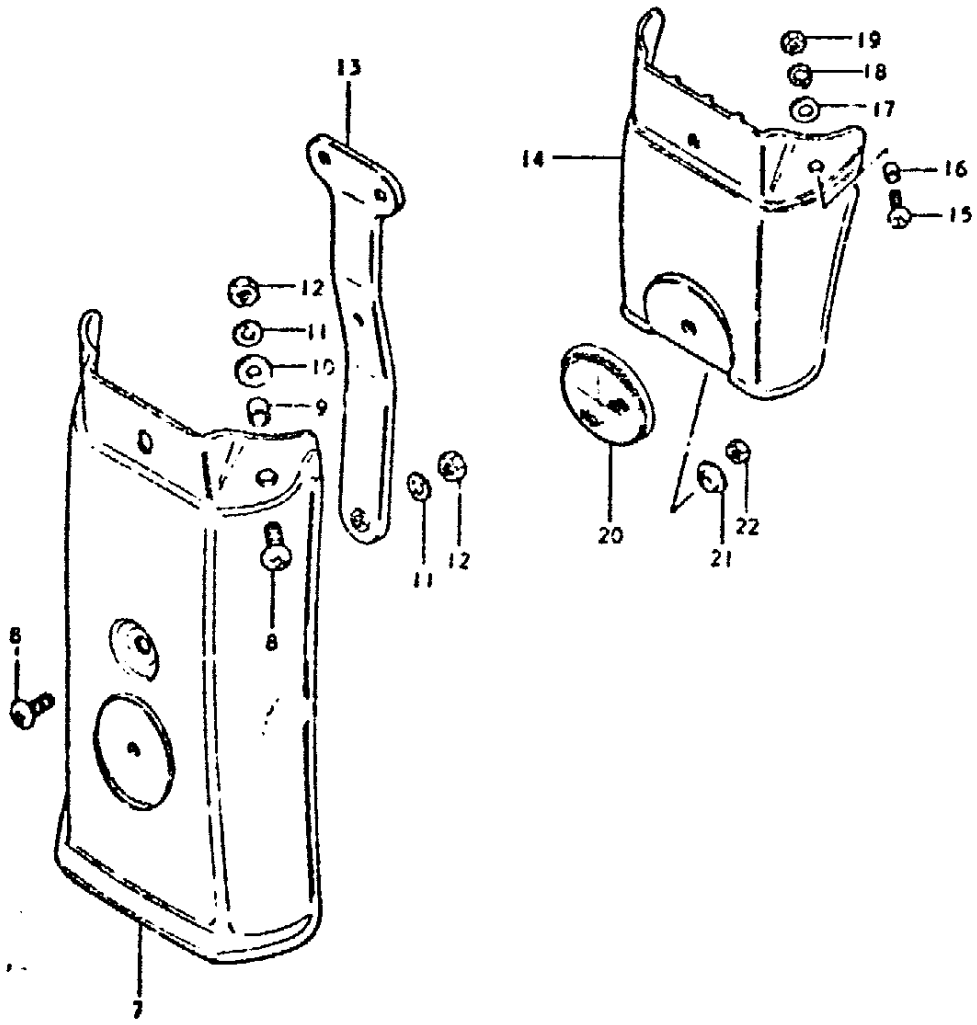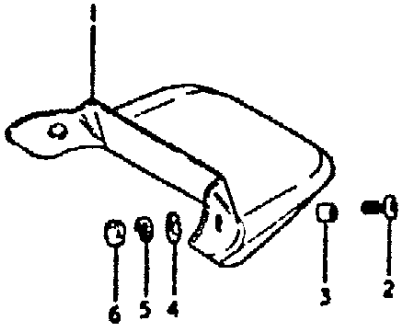

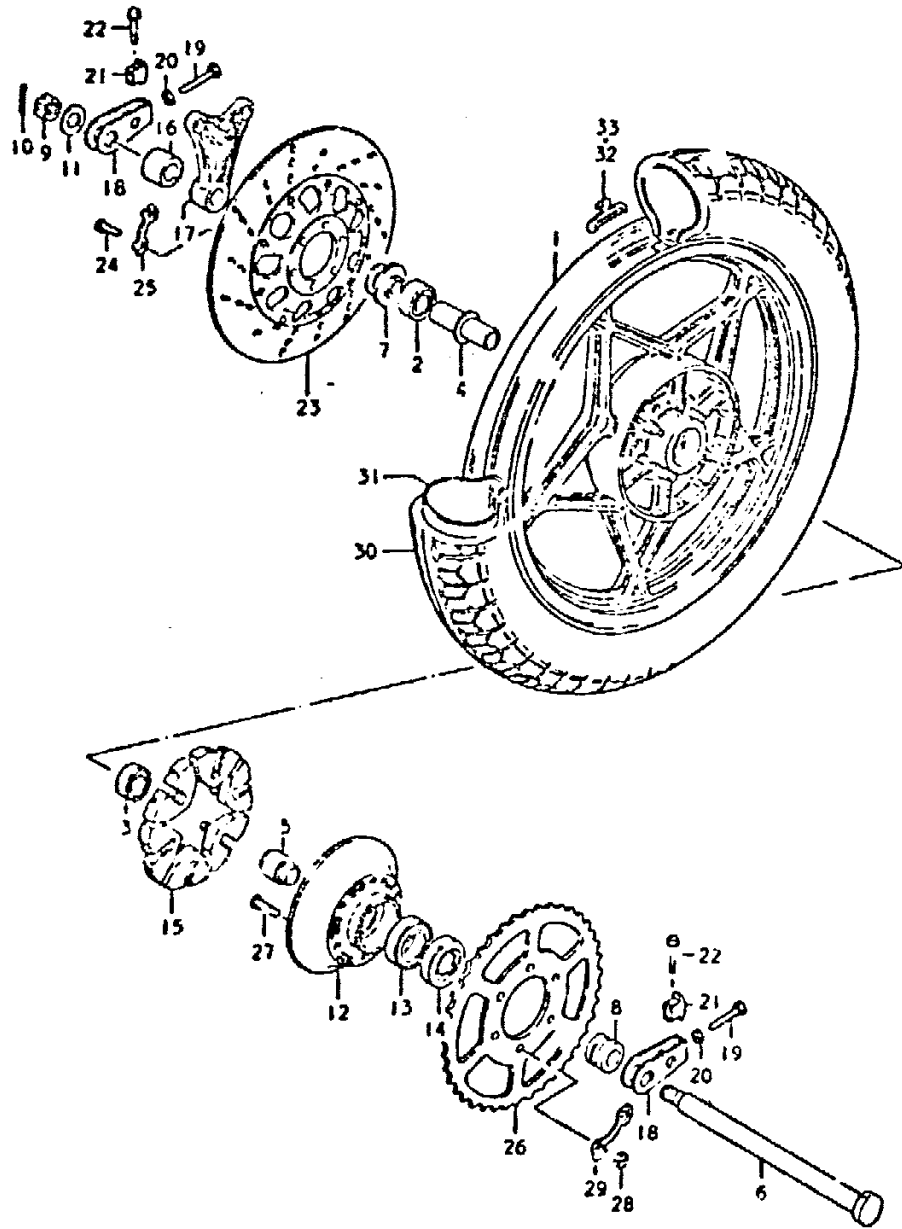


Ref No	Part No	Description
1	64111-47602	Wheel, Rear (2.15*18)
2	08133-62047	Bearing, Rh
3	08153-62047	Bearing, Lh
4	64731-45000	Spacer, Bearing
5	64733-31000	Holder, Bearing
6	64711-49000	Axle, Rear
7	64740-45001	Spacer, Rh
8	09180-20054	Spacer, Lh (20*33*28.3)
9	08314-31188	Nut
10	04111-40308	Cotter Pin
11	09160-19008	Washer (19*34*4)
12	64611-31001	Drum, Sprocket Mounting
13	08113-63050	Bearing
14	09285-33001	Oil Seal
15	64651-31000	Cushion
16	09180-20070	Spacer, Rh
17	69721-47011	Bracket, Rear Calipers
18	61410-31001	Adjuster, Chain
19	09104-08006	Bolt
20	08310-12088	Nut
21	61433-31000	Supporter, Chain Adjuster
22	01517-08408	Bolt
23	59210-18450	Disc, Rear Brake
24	09100-08094	Bolt (8*34)
25	09169-08016	Washer
26	64511-45001	Sprocket, Rear (nt:41)
27	09119-10002	Bolt
28	08310-12108	Nut
29	09169-10007	Washer
30	65100-45036	Tire (4.00h18)
30	65100-45620	Tire (4.00h18)
31	65200-49015	Tube, Inner
32	55411-47001	Balancer, S (20g)
33	55412-47001	Balancer, L (30g)


Ref No	Part No	Description
1	64110-45001	Hub, Rear Wheel
2	08123-62047	Bearing, Rh
3	08143-62047	Bearing, Lh
4	64730-45000	Spacer, Bearing
5	64733-31000	Holder, Bearing
6	64711-49000	Axle, Rear
7	64740-45001	Spacer, Rh
8	09180-20054	Spacer, Lh (20*33*28.3)
9	09180-20070	Spacer
10	08314-31188	Nut
11	04111-40308	Cotter Pin
12	09160-19008	Washer (19*34*4)
13	64171-45000	Cover, Hub
14	64611-31001	Drum, Sprocket Mounting
15	08113-63050	Bearing
16	09285-33001	Oil Seal
17	64651-31000	Cushion
18	64671-45000	Plate, Cushion
19	02112-05108	Screw
20	08321-21058	Lock Washer
21	69721-47011	Bracket, Rear Caripers
22	61410-31001	Adjuster, Chain
23	09104-08006	Bolt
24	08310-12088	Nut
25	61433-31000	Supporter, Chain Adjuster
26	01517-08408	Bolt
27	59210-18450	Disc, Rear Brake
28	09100-08094	Bolt (8*34)
29	09169-08016	Washer
30	64511-45001	Sprocket, Rear (nt:41)
31	09119-10002	Bolt
32	08310-12108	Nut
33	09169-10007	Washer
34	65100-45036	Tire (4.00h18)
34	65100-45620	Tire (4.00h18)
35	65200-49015	Tube, Inner
36	65261-15010	Protector (25*18)
37	65311-15021	Rim (2.15*18)
38	65300-45010	Spoke Set
39	55411-11000	Balancer (20g)
40	55412-11000	Balancer (20g)

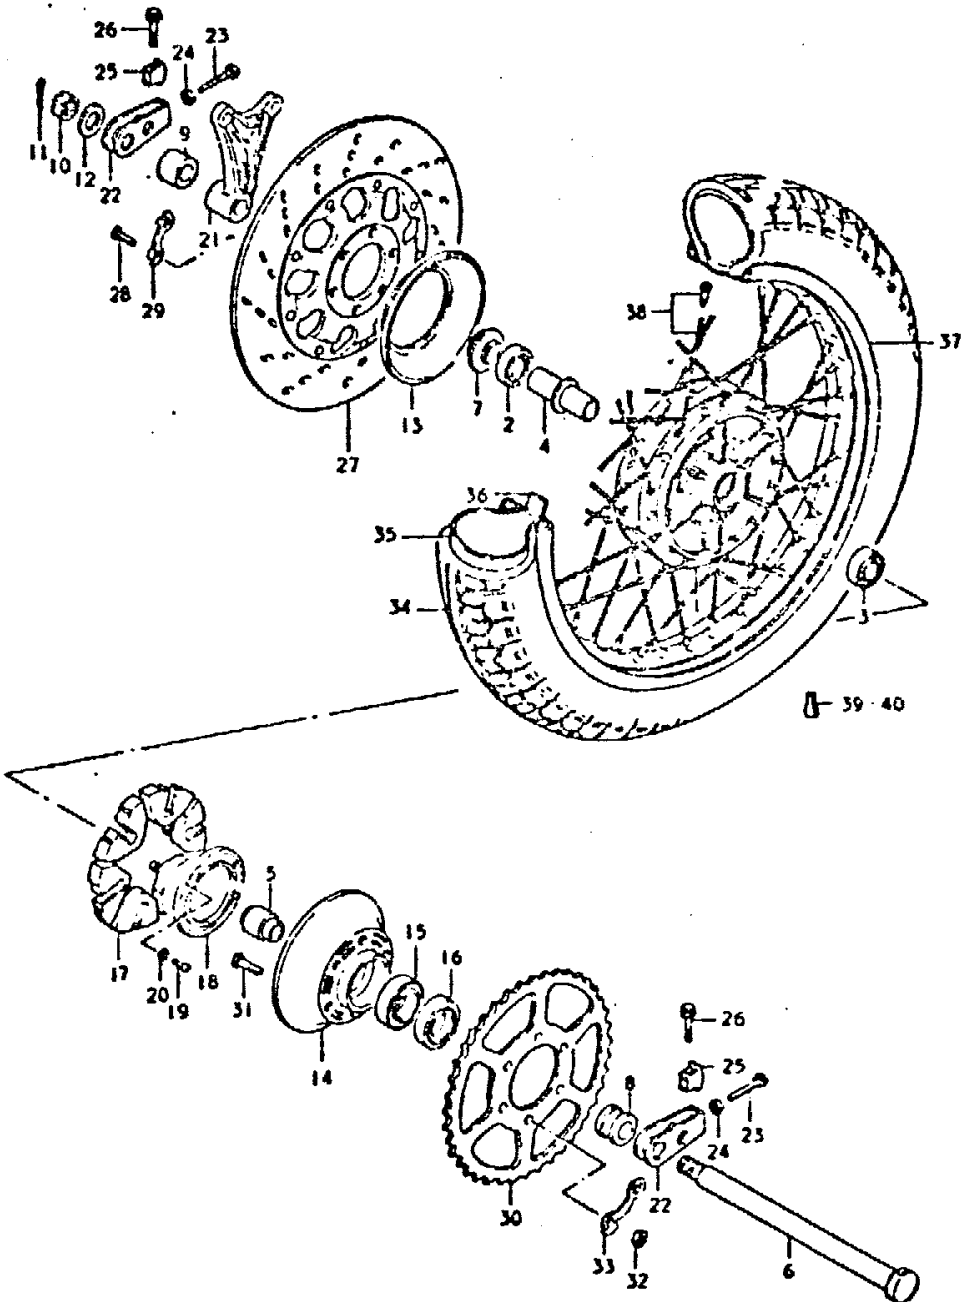


GSX750EX

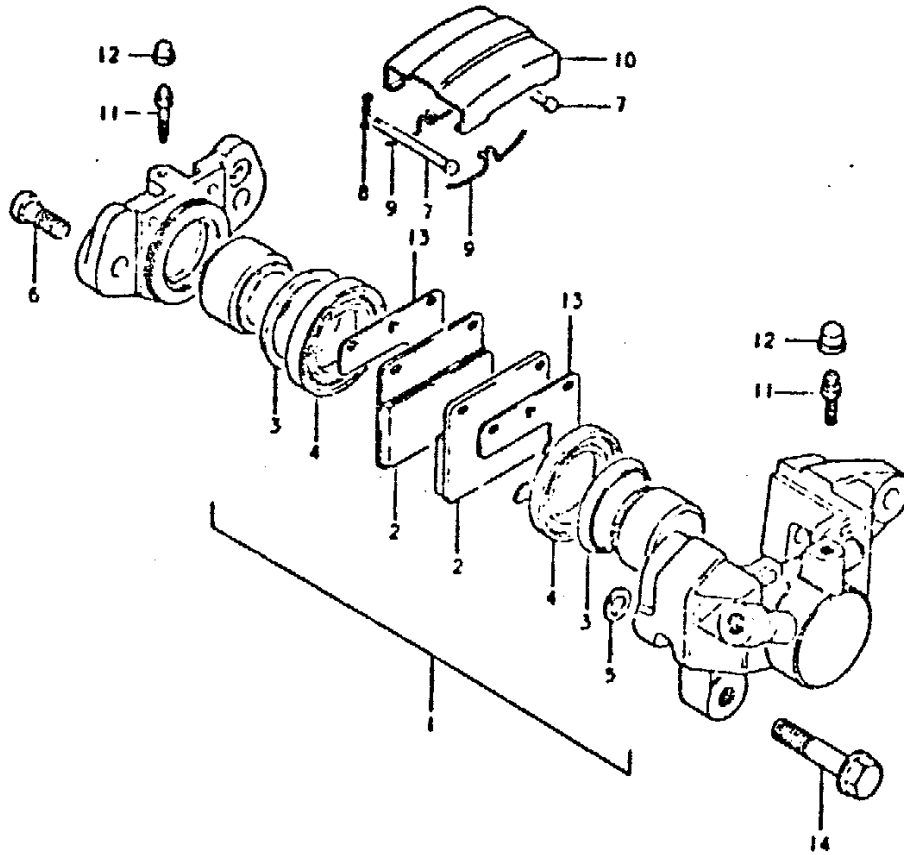


Ref No	Part No	Description
40	69100-45020	Calipers Assy, Rear
1	69100-45850	• . Piston & Pad Set
2	69130-45020	•• .. Pad
3	59107-18410	•• .. Seal, Piston
4	69108-45000	•• .. Boot, Piston
5	69107-45000	•• .. Seal, Piston
6	69145-45000	• . Bolt, Housing
7	69141-45000	• . Pin
8	69142-45000	• . Clip
9	69143-45001	• . Spring
10	69151-45000	• . Dust Cover
11	59121-18410	• . Bleeder
12	59122-18410	• . Cap
13	69152-45001	• . Shim
14	01527-10305	Bolt

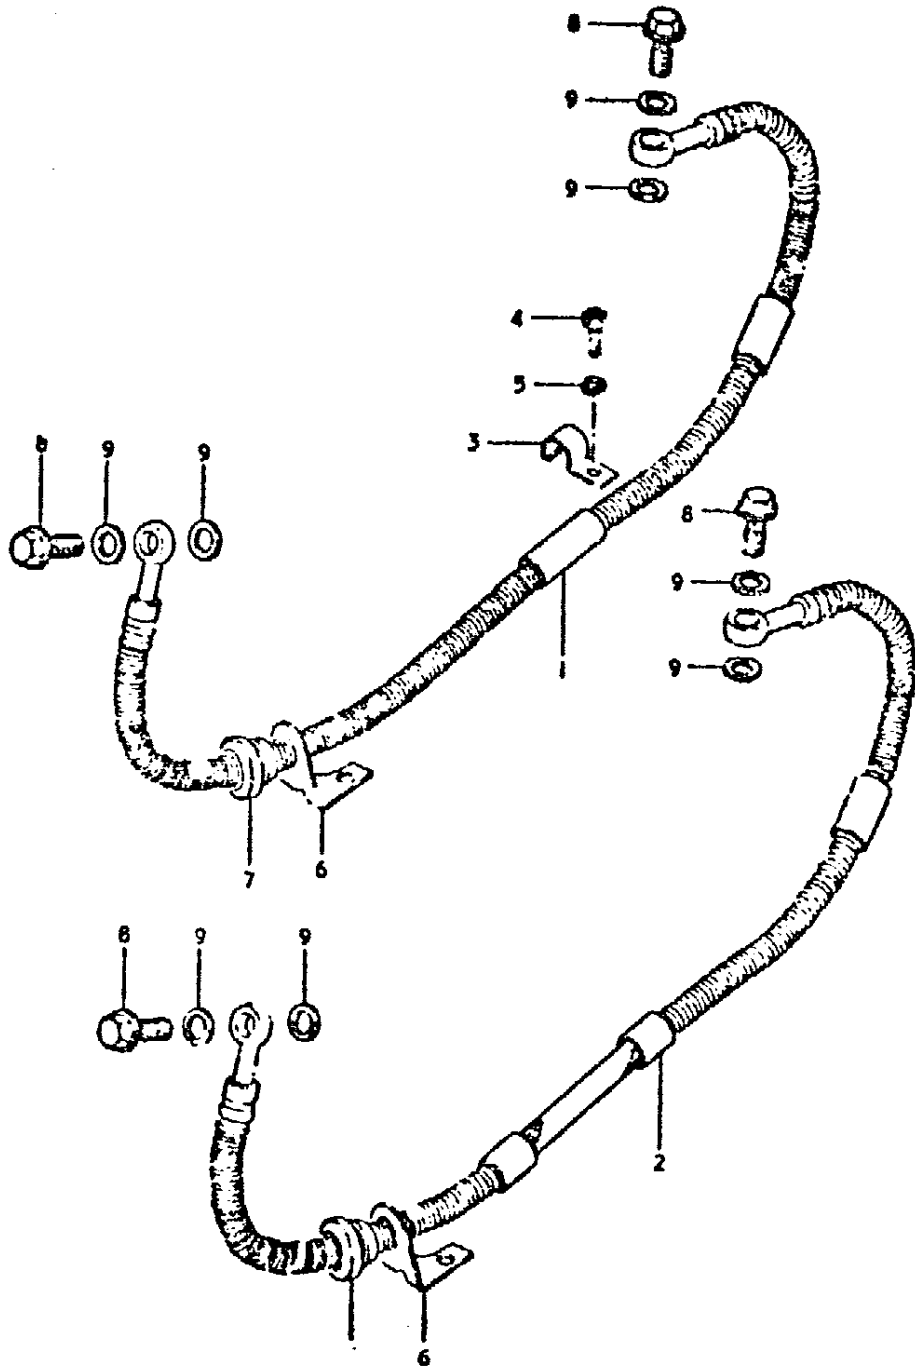

Ref No	Part No	Description
1	69480-49002	Hose, Rear Brake No. 1
2	69480-49003	Hose, Rear Brake No. 1
3	69268-49000	Clamp
4	09128-06013	Bolt
5	08321-21068	Lock Washer
6	69243-47000	Guide, Brake Hose
7	59244-36200	Grommet, Hose Guide
8	09360-10007	Union Bolt
9	09161-10005	Gasket

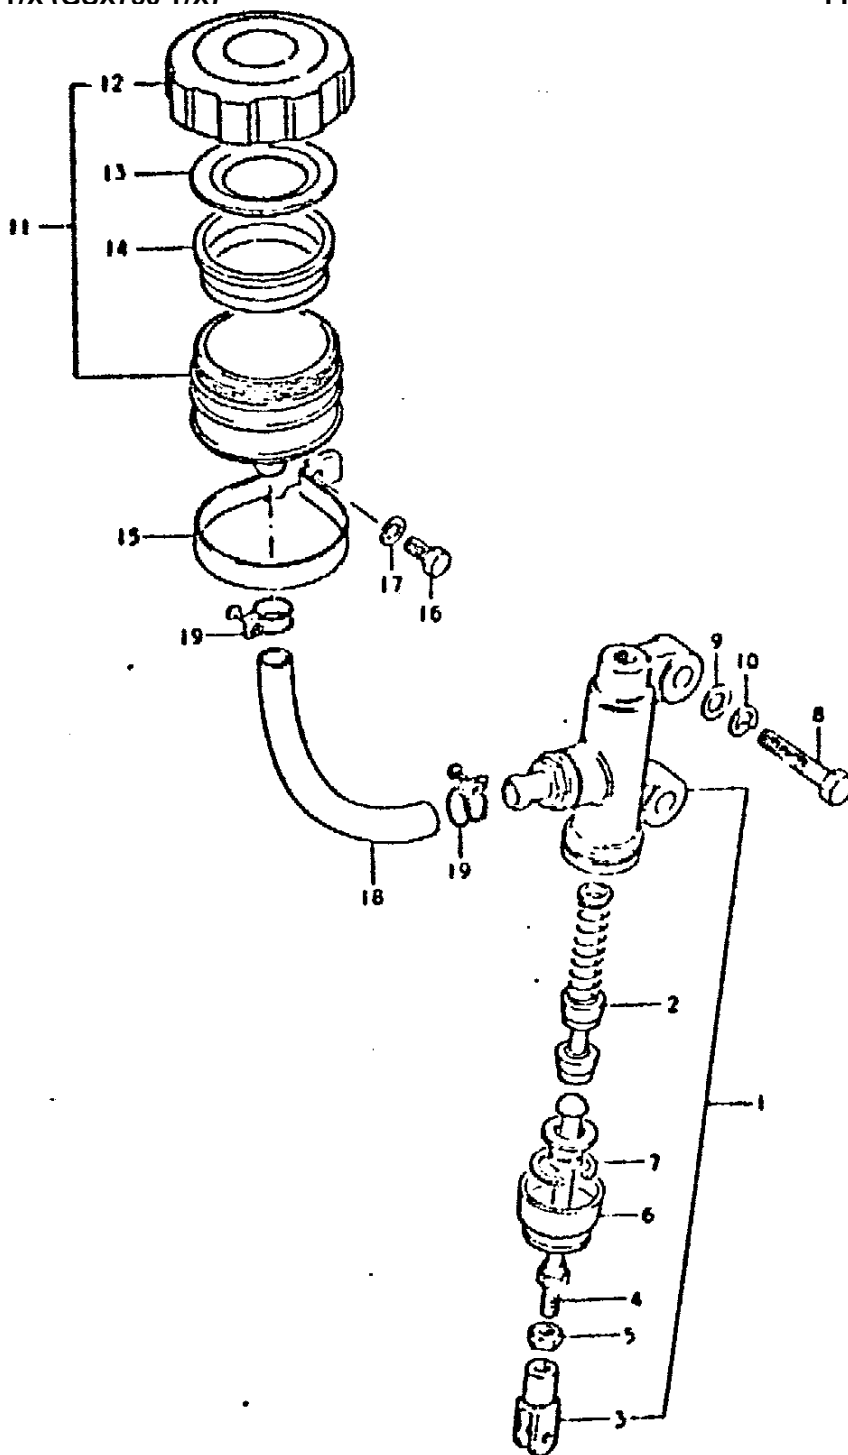

Ref No	Part No	Description
1	69600-47001	Cylinder Assy, Rear Master
2	69600-45810	• . Piston & Cup Set
3	69692-45001	• . Yoke
4	69670-45000	• . Rod, Push
5	08310-12088	• . Nut
6	69691-45001	• . Boot
7	51162-70040	• . Circlip
8	01107-08308	Bolt
9	08322-11088	Washer
10	08321-21088	Lock Washer
11	69740-47001	Reservoir Tank Assy
12	59669-33621	• . Cap
13	59668-18441	• . Plate, Diaphragm
14	59667-18441	• . Diaphragm
15	09402-51601	Clamp
16	01107-06168	Bolt
17	08321-21068	Lock Washer
18	69731-49000	Hose
19	09400-16301	Clamp

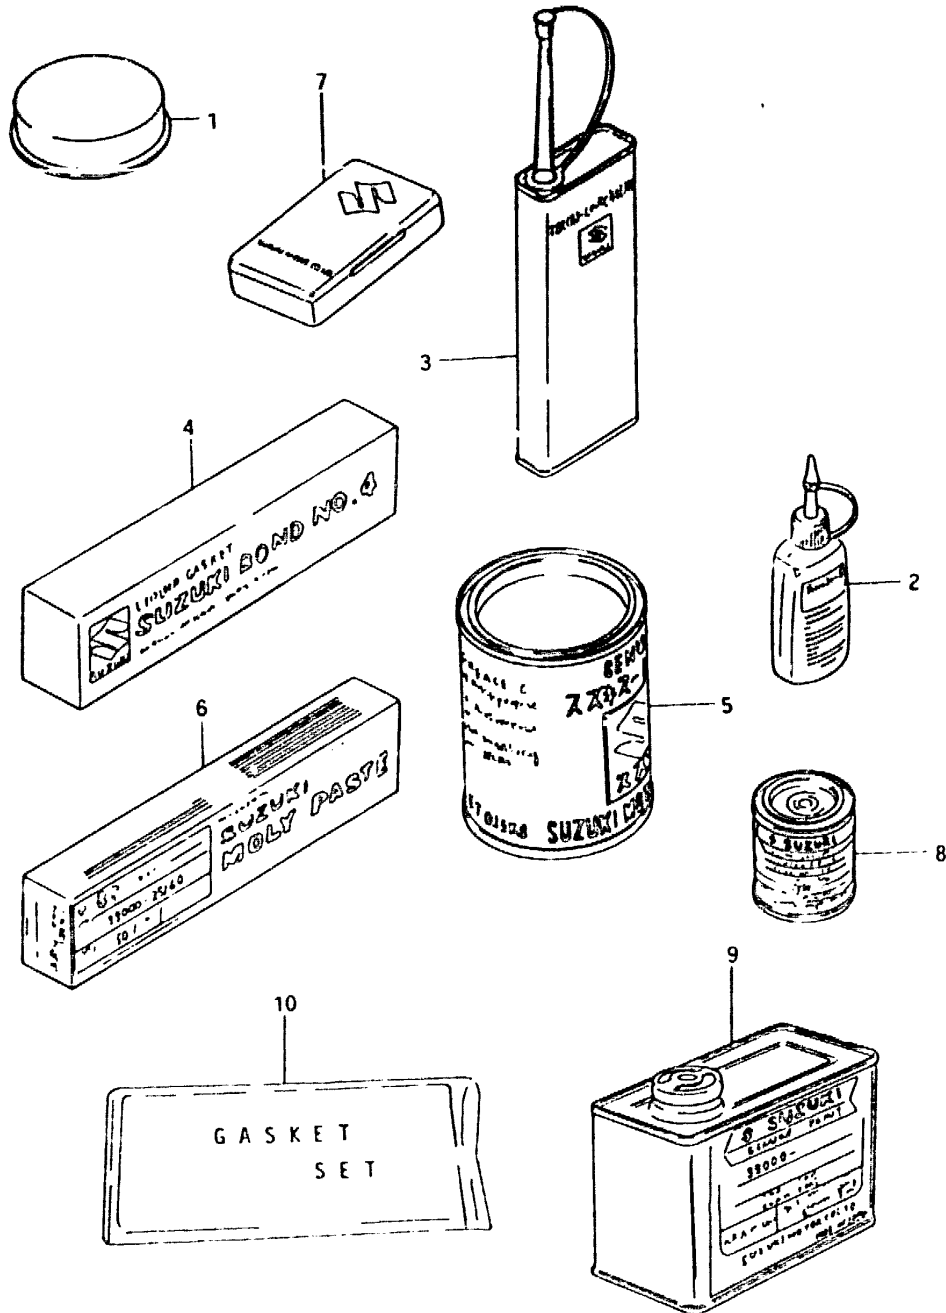

Ref No	Part No	Description
1	99000-25110	Brake Pad Grease
2	99000-32030	Thread Lock Super
2	99000-32090	Thread Lock Super
3	99000-32040	Thread Lock Cement
4	99000-31030	Suzuki Bond No.4
5	99000-25030	Suzuki Super Grease
6	99000-25140	Suzuki Moly Paste
7	09826-00001	Tube Repairing Tool
8	99000-10109-019	Paint (black)
8	99000-10109-291	Paint (black, Semi-gloss)
8	99000-10109-064	Paint (pure White)
8	99000-10209-08E	Paint (pearl Black)
8	99000-10209-05L	Paint (candy Imperial Maroon)
8	99000-10209-04Y	Paint (space Blue Metallic)
9	99000-10105-019	Paint (black)
9	99000-10105-291	Paint (black, Semi-gloss)
9	99000-10105-064	Paint (pure White)
9	99000-10205-08E	Paint (pearl Black)
9	99000-10205-05L	Paint (candy Imperial Maroon)
9	99000-10205-04Y	Paint (space Blue Metallic)
10	11400-45853	Gasket Set